

GRAPHIC OPERATION TERMINAL

GOT2000 Series

Connection Manual (Non-Mitsubishi Products 1)

For GT Works3 Version1



- ■IAI ROBOT CONTROLLER
- ■AZBIL (former YAMATAKE) CONTROL **EQUIPMENT**
- **■**OMRON PLC
- ■OMRON TEMPERATURE CONTROLLER ■TOSHIBA PLC
- **■**KEYENCE PLC
- **■**KOYO EI PLC
- **■JTEKT PLC**
- **■SHARP PLC**

- ■SHINKO TECHNOS INDICATING CONTROLLER
- **■**CHINO CONTROLLER
- **■**TOSHIBA MACHINE PLC
- ■PANASONIC SERVO AMPLIFIER
- ■PANASONIC INDUSTRIAL DEVICES SUNX PLC



(Always read these precautions before using this equipment.)

Before using this product, please read this manual and the relevant manuals introduced in this manual carefully and pay full attention to safety to handle the product correctly.

The precautions given in this manual are concerned with this product.

In this manual, the safety precautions are ranked as "WARNING" and "CAUTION".

∴ WARNING

Indicates that incorrect handling may cause hazardous conditions, resulting in death or severe injury.

A CAUTION

Indicates that incorrect handling may cause hazardous conditions, resulting in medium or slight personal injury or physical damage.

Note that the <u>\hat{\frac{1}{2}}</u> caution level may lead to a serious accident according to the circumstances. Always follow the instructions of both levels because they are important to personal safety.

Please save this manual to make it accessible when required and always forward it to the end user.

[DESIGN PRECAUTIONS]

WARNING

- Some failures of the GOT, communication unit or cable may keep the outputs on or off.
 Some failures of a touch panel may cause malfunction of the input objects such as a touch switch.
 An external monitoring circuit should be provided to check for output signals which may lead to a serious accident. Not doing so can cause an accident due to false output or malfunction.
- Do not use the GOT as the warning device that may cause a serious accident.
 An independent and redundant hardware or mechanical interlock is required to configure the device that displays and outputs serious warning.
 - Failure to observe this instruction may result in an accident due to incorrect output or malfunction.
- When the GOT backlight has a failure, the GOT status will be as follows. Failure to observe this
 instruction may result in an accident due to incorrect output or malfunction.
 - GT27, GT25, GT23
 When the GOT backlight has a failure, the POWER LED blinks (orange/blue) and the display section dims. In such a case, the input by the touch switch(s) is disabled.
 - GT21
 When the GOT backlight has a failure, the display section dims. In such a case, the input by the touch switches is disabled.

Even if the display section dims on the liquid crystal of the GOT, the input by the touch switch(s) may remain enabled. This may cause a malfunction of the touch switch.

For example, if an operator assumes that the display section has dimmed because of the screen save function and touches the display section to cancel the screen save, a touch switch may be activated.

The GOT backlight failure can be checked with a system signal of the GOT.

[DESIGN PRECAUTIONS]

WARNING

- The display section of the GOT is an analog-resistive type touch panel.
 - When multiple points of the display section are touched simultaneously, an accident may occur due to incorrect output or malfunction.
 - GT27

Do not touch three points or more simultaneously on the display section. Doing so may cause an accident due to an incorrect output or malfunction.

- GT25, GT23, GT21
 - Do not touch two points or more simultaneously on the display section. Doing so may operate the switch located around the center of the touched point, or may cause an accident due to an incorrect output or malfunction.
- When programs or parameters of the controller (such as a PLC) that is monitored by the GOT are changed, be sure to reset the GOT, or turn on the unit again after shutting off the power as soon as possible.
 - Not doing so can cause an accident due to false output or malfunction.
- If a communication fault (including cable disconnection) occurs during monitoring on the GOT, communication between the GOT and PLC CPU is suspended and the GOT becomes inoperative.

For bus connection (GT27, GT25 Only): The CPU becomes faulty and the GOT becomes inoperative.

For other than bus connection : The GOT becomes inoperative.

A system where the GOT is used should be configured to perform any significant operation to the system by using the switches of a device other than the GOT on the assumption that a GOT communication fault will occur.

Not doing so can cause an accident due to false output or malfunction.

[DESIGN PRECAUTIONS]

! CAUTION

- Do not bundle the control and communication cables with main-circuit, power or other wiring.
 Run the above cables separately from such wiring and keep them a minimum of 100mm apart.
 Not doing so noise can cause a malfunction.
- Do not press the GOT display section with a pointed material as a pen or driver.
 Doing so can result in a damage or failure of the display section.
- When a GOT2000 series model and a GOT1000 series model are on an Ethernet network, do not set the IP address 192.168.0.18 for the GOTs and the controllers on this network.
 Doing so can cause IP address duplication at the GOT startup, adversely affecting the communication of the device with the IP address 192.168.0.18.

The operation at the IP address duplication depends on the devices and the system.

- Turn on the controllers and the network devices to be ready for communication before they communicate with the GOT.
 - Failure to do so can cause a communication error on the GOT.
- When the GOT is subject to shock or vibration, or some colors appear on the screen of the GOT, the screen of the GOT might flicker.

[MOUNTING PRECAUTIONS]

WARNING

- Be sure to shut off all phases of the external power supply used by the system before mounting or removing the GOT main unit to/from the panel.
 - Not doing so can cause the unit to fail or malfunction.
- Be sure to shut off all phases of the external power supply used by the system before mounting or removing the option unit onto/from the GOT. (GT27, GT25 Only)

[MOUNTING PRECAUTIONS]

CAUTION

- Use the GOT in the environment that satisfies the general specifications described in this manual. Not doing so can cause an electric shock, fire, malfunction or product damage or deterioration.
- When mounting the GOT to the control panel, tighten the mounting screws in the specified torque range with a Phillips-head screwdriver No.2.
 - GT27, GT25, GT23
 Specified torque range (0.36 N•m to 0.48 N•m)
 - GT21

Specified torque range (0.20 N•m to 0.25 N•m)

Undertightening can cause the GOT to drop, short circuit or malfunction.

Overtightening can cause a drop, short circuit or malfunction due to the damage of the screws or the GOT.

- When mounting a unit on the GOT, tighten the mounting screws in the following specified torque range.
 - GT27, GT25

When loading the communication unit or option unit other than wireless LAN unit to the GOT, fit it to the connection interface of the GOT and tighten the mounting screws in the specified torque range (0.36 N•m to 0.48 N•m) with a Phillips-head screwdriver No.2.

When loading the wireless LAN unit to the GOT, fit it to the side interface of GOT and tighten the mounting screws in the specified torque range (0.10 N•m to 0.14 N•m) with a Phillips-head screwdriver No.1.

When the GOT is installed vertically, its side interface is positioned on the bottom. To prevent the falling of the wireless LAN communication unit from the side interface, install or remove the unit while holding it with hands.

• GT21

When mounting the SD card unit on the GOT, fit it to the side of the GOT and tighten the tapping screws in the specified torque range (0.3 N•m to 0.6 N•m) with a Phillips-head screwdriver No.2. Under tightening can cause the GOT to drop, short circuit or malfunction.

Overtightening can cause a drop, failure or malfunction due to the damage of the screws or unit.

- When closing the USB environmental protection cover, fix the cover to the GOT by pushing the [PUSH] mark on the latch firmly to comply with the protective structure.(GT27, GT25 Only)
- Remove the protective film of the GOT.
 - When the user continues using the GOT with the protective film, the film may not be removed. In addition, for the models equipped with the human sensor function, using the GOT with the protective film may cause the human sensor not to function properly
- Operate and store the GOT in environments without direct sunlight, high temperature, dust, humidity, and vibrations.
- When using the GOT in the environment of oil or chemicals, use the protective cover for oil.
 Failure to do so may cause failure or malfunction due to the oil or chemical entering into the GOT.

IWIRING PRECAUTIONS1

∱WARNING

• Be sure to shut off all phases of the external power supply used by the system before wiring. Failure to do so may result in an electric shock, product damage or malfunctions.

[WIRING PRECAUTIONS]

CAUTION

- Make sure to ground the FG terminal and LG terminal of the GOT power supply section to the protective ground conductors dedicated to the GOT with a ground resistance of 100 Ω or less. (GT21 does not have the LG terminal.)
- When tightening the terminal screws, use a Phillips-head screwdriver No.2.
- Tighten the terminal screws of the GOT power supply section in the following specified torque range.
 - GT27, GT25, GT23
 Specified torque range (0.5 N•m to 0.8 N•m)
- For a terminal processing of a wire to the GOT power supply section, use the following terminal.
 - GT27, GT25, GT23
 - Use applicable solderless terminals for terminal processing of a wire and tighten them with the specified torque.
 - Not doing so can cause a fire, failure or malfunction.
 - GT21
 - Connect a stranded wire or a single wire directly, or use a rod terminal with an insulation sleeve.
- Correctly wire the GOT power supply section after confirming the rated voltage and terminal arrangement of the product.
 - Not doing so can cause a fire or failure.
- Tighten the terminal screws of the GOT power supply section in the following specified torque range.
 - GT27, GT25, GT23
 Specified torque range (0.5 N•m to 0.8 N•m)
 - GT21
 - Specified torque range (0.22 N•m to 0.25 N•m)
- Exercise care to avoid foreign matter such as chips and wire offcuts entering the GOT.
 Not doing so can cause a fire, failure or malfunction.
- The module has an ingress prevention label on its top to prevent foreign matter, such as wire offcuts, from entering the module during wiring.
 - Do not peel this label during wiring. Before starting system operation, be sure to peel this label because of heat dissipation. (GT27, GT25 Only)
- Plug the communication cable into the GOT interface or the connector of the connected unit, and tighten the mounting screws and the terminal screws in the specified torque range.
 - Undertightening can cause a short circuit or malfunction.
 - Overtightening can cause a short circuit or malfunction due to the damage of the screws or unit.
- Plug the QnA/ACPU/Motion controller (A series) bus connection cable by inserting it into the connector of the connected unit until it "clicks".
 - After plugging, check that it has been inserted snugly.
 - Not doing so can cause a malfunction due to a contact fault. (GT27, GT25 Only)

[TEST OPERATION PRECAUTIONS]

WARNING

 Before performing the test operations of the user creation monitor screen (such as turning ON or OFF bit device, changing the word device current value, changing the settings or current values of the timer or counter, and changing the buffer memory current value), read through the manual carefully and make yourself familiar with the operation method.

During test operation, never change the data of the devices which are used to perform significant operation for the system.

False output or malfunction can cause an accident.

[STARTUP/MAINTENANCE PRECAUTIONS]

/ WARNING

- When power is on, do not touch the terminals.
 - Doing so can cause an electric shock or malfunction.
- Correctly connect the battery connector.
 - Do not charge, disassemble, heat, short-circuit, solder, or throw the battery into the fire.
 - Doing so will cause the battery to produce heat, explode, or ignite, resulting in injury and fire.
- Before starting cleaning or terminal screw retightening, always switch off the power externally in all phases.
 - Not switching the power off in all phases can cause a unit failure or malfunction.
 - Undertightening can cause a short circuit or malfunction.
 - Overtightening can cause a short circuit or malfunction due to the damage of the screws or unit.

[STARTUP/MAINTENANCE PRECAUTIONS]

CAUTION

- Do not disassemble or modify the unit.
 - Doing so can cause a failure, malfunction, injury or fire.
- Do not touch the conductive and electronic parts of the unit directly.
 Doing so can cause a unit malfunction or failure.
- The cables connected to the unit must be run in ducts or clamped.
 Not doing so can cause the unit or cable to be damaged due to the dangling, motion or accidental pulling of the cables or can cause a malfunction due to a cable connection fault.
- When unplugging the cable connected to the unit, do not hold and pull from the cable portion.
 Doing so can cause the unit or cable to be damaged or can cause a malfunction due to a cable connection fault.
- Do not drop the module or subject it to strong shock. A module damage may result.
- Do not drop or give an impact to the battery mounted to the unit.
 Doing so may damage the battery, causing the battery fluid to leak inside the battery.
 If the battery is dropped or given an impact, dispose of it without using.
- Before touching the unit, always touch grounded metals, etc. to discharge static electricity from human body, etc.
 - Not doing so can cause the unit to fail or malfunction.
- Use the battery manufactured by Mitsubishi Electric Corporation.
 Use of other batteries may cause a risk of fire or explosion.
- Dispose of used battery promptly.
 Keep away from children.Do not disassemble and do not dispose of in fire.
- Be sure to shut off all phases of the external power supply before replacing the battery or using the dip switch of the terminating resistor.
 - Not doing so can cause the unit to fail or malfunction by static electricity.

[TOUCH PANEL PRECAUTIONS]

! CAUTION

- For the analog-resistive film type touch panels, normally the adjustment is not required.
 However, the difference between a touched position and the object position may occur as the period of use elapses.
 - When any difference between a touched position and the object position occurs, execute the touch panel calibration.
- When any difference between a touched position and the object position occurs, other object may be activated.
 - This may cause an unexpected operation due to incorrect output or malfunction.

[PRECAUTIONS WHEN THE DATA STORAGE IS IN USE]

WARNING

• If the SD card is removed from drive A of the GOT while being accessed by the GOT, the GOT may stop processing data for about 20 seconds.

The GOT cannot be operated during this period.

The functions that run in the background including a screen updating, alarm, logging, scripts, and others are also interrupted.

Remove the SD card after checking the following items.

• GT27, GT25, GT23

After checking the light off of SD card access LED, remove the SD card.

• GT21

After disabling SD card access on the utility screen of the GOT and checking that the SD card access LED is off, remove the SD card.

CAUTION

• If the data storage is removed from the GOT while being accessed by the GOT, the data storage and files may be damaged.

Before removing the data storage from the GOT, check the SD card access LED, system signal, or others to make sure that the data storage is not accessed.

- Turning off the GOT while it accesses the SD card results in damage to the SD card and files.
- When using the GOT with an SD card inserted, check the following items.
 - GT27, GT25, GT23

When inserting a SD card into the GOT, make sure to close the SD card cover.

Failure to do so causes the data not to be read or written.

• GT21

When using an SD card connected to the SD card unit or the GOT, enable the SD card access in the GOT utility in advance.

Failure to do so causes the data not to be read or written.

• When removing the SD card from the GOT, make sure to support the SD card by hand as it may pop out.

Failure to do so may cause the SD card to drop from the GOT, resulting in a failure or break.

 When inserting a USB device into a USB interface of the GOT, make sure to insert the device into the interface firmly.

Failure to do so may cause the USB device to drop from the GOT, resulting in a failure or break.

Before removing the USB device from the GOT, follow the procedure for removal on the utility screen
of the GOT.

After the successful completion dialog is displayed, remove the USB device by hand carefully. Failure to do so may cause the USB device to drop from the GOT, resulting in a failure or break.

[PRECAUTIONS FOR REMOTE CONTROL]

! WARNING

 Remote control is available through a network by using GOT functions, including theSoftGOT-GOT link function, the remote personal computer operation function, the VNC server function, and the GOT Mobile function.

If these functions are used to perform remote control of control equipment, the field operator may not notice the remote control, possibly leading to an accident.

In addition, a communication delay or interruption may occur depending on the network environment, and remote control of control equipment cannot be performed normally in some cases. Before using the above functions to perform remote control, fully grasp the circumstances of the field site and ensure safety.

[DISPOSAL PRECAUTIONS]

CAUTION

When disposing of this product, treat it as industrial waste.
 When disposing of batteries, separate them from other wastes according to the local regulations.
 (Refer to the GOT2000 Series User's Manual (Hardware) for details of the battery directive in the EU member states.)

[TRANSPORTATION PRECAUTIONS]

<u>M</u>CAUTION

- When transporting lithium batteries, make sure to treat them based on the transport regulations. (Refer to the GOT2000 Series User's Manual (Hardware) for details of the regulated models.)
- Make sure to transport the GOT main unit and/or relevant unit(s) in the manner they will not be exposed to the impact exceeding the impact resistance described in the general specifications of this manual, as they are precision devices.

Failure to do so may cause the unit to fail.

Check if the unit operates correctly after transportation.

 When fumigants that contain halogen materials such as fluorine, chlorine, bromine, and iodine are used for disinfecting and protecting wooden packaging from insects, they cause malfunction when entering our products.

Please take necessary precautions to ensure that remaining materials from fumigant do not enter our products, or treat packaging with methods other than fumigation (heat method).

Additionally, disinfect and protect wood from insects before packing products.

INTRODUCTION

Thank you for choosing Mitsubishi Graphic Operation Terminal (Mitsubishi GOT). Read this manual and make sure you understand the functions and performance of the GOT thoroughly in advance to ensure correct use.

CONTENTS

	SAI	FFTY P	RECAUTIONS	A - 1
			CTION	
			S	_
			uals for GT Works3	
	Abr	oreviatio	ns, Generic Terms, the meaning of the icon	A - 20
1.	PF	REPA	RATORY PROCEDURES FOR MONITORING	
	1.1	Settir	ng the Communication Interface	1 - 3
		1.1.1	Setting connected equipment (Channel setting)	1 - 3
		1.1.2	I/F communication setting	1 - 8
		1.1.3	Precautions	1 - 10
	1.2	Writin	ng the Project Data onto the GOT	1 - 11
		1.2.1	Writing the project data and OS onto the GOT	1 - 11
		1.2.2	Checking the project data and OS writing on GOT	1 - 12
	1.3	Optio	n Devices for the Respective Connection	1 - 13
		1.3.1	Communication module	
		1.3.2	Option unit	1 - 14
		1.3.3	Conversion cables	1 - 14
		1.3.4	Serial Multi-Drop Connection Unit	1 - 14
		1.3.5	Field Network Adapter Unit	1 - 14
		1.3.6	Installing a unit on another unit (Checking the unit installation position)	1 - 15
	1.4	Conn	ection Cables for the Respective Connection	1 - 19
		1.4.1	GOT connector specifications	1 - 19
		1.4.2	Coaxial cableconnector connection method	1 - 21
		1.4.3	Terminating resistors of GOT	1 - 22
	1.5	Verify	ring GOT Recognizes Connected Equipment	1 - 24
	1.6	Chec	king for Normal Monitoring	1 - 26
		1.6.1	Check on the GOT	
		1.6.2	Confirming the communication state on the GOT side (For Ethernet connection)	1 - 29
		1.6.3	Confirming the communication state to each station (Station monitoring function)	1 - 31
C	ON	NECT	TIONS TO NON-MITSUBISHI PRODUCTS	
			ECTION TO IAI ROBOT CONTROLLER	
<u> </u>				0.0
	2.1		ectable Model List	
	2.2	•	em Configuration	
		2.2.1	System Configuration for connecting to X-SEL, SSEL, ASEL, PSEL	

	2.3	Conne	ection Diagram	2 - 17
		2.3.1	RS-232 cable	2 - 17
		2.3.2	RS-422/485 cable	2 - 19
	2.4	GOT S	Side Settings	2 - 24
		2.4.1	Setting communication interface (Communication settings)	2 - 24
		2.4.2	Communication detail settings	2 - 24
	2.5	Robot	Controller Side Setting	2 - 26
		2.5.1	Connecting to X-SEL	
		2.5.2	Connecting to SSEL, ASEL, PSEL	
		2.5.3	Connecting to PCON, ACON, SCON	
		2.5.4	Connecting to ERC2	2 - 28
		2.5.5	Station No.settings	2 - 28
	2.6	Device	e Range that Can Be Set	2 - 29
		2.6.1	IAI robot controller (IAI X-SELController)	
		2.6.2	IAI robot controller (IAI PCON, ACON, SCON, ERC2 controller)	
	2.7		utions	
	2.1	Fieca	ulions	2 - 41
3.	C	DNNE	CTION TO AZBIL CONTROL EQUIPMENT	
	3.1	Conne	ectable Model List	3 - 2
	3.2		m Configuration	
	0.2	3.2.1	Connecting to DMC10	
		3.2.2	Connecting to DMC50	
		3.2.3	Connecting to SDC15, SDC25/26 or SDC35/36	
		3.2.4	Connecting to SDC20/21	
		3.2.5	Connecting to SDC30/31	
		3.2.6	Connecting to SDC40A/40B/40G	
		3.2.7	Connecting to SDC45/46	
		3.2.8	Connecting to CMS, MQV, MPC, MVF, RX	3 - 18
		3.2.9	Connecting to CMF015, CMF050	3 - 20
		3.2.10	Connecting to CML, PBC201-VN2	3 - 23
		3.2.11	Connecting to AUR350C, AUR450C	3 - 25
		3.2.12	Connecting to CMC10B	3 - 26
		3.2.13	Connecting to AHC2001	3 - 28
		3.2.14	Connecting to NX series	3 - 30
	3.3	Conne	ection Diagram	3 - 31
		3.3.1	RS-232 cable	3 - 31
		3.3.2	RS-485 cable	3 - 33
	3.4	GOT S	Side Settings	3 - 49
		3.4.1	Setting communication interface (Communication settings)	
		3.4.2	Communication detail settings	
	3.5	Contro	DI Equipment Side Setting	
	0.0	3.5.1	Connecting to DMC10	
		3.5.2	Connecting to SDC40A/40B/40G	
		3.5.3	Connecting to SDC15, SDC25/26 or SDC35/36	
		3.5.4	Connecting to SDC20/21, SDC30/31	
		3.5.5	Connecting to CMC10L	
		3.5.6	Connecting to DMC50	
		3.5.7	Connecting to SDC45/46	
		3.5.8	Connecting to CMS, CMF015	

	3.5.9 Connecting to CML, CMF050	3 - 53
	3.5.10 Connecting to MQV	3 - 53
	3.5.11 Connecting to MPC	3 - 54
	3.5.12 Connecting to PBC201-VN2	3 - 54
	3.5.13 Connecting to MVF	3 - 54
	3.5.14 Connecting to AUR350C, AUR450C	3 - 55
	3.5.15 Connecting to RX	3 - 55
	3.5.16 Connecting to CMC10B	3 - 55
	3.5.17 Connecting to AHC2001 CPU	3 - 56
	3.5.18 Connecting to AHC2001 SCU	3 - 56
	3.5.19 Station number setting	
3.6	Device Range that Can Be Set	3 - 58
0.0	3.6.1 AZBIL SDC/DMC Series	
	3.6.2 AZBIL DMC50/AHC2001	
0.7		
3.7	Precautions	3 - 62
4. C	ONNECTION TO OMRON PLC	
4.1	Connectable Model List	4 - 2
4.2	Serial Connection	4 - 4
	4.2.1 System Configuration for connecting to CPM1, CPM1A, CPM2A, CPM2C or CQM1	4 - 4
	4.2.2 System Configuration for connecting to CQM1H	4 - 7
	4.2.3 System Configuration for connecting to CJ1H, CJ1G, CJ1M, CJ2H, or CJ2M	4 - 10
	4.2.4 System Configuration for connecting to CP1H, CP1L, or CP1E	4 - 15
	4.2.5 System Configuration for connecting to C200HS, C200H, C200HX, C200HG, or C200HE.	4 - 18
	4.2.6 System Configuration for connecting to CS1H, CS1G, or CS1D	4 - 21
	4.2.7 System Configuration for connecting to C1000H or C2000H	
	4.2.8 System Configuration for connecting to CV500, CV1000, CV2000, or CVM1	
	4.2.9 Connection Diagram	4 - 26
	4.2.10 GOT Side Settings	4 - 29
	4.2.11 PLC Side Setting	4 - 30
	4.2.12 Connecting to CPM2A, CQM1, CQM1H, C200H or RS-232C adapter	4 - 31
	4.2.13 Connecting to CJ1, CJ2, CS1, CP1H, CP1L, or CP1E	
	4.2.14 Connecting to CV500/CV1000/CV2000 or CVM1	
	4.2.15 Connecting to connection cable	
	4.2.16 Connecting to rack type host link unit	
	4.2.17 Connecting to serial communication unit	
	4.2.18 Connecting to communication board, serial communication board (CQM1-SCB41)	
	4.2.19 Connecting to serial communication board (CS1W-SCB21(-V1), CS1W-SCB41(-V1))	
	4.2.20 Connecting to RS-422A/485 Option board	
	4.2.21 Connecting to RS-422A converter	
4.3	Ethernet Connection	
4.5	4.3.1 System configuration	
	4.3.2 GOT side settings	
	4.3.3 PLC side setting	
	4.3.4 Precautions	
_		
4.4		
	4.4.1 OMRON PLC	4 - 47
5. C	ONNECTION TO OMRON TEMPERATURE CONTROLLER	
5.1	Connectable Model List	5 - 2

	5.2	Syste	m Configuration	5 - 3
		5.2.1	Connecting to the THERMAC NEO series	5 - 3
		5.2.2	Connecting to the INPANEL NEO	5 - 6
	5.3	Conn	ection Diagram	5 - 8
		5.3.1	RS-232 cable	
		5.3.2	RS-485 cable	5 - 9
	5.4	GOT	Side Settings	5 - 14
	0. 1	5.4.1	Setting communication interface (Communication settings)	
		5.4.2	Communication detail settings	
	5.5		perature Controller Side Setting	
	5.5	5.5.1	Connecting E5AN, E5EN, E5CN, E5GN	
		5.5.2	Connecting E5ZN	
		5.5.3	Connection to interface converter (K3SC-10)	
		5.5.4	Station No. settings	
	5.6		e Range that Can Be Set	
	5.0	5.6.1	OMRON temperature controller (OMRON THERMAC/INPANEL NEO)	
			,	
	5.7	Preca	autions	5 - 19
6.	C	ONNE	ECTION TO KEYENCE PLC	
	6.1	Conn	ectable Model List	6 - 2
	6.2	Seria	l Connection	6 - 3
		6.2.1	Connecting to KV-5500, KV-5000	6 - 3
		6.2.2	Connecting to KV-3000	6 - 5
		6.2.3	Connecting to KV-1000	6 - 8
		6.2.4	Connecting to KV-700	
		6.2.5	Connection Diagram	
		6.2.6	GOT Side Settings	
		6.2.7	PLC Side Setting	6 - 19
	6.3	Ether	net Connection	
		6.3.1	Connecting to KV-700/1000/3000/5000/5500	
		6.3.2	GOT side settings	
		6.3.3	PLC side setting	6 - 24
	6.4	Devic	e Range that Can Be Set	6 - 25
		6.4.1	KV-700/1000/3000/5000	6 - 25
7.	C	ONNE	ECTION TO KOYO EI PLC	
	7.1	Conn	ectable Model List	
	7.2	Syste	m Configuration	7 - 3
		7.2.1	Connecting to SU-5E or SU-6B	7 - 3
		7.2.2	Connecting to SU-5M or SU-6M	7 - 5
		7.2.3	Connecting to DirectLOGIC 05 series	7 - 8
		7.2.4	Connecting to DirectLOGIC 06 series	
		7.2.5	Connecting to D2-240, D2-250-1 or D2-260	
		7.2.6	Connecting to PZ	7 - 15
	7.3	Conn	ection Diagram	7 - 17
		7.3.1	RS-232 cable	7 - 17
		7.3.2	RS-422 cable	7 - 17
	7.4	GOT	Side Settings	7 - 22

		7.4.1	Setting communication interface (Communication settings)	7 - 22
		7.4.2	Communication detail settings	7 - 22
	7.5	PLC S	Side Setting	7 - 23
		7.5.1	Connecting to SU-5E/6B	
		7.5.2	Connecting to SU-5M/6M	7 - 24
		7.5.3	Connecting to DirectLOGIC 05 series or DirectLOGIC 06 series	7 - 24
		7.5.4	Connecting to DirectLOGIC 205 series	7 - 24
		7.5.5	Connecting to PZ Series	7 - 24
		7.5.6	Connecting to U-01DM	7 - 25
		7.5.7	Connecting to D0-DCM	7 - 26
		7.5.8	Connecting to D2-DCM	7 - 26
		7.5.9	Station No. settings	7 - 26
,	7.6	Devic	e Range that Can Be Set	7 - 27
		7.6.1	KOYO EI PLC (KOYO KOSTAC/DL)	7 - 27
	7.7	Preca	utions	7 - 28
				0
8.	C	DNNE	CTION TO JTEKT PLC	
	8.1	Conn	ectable Model List	8 - 2
	8.2		m Configuration	
	O. <u>_</u>	8.2.1	Connecting to PC3JG, PC3JG-P, PC3JD or PC3JD-C	
		8.2.2	Connecting to PC3J or PC3JL	
		8.2.3	Connecting to PC2J, PC2JS or PC2JR	
		8.2.4	Connecting to PC2JC, PC2J16P or PC2J16PR	
	8.3		ection Diagram	
,	0.5	8.3.1	RS-232 cable	
		8.3.2	RS-422 cable	
	0.4			
,	8.4		Side SettingsSettingsSetting communication settings)	
		8.4.1 8.4.2	Communication detail settings	
			•	
	8.5		Side Setting	
		8.5.1	Connecting to PC3JG, PC3JD, PC3JD-C, PC3JG-P, PC3J, PC3JL, PC2J, PC2JS	
		0.5.0	or PC2JR	
		8.5.2	Connecting to PC2JC	
		8.5.3	Connecting to PC2J16P or PC2J16PR	
		8.5.4 8.5.5	RS-232/RS-422 interface converter setting	
		8.5.6	Station number setting	
			<u> </u>	
	8.6		e Range that Can Be Set	
		8.6.1	JTEKT PLC (JTEKT TOYOPUC-PLC)	
-	8.7	Preca	utions	8 - 20
9.	C	ONNE	ECTION TO SHARP PLC	
	9.1	Conn	ectable Model List	
	9.2	Svste	m Configuration	9 - 3
,	J. <u>-</u>	9.2.1	Connecting to JW-21CU or JW-22CU	
		9.2.2	Connecting to JW-31CUH, JW-32CUH or JW-33CUH	
		9.2.3	Connecting to JW-50CUH, JW-70CUH, JW-100CUH or JW-100CU	
		9.2.4	Connecting to Z-512J	

9.3 Coni	nection Diagram	9 - 7
9.3.1	RS-232 cable	9 - 7
9.3.2	RS-422 cable	9 - 8
9.4 GOT	Side Settings	9 - 10
9.4.1	Setting communication interface (Communication settings)	
9.4.2	Communication detail settings	
9.5 PLC	Side Setting	9 - 11
9.5.1	Connecting to JW-22CU, JW-70CUH, JW-100CUH or JW-100CU	
9.5.2	Connecting to JW-32CUH, JW-33CUH or Z-512J	
9.5.3	Connecting to the link unit (JW-21CM)	
9.5.4	Connecting to the link unit (JW-10CM or ZW-10CM)	9 - 13
9.6 Devi	ce Range that Can Be Set	9 - 15
9.6.1	SHARP PLC (SHARP JW)	
10 CONI	NECTION TO SHINKO TECHNOS INDICATING CONTROLL	ED
	nectable Model List	
10.2 Syst	em Configuration	
10.2.1	Connecting to ACS-13A, JC, JCM-33A, JIR-301-M, PCD-300 Series, PC-900 Series	
	(PC-955-[]/M,C5, PC-935-[]/M,C5)	10 - 4
10.2.2		
40.00	(PC-955[]/M,C, PC-935-[]/M,C)	
10.2.3	When connecting to DCL-33A Series	
10.3 Coni	nection Diagram	
10.3.1	RS-232 cable	
10.3.2	RS-485 cable	10 - 10
10.4 GOT	Side Settings	10 - 15
10.4.1	Setting communication interface (Communication settings)	10 - 15
10.4.2	Communication detail settings	10 - 15
10.5 Indic	cating Controller Side Setting	10 - 16
10.5.1	Connecting to ACS-13A, DCL- 33A, JC, JCM-33A, JIR-301- M, PCD-300 Series,	
	PC-900 Series (PC-955-[]/M,C5, PC- 935-[]/M,C5)	10 - 16
10.5.2	Connecting to FCD-100, FCR- 100, FCR-23A, FIR Series, PC-900 Series	
	(PC-955-[]/ M,C, PC-935-[]/M,C)	
10.5.3	Connecting to communication converter (IF-400)	
10.5.4	Station No. settings	10 - 17
10.6 Devi	ce Range that Can Be Set	10 - 18
10.6.1	SHINKO indicating controller (Shinko Technos Controller)	10 - 18
10.7 Pred	autions	10 - 19
11. CON	NECTION TO CHINO CONTROLLER	
	nectable Model List	
•	em Configuration	11 - 3
11.2.1	Connecting to LT230, LT300, LT400, LT830, DZ1000, DZ2000, DB1000,	44 0
11 0 0	DB2000 series	
11.2.2 11.2.3	Connecting to KP1000, KP2000, AL3000, AH3000 series	
11.2.3	Connecting to SE3000, JU, KE3000, LE5000 series Connecting to GT120 Series	
11.4.4	Connecting to GT 120 Series	11-9

11.3 Conne	ection Diagram	11 - 11
11.3.1	RS-232 cable	11 - 11
11.3.2	RS-422 cable	11 - 12
11.3.3	RS-485 cable	11 - 15
11.4 GOT	Side Settings	11 - 25
11.4.1	Setting communication interface (Communication settings)	
11.4.2	Communication detail settings	
11.5 Contro	oller Side Setting	
11.5.1	Connecting to LT230, LT300 Series	
11.5.1	Connecting to LT400, LT830 Series	
11.5.3	Connecting to DZ1000, DZ2000 Series	
11.5.4	Connecting to DB1000, DB2000 Series	
11.5.5	Connecting to GT120 Series	
11.5.6	Connecting to KP1000, KP2000	
11.5.7	Connecting to AL3000, AH3000	
11.5.8	Connecting to SE3000	
11.5.9	Connecting to JU	
11.5.10	-	
	Connecting to LE5000	
	Connecting to converter SC8-10	
	Station number setting	
	e Range that Can Be Set	
11.6.1	CHINO controller (CHINO Controllers)	
	utions	
11.7 Preca	utions	11 - 34
12. CONN	ECTION TO TOSHIBA PLC	
12.1 Conne	ectable Model List	
	Connection	
12.2.1	System configuration for connecting to PROSEC T series	
12.2.2	System configuration for connecting to PROSEC V series	
12.2.3	Connection Diagram	
12.2.4	GOT Side Settings	
12.2.5	PLC Side Setting	
12.3 Etherr	net Connection	
12.3.1	System configuration for connecting to Unified Controller nv Series	
12.3.2	GOT side settings	
12.3.3	PLC side setting	
12.3.4	Precautions	12 - 13
12.4 Device	e Range that Can Be Set	12 - 14
13. CONN	ECTION TO TOSHIBA MACHINE PLC	
13.1 Conne	ectable Model List	13 - 2
13.2 System	m Configuration Connecting to TC3, TC5, TC6, TC8	
13.2.1	Connecting to TC3, TC5, TC6, TC8	
	•	
	ection Diagram	
13.3.1	RS-232 cable	
13.3.2	RS-485 cable	13 - 6
13.4 GOT	Side Settings	13 - 9

13.4.1	Setting communication interface (Communication settings)	13 - 9
13.4.2	Communication detail settings	13 - 9
13.5 PLC	Side Setting	13 - 10
13.5.1	Connecting to TC3, TC8 series	13 - 10
13.5.2	Connecting to TC5 series	13 - 10
13.5.3	Connecting to TC6 series	13 - 10
13.5.4	Connecting to TS2000, TS2100	13 - 10
13.6 Devic	e Range that Can Be Set	13 - 11
13.6.1	TOSHIBA MACHINE PLC (TOSHIBA MACHINE TCmini)	13 - 12
14. CONN	IECTION TO PANASONIC SERVO AMPLIFIER	
14.1 Conn	ectable Model List	14 - 2
14.2 Syste	em Configuration	14 - 3
14.2.1	Connecting to MINAS A4, MINAS A4F, MINAS A4L series	14 - 3
14.2.2	Connecting to MINAS A5 series	14 - 4
14.3 Conn	ection Diagram	14 - 5
14.3.1	RS-232 cable	14 - 5
14.3.2	RS-485 cable	14 - 5
14.3.3	RS-232/RS-485 cable	14 - 9
14.4 GOT	Side Settings	14 - 10
14.4.1	Setting communication interface (Communication settings)	
14.4.2	Communication detail settings	
14.5 Servo	o Amplifier Side Setting	14 - 12
14.5.1	Connecting to MINAS A4/A4F/A4L	
14.5.2	Connecting to MINAS A5	
14.5.3	Station number setting	
14.6 Devic	ce Range that Can Be Set	
14.6.1	PANASONIC servo amplifier (PANASONIC MINAS-A4 Series)	
14.6.2	PANASONIC servo amplifier (PANASONIC MINAS-A5 Series)	
	autions	
14.7 FIEC	300015	14 - 13
	IECTION TO PANASONIC INDUSTRIAL DEVICES SU	
15.1 Conn	ectable Model List	15 - 2
15.2 Syste	em Configuration	
15.2.1	Connecting to FP0-C16CT, FP0-C32CT, or FP0R	
15.2.2	Connecting to FP1-C24C or FP1-C40C	
15.2.3	Connecting to FP2 or FP2SH	
15.2.4	Connecting to FP3 or FP5	
15.2.5	Connecting to FP10(S)	
15.2.6	Connecting to FP10SH	
15.2.7	Connecting to FP-M(C20TC) or FP-M(C32TC)	
15.2.8	Connecting to FP	
15.2.9	Connecting to FP-X	
15.3 Conn	ection Diagram	
15.3.1	RS-232 cable	
15.3.2	RS-422 cable	15 - 24

15.4 GOT	Side Settings	15 - 26
15.4.1	Setting communication interface (Communication settings)	15 - 26
15.4.2	Communication detail settings	15 - 26
15.5 PLC	Side Setting	15 - 27
15.6 Devid	ce Range that Can Be Set	15 - 28
15.6.1	Panasonic Industrial Devices SUNX PLC (Panasonic MEWNET-FP)	15 - 29
REVISION	S	
WARRAN [*]	ΓΥ	

List of Manuals for GT Works3

For the manuals related to this product, install the manuals with the drawing software. If you need a printed manual, consult your local Mitsubishi representative or branch office.

■1. List of Manuals for GT Designer3(GOT2000)

(1) Screen drawing software manuals

Manual name	Manual number (Model code)	Format
GT Works3 Version1 Installation Procedure Manual	-	PDF
GT Designer3 (GOT2000) Screen Design Manual	SH-081220ENG (1D7ML9)	PDF, e-Manual
GT Converter2 Version3 Operating Manual for GT Works3	SH-080862ENG (1D7MB2)	PDF
GOT2000 Series MES Interface Function Manual for GT Works3 Version1	SH-081228ENG	PDF

(2) Connection manuals

Manual name	Manual number (Model code)	Format
GOT2000 Series Connection Manual (Mitsubishi Products) For GT Works3 Version1	SH-081197ENG (1D7MJ8)	PDF
GOT2000 Series Connection Manual (Non-Mitsubishi Products 1) For GT Works3 Version1	SH-081198ENG	PDF
GOT2000 Series Connection Manual (Non-Mitsubishi Products 2) For GT Works3 Version1	SH-081199ENG	PDF
GOT2000 Series Connection Manual (Microcomputers, MODBUS/Fieldbus Products, Peripherals) For GT Works3 Version1	SH-081200ENG	PDF

(3) GT SoftGOT2000 manuals

Manual name	Manual number (Model code)	Format
GT SoftGOT2000 Version1 Operating Manual	SH-081201ENG	PDF

(4) GOT2000 manuals

Manual name	Manual number (Model code)	Format
GOT2000 Series User's Manual (Hardware)	SH-081194ENG (1D7MJ5)	PDF, e-Manual
GOT2000 Series User's Manual (Utility)	SH-081195ENG (1D7MJ6)	PDF
GOT2000 Series User's Manual (Monitor)	SH-081196ENG (1D7MJ7)	PDF



e-Manual

- e-Manual refers to the Mitsubishi FA electronic book manuals that can be browsed using a dedicated tool.
- e-Manual has the following features:
- Required information can be cross-searched in multiple manuals.
- · Other manuals can be accessed from the links in the manual.
- Hardware specifications of each part can be found from the product figures.
- · Pages that users often browse can be bookmarked.

Abbreviations, Generic Terms, the meaning of the icon

The following shows the abbreviations and generic terms used in Help.

■1. GOT

Abbreviations and generic terms			Description	Meaning of icon		
		terms		Support	Not support	
GT27-X GT2715		GT2715-X	GT2715-XTBA, GT2715-XTBD			
		GT27-S	GT2712-S	GT2712-STBA, GT2712-STWA, GT2712-STBD, GT2712-STWD		
		G127-3	GT2710-S	GT2710-STBA, GT2710-STBD		
	GT27	GT27-V	GT2710-V	GT2710-VTBA, GT2710-VTWA, GT2710-VTBD, GT2710-VTWD	ет 27	-
		GT27-S	GT2708-S	GT2708-STBA, GT2708-STBD		
		CT27.1/	GT2708-V	GT2708-VTBA, GT2708-VTBD		
		GT27-V	GT2705-V	GT2705-VTBD	1	
		CTOE C	GT2512-S	GT2512-STBA, GT2512-STBD		-
		GT25-S	GT2512F-S	GT2512F-STNA, GT2512F-STND		
	ОТОБ		GT2510-V	GT2510-VTBA, GT2510-VTWA, GT2510-VTBD, GT2510-VTWD	GT	
	GT25	0705.4	GT2510F-V	GT2510F-VTNA, GT2510F-VTND	^{ст} 25	
		GT25-V	GT2508-V	GT2508-VTBA, GT2508-VTWA, GT2508-VTBD, GT2508-VTWD		
			GT2508F-V	GT2508F-VTNA, GT2508F-VTND		
			GT2310-V	GT2310-VTBA, GT2310-VTBD	GT	-
	GT23	GT23-V	GT2308-V	GT2308-VTBA, GT2308-VTBD	_{GT} 23	
			1	GT21	_{GT} 21	-
GOT2000	GT21	GT21-Q	GT2105-Q	GT2105-QTBDS GT2105-QMBDS	^{GT} ₀₅ҳ 21	-
Series		GT21-R	GT2104-R	GT2104-RTBD	^{GT} 04R 21	-
		GT21-P	GT2104-P	GT2104-PMBD	GT _{03P} 21 04P ET/R4	-
				GT2104-PMBDS	GT _{03P} 21 04P R4	-
				GT2104-PMBDS2	GT _{03P} 21 04P R2	-
				GT2104-PMBLS	GT _{03P} 21 04P R4-5V	-
			GT2103-P	GT2103-PMBD	GT _{03P} 21 04P ET/R4	ı
				GT2103-PMBDS	GT _{03P} 21 04P R4	1
				GT2103-PMBDS2	GT _{03P} 21 04P R2	-
				GT2103-PMBLS	GT _{03P} 21 04P R4-5V	1
	GT Sof	tGOT2000		GT SoftGOT2000 Version1	Soft GOT 2000	-
GOT1000 Se	GOT1000 Series			GOT1000 Series		-
GOT900 Ser	GOT900 Series			GOT-A900 Series, GOT-F900 Series	-	-
GOT800 Ser	GOT800 Series			GOT-800 Series	-	-

■2. Communication unit

Abbreviations and generic terms	Description
Bus connection unit	GT15-QBUS, GT15-QBUS2, GT15-ABUS, GT15-ABUS2, GT15-75QBUSL, GT15-75QBUS2L, GT15-75ABUS2L
Serial communication unit	GT15-RS2-9P, GT15-RS4-9S, GT15-RS4-TE
MELSECNET/H communication unit	GT15-J71LP23-25, GT15-J71BR13
CC-Link IE Controller Network communication unit	GT15-J71GP23-SX
CC-Link IE Field Network communication unit	GT15-J71GF13-T2
CC-Link communication unit	GT15-J61BT13
Wireless LAN communication unit	GT25-WLAN
Serial multi-drop connection unit	GT01-RS4-M
Connection conversion adapter	GT10-9PT5S
Field network adapter unit	GT25-FNADP

■3. Option unit

Abbreviations and generic terms		Description
Printer unit		GT15-PRN
Video/RGB unit	Video input unit	GT27-V4-Z (A set of GT16M-V4-Z and GT27-IF1000)
	RGB input unit	GT27-R2, GT27-R2-Z (A set of GT16M-R2-Z and GT27-IF1000)
	Video/RGB input unit	GT27-V4R1-Z (A set of GT16M-V4R1-Z and GT27-IF1000)
	RGB output unit	GT27-ROUT, GT27-ROUT-Z (A set of GT16M-ROUT-Z and GT27-IF1000)
Multimedia unit		GT27-MMR-Z (A set of GT16M-MMR-Z and GT27-IF1000)
Video signal conversion unit		GT27-IF1000
External I/O unit		GT15-DIO, GT15-DIOR
Sound output unit		GT15-SOUT

■4. Option

Abbreviations and generic terms	Description
SD card	NZ1MEM-2GBSD, NZ1MEM-4GBSD, NZ1MEM-8GBSD, NZ1MEM-16GBSD, L1MEM-2GBSD, L1MEM-4GBSD
Battery	GT11-50BAT
Protective sheet	GT27-15PSGC, GT25-12PSGC, GT25-10PSGC, GT25-08PSGC, GT25-05PSGC, GT21-05PSGC, GT21-04PSGC-UC, GT21-03PSGC-UC, GT21-04PSGC-UC, GT27-15PSCC, GT25-12PSCC, GT25-10PSCC, GT25-08PSCC, GT25-12PSCC-UC, GT25-05PSCC, GT21-05PSCC, GT21-04PSCC-UC, GT21-03PSCC-UC
Environmental protection sheet	GT25F-12ESGS, GT25F-10ESGS, GT25F-08ESGS
Protective cover for oil	GT20-15PCO, GT20-12PCO, GT20-10PCO, GT20-08PCO, GT25-05PCO, GT21-04RPCO, GT10-30PCO, GT10-20PCO, GT05-50PCO
USB environmental protection cover	GT25-UCOV, GT25-05UCOV
Stand	GT15-90STAND, GT15-80STAND, GT15-70STAND, GT15-60STAND
Attachment	GT15-70ATT-98, GT15-70ATT-87, GT15-60ATT-97, GT15-60ATT-96, GT15-60ATT-87, GT15-60ATT-77

■5. Software

(1) Software related to GOT

Abbreviations and generic terms	Description
GT Works3	SW1DND-GTWK3-J, SW1DND-GTWK3-E, SW1DND-GTWK3-C
GT Designer3 Version1	Screen drawing software GT Designer3 for GOT2000/GOT1000 series
GT Designer3	Serson drawing anthurs for COT2000 period included in CT Works?
GT Designer3 (GOT2000)	Screen drawing software for GOT2000 series included in GT Works3
GT Designer3 (GOT1000)	Screen drawing software for GOT1000 series included in GT Works3
GT Simulator3	Screen simulator GT Simulator3 for GOT2000/GOT1000/GOT900 series
GT SoftGOT2000	Monitoring software GT SoftGOT2000 series
GT Converter2	Data conversion software GT Converter2 for GOT1000/GOT900 series
GT Designer2 Classic	Screen drawing software GT Designer2 Classic for GOT900 series
GT Designer2	Screen drawing software GT Designer2 for GOT1000/GOT900 series
DU/WIN	Screen drawing software FX-PCS-DU/WIN for GOT-F900 series

(2) Software related to iQ Works

Abbreviations and generic terms	Description
iQ Works	Abbreviation of iQ Platform compatible engineering environment MELSOFT iQ Works
MELSOFT Navigator	Generic term for integrated development environment software included in the SW DNC-IQWK (iQ Platform compatible engineering environment MELSOFT iQ Works) (□ indicates a version.)
MELSOFT iQ AppPortal	SWDND-IQAPL-M type integrated application management software (indicates a version.)

(3) Other software

Abb	reviations and generic terms	Description
GX Works3		SW□DND-GXW3-E (-EA) type programmable controller engineering software (□ indicates a version.)
GX Works2		SWDNC-GXW2-D type programmable controller engineering software (Dindicates a version.)
	GX Simulator3	Simulation function of GX Works3
	GX Simulator2	Simulation function of GX Works2
Controller simulator	GX Simulator	SWDD5C-LLT-E (-EV) type ladder logic test tool function software package (SW5D5C-LLT (-V) or later versions) (D indicates a version.)
GX Developer		SW□D5C-GPPW-E (-EV)/SW□D5F-GPPW (-V) type software package (□ indicates a version.)
GX LogViewer		SW□DNN-VIEWER-E type software package (□ indicates a version.)
PX Developer		SW□D5C-FBDQ-E type FBD software package for process control (□ indicates a version.)
MT Works2		Motion controller engineering environment MELSOFT MT Works2 (SW□DND-MTW2-E) (□ indicates a version.)
MT Developer		SW□RNC-GSV type integrated start-up support software for motion controller Q series (□ indicates a version.)
CW Configurator		C Controller module configuration and monitor tool (SW1DND-RCCPU-E) (□ indicates a version.)
MR Configurator2		SW□DNC-MRC2-E type servo configuration software (□ indicates a version.)
MR Configurator		MRZJW□-SETUP type servo configuration software (□ indicates a version.)
FR Configurator		Inverter setup software (FR-SW□-SETUP-WE) (□ indicates a version.)
NC Configurator2		CNC parameter setting support tool (FCSB1221)
NC Configurator		CNC parameter setting support tool
FX Configurator-FP		Parameter setting, monitoring, and testing software packages for FX3U-20SSC-H (SWDD5CFXSSCE) (□ indicates a version.)
FX3U-ENET-L Configuration tool		FX3U-ENET-L type Ethernet module setting software (SW1D5-FXENETL-E)
RT ToolBox2		Robot program creation software (3D-11C-WINE)
MX Component		MX Component Version□ (SW□D5C-ACT-E, SW□D5C-ACT-EA) (□ indicates a version.)
MX Sheet		MX Sheet Version□ (SW□D5C-SHEET-E, SW□D5C-SHEET-EA) (□ indicates a version.)
CPU Module Logging	G Configuration Tool	CPU module logging configuration tool (SW1DNN-LLUTL-E)

■6. License key (for GT SoftGOT2000)

Abbreviations and generic terms	Description
License key	GT27-SGTKEY-U

■7. Others

Abbreviations and generic terms	Description
IAI	IAI Corporation
AZBIL	Azbil Corporation
OMRON	OMRON Corporation
KEYENCE	KEYENCE CORPORATION
KOYO EI	KOYO ELECTRONICS INDUSTRIES CO., LTD.
JTEKT	JTEKT Corporation
SHARP	Sharp Manufacturing Systems Corporation
SHINKO	Shinko Technos Co., Ltd.
CHINO	CHINO CORPORATION
TOSHIBA	TOSHIBA CORPORATION
TOSHIBA MACHINE	TOSHIBA MACHINE CO., LTD.
PANASONIC	Panasonic Corporation
PANASONIC IDS	Panasonic Industrial Devices SUNX Co., Ltd.
HITACHI IES	Hitachi Industrial Equipment Systems Co., Ltd.
HITACHI	Hitachi, Ltd.
FUJI	FUJI ELECTRIC CO., LTD.
YASKAWA	YASKAWA Electric Corporation
YOKOGAWA	Yokogawa Electric Corporation
RKC	RKC INSTRUMENT INC.
ALLEN-BRADLEY	Allen-Bradley products manufactured by Rockwell Automation, Inc.
CLPA	CC-Link Partner Association
GE	GE Intelligent Platforms, Inc.
HMS	HMS Industrial Networks
LS IS	LS Industrial Systems Co., Ltd.
MITSUBISHI INDIA	Mitsubishi Electric India Pvt. Ltd.
ODVA	Open DeviceNet Vendor Association, Inc.
SCHNEIDER	Schneider Electric SA
SICK	SICK AG
SIEMENS	Siemens AG
PLC	Programmable controller manufactured by each corporation
Control equipment	Control equipment manufactured by each corporation
Temperature controller	Temperature controller manufactured by each corporation
Indicating controller	Indicating controller manufactured by each corporation
Controller	Controller manufactured by each corporation

1

PREPARATORY PROCEDURES FOR MONITORING

1.1	Setting the Communication Interface
1.2	Writing the Project Data onto the GOT
1.3	Option Devices for the Respective Connection 1 - 13
1.4	Connection Cables for the Respective Connection 1 - 1
1.5	Verifying GOT Recognizes Connected Equipment 1 - 24
1.6	Checking for Normal Monitoring

PREPARATORY PROCEDURES FOR MONITORING

The following shows the procedures to be taken before monitoring and corresponding reference sections.

Setting the communication interface Setting the Communication Interface Determine the connection type and channel No. to be used, and Each chapter GOT Side Settings perform the communication setting. Writing the project data and OS Write the standard monitor OS, communication driver, extended 1.2.1 Writing the project data and OS onto the GOT function OS, project data and communication settings onto the GOT. Verifying the project data and OS Verify the standard monitor OS, communication driver, 1.2.2 Checking the project data and OS writing on GOT extended function OS, project data and communication settings are properly written onto the GOT. Option Devices for the Respective Connection Attaching the communication unit and connecting the cable Connection Cables for the Respective Connection Mount the optional equipment and prepare/connect the Each chapter System Configuration connection cable according to the connection type. Each chapter Connection Diagram Verifying GOT recognizes connected equipment Verify the GOT recognizes controllers on [Communication Verifying GOT Recognizes Connected Equipment Settings] of the Utility. Verifying the GOT is monitoring normally Verify the GOT is monitoring normally using Utility, Developer, Checking for Normal Monitoring etc.

1.1 Setting the Communication Interface

Set the communication interface of GOT and the connected equipment.


When using the GOT at the first time, make sure to set the channel of communication interface and the communication driver before writing to GOT.

Set the communication interface of the GOT at [Controller Setting] and [I/F Communication Setting] in GT Designer3.

1.1.1 Setting connected equipment (Channel setting)

Set the channel of the equipment connected to the GOT.

■ Setting

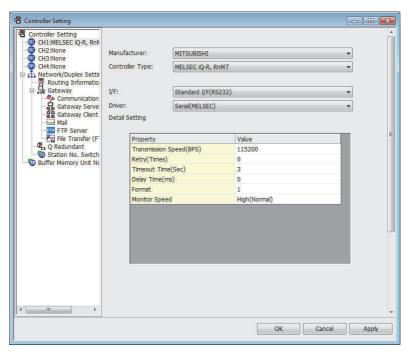

- 1. Select [Common] → [Controller Setting] from the menu.
- The Controller Setting dialog box appears. Select the channel No. to be used from the list menu.
- Refer to the following explanations for the setting.



Channel No.2 to No.4


Use the channel No.2 to No.4 when using the Multi-channel function.

For details of the Multi-channel function, refer to the following.

Mitsubishi Products 19. MULTI-CHANNEL FUNCTION

Setting item

This section describes the setting items of the Manufacturer, Controller Type, Driver and I/F. When using the channel No.2 to No.4, put a check mark at [Use CH*].

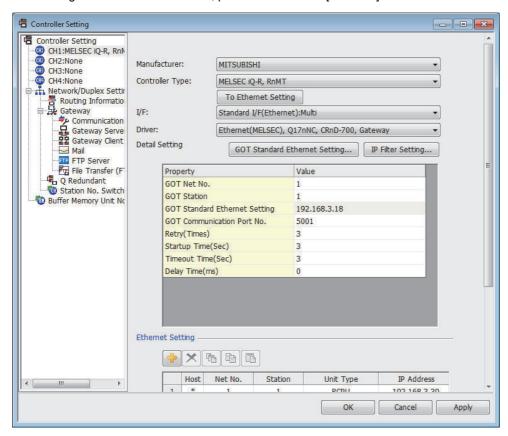

Item	Description	
Use CH*	Select this item when setting the channel No.2 to No.4.	
Manufacturer	Select the manufacturer of the equipment to be connected to the GOT.	
Туре	Select the type of the equipment to be connected to the GOT. For the settings, refer to the following. [3] (2)Setting [Controller Type]	
I/F	Select the interface of the GOT to which the equipment is connected. For the settings, refer to the following. [3] (3)Setting [I/F]	
Driver	Select the communication driver to be written to the GOT. For the settings, refer to the following. [] (1)Setting [Driver]	
Detail Setting	Make settings for the transmission speed and data length of the communication driver. Refer to each chapter of the equipment to be connected to the GOT.	

(1) Setting [Driver]

The displayed items for a driver differ according to the settings [Manufacturer], [Controller Type] and [I/F]. When the driver to be set is not displayed, confirm if [Manufacturer], [Controller Type] and [I/F] are correct. For the settings, refer to the following.

[Setting the communication interface] section in each chapter

(2) Setting [Controller Type] The types for the selection differs depending on the PLC to be used. For the settings, refer to the following.

Туре	Model name	Туре	Model name
	XSEL-J	AZBIL SDC/DMC Series	AHC2001
	XSEL-K	-	CPM1
	XSEL-KE		CPM1A
IAI X-SEL CONTROLLER	XSEL-KT		CPM2A
	XSEL-KET		CPM2C
	XSEL-P		CQM1
	XSEL-Q		CQM1H
	XSEL-JX		CJ1H
	XSEL-KX		CJ1G
	XSEL-KTX		CJ1M
	XSEL-PX	<u>-</u> -	CP1H
	XSEL-QX		CP1L
	SSEL		CP1E
	ASEL		C200HS
	PSEL	OMRON SYSMAC	C200H
	PCON-C		C200HX
	PCON-CG		C200HG
	PCON-CF		C200HE
	PCON-CY		CS1H
	PCON-SE		CS1G
	PCON-PL		CS1D
	PCON-CA		C1000H
	PCON-PO		C2000H
AI ROBO CYLINDER			CV500
AI NODO CILINDEK	ACON-C		
	ACON-CC		CV1000 CV2000
	ACON-CY ACON-SE		CV2000 CVM1
	ACON-PL		CS1H
	ACON-PO		CS1G
	SCON-C	OMRON SYSMAC CS/CJ	CS1D
	SCON-CA		CJ1H
	ERC2		CJ1G
	DMC10		CJ1M
	DMC50		CJ2H
	SDC15		CJ2M
	SDC25		E5AN
	SDC26		E5EN
	SDC35	OMRON THERMAC/INPANEL NEO	E5CN
	SDC36		E5GN
	SDC20		E5ZN
	SDC21		KV-700
	SDC30		KV-1000
	SDC31	KEYENCE KV-700/1000/3000/5000	KV-3000
	SDC40A		KV-5000
	SDC40B		KV-5500
	SDC40G		JW-21CU
ZBIL SDC/DMC Series	SDC45		JW-31CUH
	SDC46		JW-50CUH
	CMS	- - SHARP JW	JW-22CU
	CMF015		JW-32CUH
	CMF050		JW-33CUH
	CML		JW-70CUH
	MQV		JW-100CUH
	MPC		JW-100CUH
	MVF		Z-512J
			Z-012J
	PBC201-VN2		
	AUR350C		
	AUR450C		
	RX		
	CMC10B		


Type Model name TC3-01 TC3-02 TC5-02 TC5-03 TC6-00 TC8-00 TS2000 TS2100 SU-5E SU-6B SU-5M SU-6M PZ3 D2-240 D2-250-1 D2-260 D0-05AA
TC3-02 TC5-02 TC5-03 TC6-00 TC8-00 TS2000 TS2100 SU-5E SU-6B SU-5M SU-6M PZ3 D2-240 D2-250-1 D2-260
TC5-02 TC5-03 TC6-00 TC8-00 TC8-00 TS2000 TS2100 SU-5E SU-6B SU-5M SU-6M PZ3 D2-240 D2-250-1 D2-260
TOSHIBA MACHINE Tcmini TC6-00 TC8-00 TS2000 TS2100 SU-5E SU-6B SU-5M SU-6M PZ3 D2-240 D2-250-1 D2-260
TC6-00 TC8-00 TS2000 TS2100 SU-5E SU-6B SU-5M SU-6M PZ3 D2-240 D2-250-1 D2-260
TC8-00 TS2000 TS2100 SU-5E SU-6B SU-5M SU-6M PZ3 D2-240 D2-250-1 D2-260
TS2000 TS2100 SU-5E SU-6B SU-5M SU-6M PZ3 D2-240 D2-250-1 D2-260
TS2100 SU-5E SU-6B SU-5M SU-5M PZ3 D2-240 D2-250-1 D2-260
SU-6B SU-5M SU-6M PZ3 D2-240 D2-250-1 D2-260
SU-6B SU-5M SU-6M PZ3 D2-240 D2-250-1 D2-260
SU-5M SU-6M PZ3 D2-240 D2-250-1 D2-260
SU-6M PZ3 D2-240 D2-250-1 D2-260
D2-240 D2-250-1 D2-260
D2-240 D2-250-1 D2-260
D2-250-1 D2-260
D2-260
20 00, 11
D0-05AD
D0-05AR
D0-05DA
D0 05DD
KOYO KOSTAC/DL D0-05DD-D
D0-05DR
D0-05DR-D
D0-06DD1
D0-06DD2
D0-06DR
D0-06DA
D0-06AR
D0-06AA
D0-06DD1-D
D0-06DD2-D
D0-06DR-D
PC3JG-P-CPU
PC3JG-CPU
PC3J-CPU
PC3JL-CPU
JTEKT TOYOPUC-PC Series PC2JC-CPU
PC2J16P-CPU
PC2J16PR-CPU
PC2J-CPU
PC2JS-CPU
PC2JR-CPU
LT350
LT370
LT450
LT470
DZ1000
CHINO Controllers DZ2000
CHINO Controllers DZ2000 LT230
CHINO Controllers DZ2000 LT230 LT830
CHINO Controllers DZ2000 LT230 LT830 DB1000 DB1000
CHINO Controllers DZ2000 LT230 LT830

Туре	Model name
	T2 (PU224)
	T3
	T3H
	T2E
TOSHIBA PROSEC T/V Series	T2N
	model 2000(S2)
	model 2000(S2T)
	model 2000(S2E)
	model 3000 (S3)
TOSHIBA Unified Controller ny Series	Controller type1
1031 IIBA Offined Controller IIV Series	PU811
	MINAS A4
PANASONIC MINAS-A4 Series	MINAS A4F
	MINAS A4L
	FP0-C16CT
	FP0-C32CT
	FP0R
	FP1-C24C
	FP1-C40C
	FP2
PANASONIC INDUSTRIAL DEVICES	FP2SH
SUNX MEWNET-FP Series	FP3
OOTAX WEATHER OF THE	FP5
	FP10(S)
	FP10SH
	FP-M(C20TC)
	FP-M(C32TC)
	FP-∑
	FP-X
	ACS-13A□/□,□,C5
	JCS-33A-□/□□,C5
	JCR-33A-□/□□,C5
	JCD-33A-□/□□,C5
	JCM-33A□/□,□C5
	JIR-301-M□,C5
	PCD-33A-□/M,C5
	PC935-□/M,C5
Shinko Technos Controller Series	PC955-□/M,C5
	PC935-□/M,C
	PC955-□/M,C
	FCD-13A-□/M,C
	FCD-15A-□/M,C
	FCR-13A-□/M,C
	FCR-15A-□/M,C
	FCR-23A-□/M,C
	FIR-201-M,C
	DCL-33A-□/M,□,C5
	3-13-13-13-13-13-13-13-13-13-13-13-13-13

(3) Setting [I/F]

The interface differs depending on the GOT to be used.


Set the I/F according to the connection and the position of communication unit to be mounted onto the GOT.

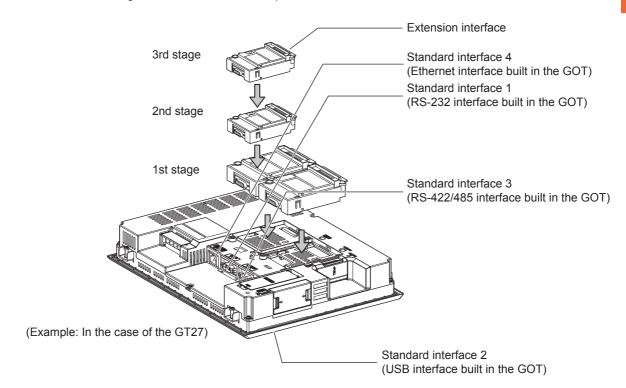

1.1.2 I/F communication setting

This function displays the list of the GOT communication interfaces. Set the channel and the communication driver to the interface to be used.


Setting

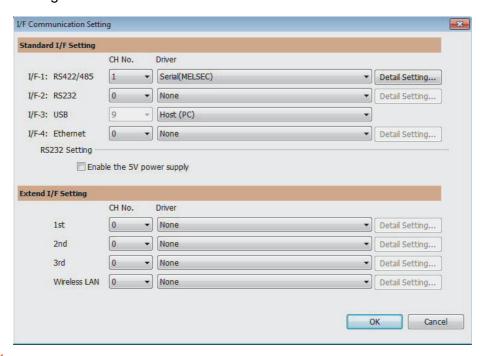

- Select [Common] → [I/F Communication Setting] from the menu.
- 2. The I/F Communication Setting dialog box appears. Make the settings with reference to the following explanation.

■ Setting item

The following describes the setting items for the standard I/F setting and extension I/F setting.

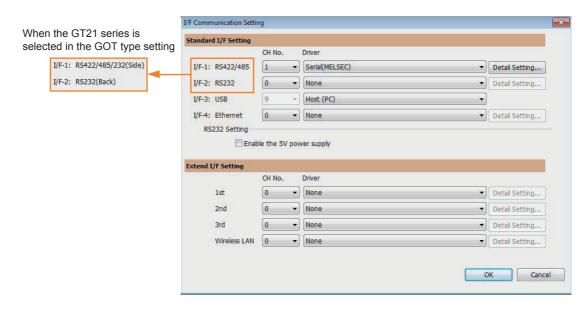

Item Standard I/F setting		Description Set channel No. and drivers to the GOT standard interfaces.	
	I/F	The communication type of the GOT standard interface is displayed.	
	Driver	Set the driver for the device to be connected. None • Host (Personal computer) • Each communication driver for connected devices	
	Detail Setting	Make settings for the transmission speed and data length of the communication driver. Refer to each chapter of the equipment to be connected to the GOT.	
	RS232 Setting	To validate the 5V power supply function in RS232, mark the [Enable the 5V power supply] checkbox. The RS232 setting is invalid when the CH No. of [I/F-1: RS232] is [9]. GT21 is not supported.	
Extension I/F setting		Set the communication unit attached to the extension interface of the GOT. GT21 is not supported.	
	CH No.	Set the CH No. according to the intended purpose. The number of channels differs depending on the GOT to be used. 0: Not used 1 to 4: Used for connecting a controller of channel No. 1 to 4 set in Setting connected equipment (Channel setting) 5 to 8: Used for barcode function, RFID function, remote personal computer operation (serial) A: Used for the video/RGB display function, multimedia function, external I/O function, operation panel function, RGB output function, report function, hard copy function (with a printer), sound output function, gateway function, MES interface function, and wireless LAN connection.	



Channel No., drivers, [RS232 Setting]

(1) Channel No.2 to No.4

Use the channel No.2 to No.4 when using the Multi-channel function.

For details of the Multi-channel function, refer to the following.

Mitsubishi Products 19. MULTI-CHANNEL FUNCTION

(2) Drivers

The displayed items for a driver differ according to the settings [Manufacturer], [Controller Type] and [I/F]. When the driver to be set is not displayed, confirm if [Manufacturer], [Controller Type] and [I/F] are correct.

[Setting the communication interface] section in each chapter

1.1.3 Precautions

Precautions for changing model

- (1) When devices that cannot be converted are included. When setting of [Manufacturer] or [Controller Type] is changed, GT Designer3 displays the device that cannot be converted (no corresponding device type, or excessive setting ranges) as [??]. In this case, set the device again.
- (2) When the changed Manufacturer or Controller Type does not correspond to the network. The network will be set to the host station.
- (3) When the Manufacturer or Controller Type is changed to [None]
 The GT Designer3 displays the device of the changed channel No. as [??]. In this case, set the device again.
 Since the channel No. is retained, the objects can be reused in other channel No. in a batch by using the [Device Bach Edit], [CH No. Batch Edit] or [Device List].


1.2 Writing the Project Data onto the GOT

Write the package data onto the GOT.

For details on writing to GOT, refer to the following manual.

GT Designer3 (GOT2000) Screen Design Manual

1.2.1 Writing the project data and OS onto the GOT

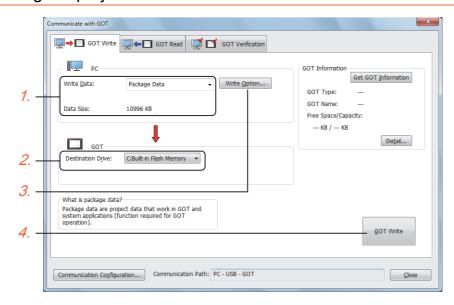


- Select [Package Data] for [Write Data].
 The capacity of the transfer data is displayed in [Data Size]. Check that the destination drive has the sufficient available space.
- 2. Select [Destination Drive].
- 3. When the system application or the special data is required to be added to the package data or deleted, click the [Write Option] button and configure the setting in the [Write Option] dialog.
- 4. Click the [GOT Write] button.
- 5. The package data is written to the GOT.

1.2.2 Checking the project data and OS writing on GOT

Confirm if the package data is properly written onto the GOT by reading from GOT using GT Designer3. For reading from the GOT, refer to the following manual.

GT Designer3 (GOT2000) Screen Design Manual

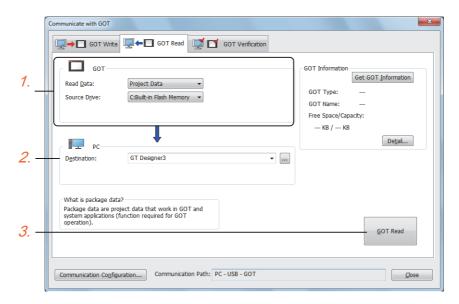

- 1. Set [GOT Side] as follows.
 - Select [Project Data] or [Package Data] for [Read Data].
 - Select the drive where the project data or the package data is stored for [Source Drive].
- 2. Set [PC Side].

Set the reading destination of the project for [Destination].

To read the project data to GT Designer3, select [GT Designer3].

(When [Read Data] is [Package Data], the project data cannot be read to GT Designer3.)

To read the project data as a file, click the [...] button to set the saving format and the saving destination of the file.

- 3. Click the [GOT Read] button.
- 4. The project is read.
- 5. Confirm that the project data is written correctly onto the GOT.

1.3 Option Devices for the Respective Connection

The following shows the option devices to connect in the respective connection type. For the specifications, usage and connecting procedure on option devices, refer to the respective device manual.

1.3.1 Communication module

Product name	Model	Specifications	
	GT15-QBUS	For QCPU (Q mode), motion controller CPU (Q series) Bus connection (1ch) unit standard model	
	GT15-QBUS2	For QCPU (Q mode), motion controller CPU (Q series) Bus connection (2ch) unit standard model	
	GT15-ABUS	For A/QnACPU, motion controller CPU (A series) Bus connection (1ch) unit standard model	
Dun compating unit	GT15-ABUS2	For A/QnACPU, motion controller CPU (A series) Bus connection (2ch) unit standard model	
Bus connection unit	GT15-75QBUSL	For QCPU (Q mode), motion controller CPU (Q series) Bus connection (1ch) unit slim model	
	GT15-75QBUS2L	For QCPU (Q mode), motion controller CPU (Q series) Bus connection (2ch) unit slim model	
	GT15-75ABUSL	For A/QnACPU, motion controller CPU (A series) Bus connection (1ch) unit slim model	
	GT15-75ABUS2L	For A/QnACPU, motion controller CPU (A series) Bus connection (1ch) unit slim model	
	GT15-RS2-9P	RS-232 serial communication unit (D-sub 9-pin (male))	
Serial communication unit	GT15-RS4-9S	RS-422/485 serial communication unit (D-sub 9-pin (female))	
	GT15-RS4-TE	RS-422/485 serial communication unit (terminal block)	
MELSECNET/H communication	GT15-J71LP23-25	Optical loop unit	
unit	GT15-J71BR13	Coaxial bus unit	
MELSECNET/10 communication	GT15-J71LP23-25	Optical loop unit (MELSECNET/H communication unit used in the MNET/10 mode)	
unit	GT15-J71BR13	Coaxial bus unit (MELSECNET/H communication unit used in the MNET/10 mode)	
CC-Link IE Controller Network communication unit	GT15-J71GP23-SX	Optical loop unit	
CC-Link IE Field Network communication unit	GT15-J71GF13-T2	CC-Link IE Field Network (1000BASE-T) unit	
CC-Link communication unit	GT15-J61BT13	Intelligent device station unit CC-LINK Ver. 2 compatible	
Ethernet communication unit	Built into GOT	Ethernet (100Base-TX)	
Wireless LAN communication unit*1	GT25-WLAN	 Used for the connection to the IEEE802.11b/g/n compliant, built-in antenna, access point (master unit)*², station (slave unit), personal computers, tablets and smartphones. Compliance with Japan Radio Law*³, FCC*⁴, R&TTE*⁴, SRRC*⁵, KC*⁵ 	

- Data transfer in wireless LAN communication may not be as stable as that in cable communication. A packet loss may occur depending on the surrounding environment and the installation location. Be sure to perform a confirmation of operation before using this product.
- *2 When a wireless LAN configuration of GT Designer3 the [Operation Mode] is set to [access point], the maximum connection number is a five (recommended).
- *3 The product with hardware version A or later (manufactured in December 2013) complies with the regulation. The product with hardware version A can be used only in Japan.
- *4 The product with hardware version B or later (manufactured from October 2014) complies with the regulation.

 The product with hardware version B or later can be used in Japan, the United States, the EU member states, Switzerland, Norway, Iceland, and Liechtenstein.
- *5 The product with hardware version D or later (manufactured from May 2016) complies with the regulation.

 The product with hardware version D or later can be used in Japan, the United States, the EU member states, Switzerland,
 Norway, Iceland, Liechtenstein, China (excluding Hong Kong, Macao, and Taiwan), and South Korea.

1.3.2 Option unit

Product name	Model	Specifications	
Multimedia unit	GT27-MMR-Z	For video input signal (NTSC/PAL) 1 ch, playing movie	
Video input unit	GT27-V4-Z	For video input signal (NTSC/PAL) 4 ch	
RGB input unit	GT27-R2 GT27-R2-Z	For analog RGB input signal 2 ch	
Video/RGB input unit	GT27-V4R1-Z	For video input signal (NTSC/PAL) 4 ch, for analog RGB mixed input signal 1 c	
RGB output unit	GT27-ROUT GT27-ROUT-Z	For analog RGB output signal 1 ch	
Sound output unit	GT15-SOUT	For sound output	
External I/O unit	GT15-DIOR	For the connection to external I/O device or operation panel (Negative Common Input/Source Type Output)	
GT15-DIO For the co		For the connection to external I/O device or operation panel (Positive Common Input/Sink Type Output)	

1.3.3 Conversion cables

Product name	Model	Specifications
	FA-LTBGT2R4CBL05	
RS-485 terminal block conversion modules	FA-LTBGT2R4CBL10	RS-422/485 (Connector) ← RS-485 (Terminal block) Supplied connection cable dedicated for the conversion unit
	FA-LTBGT2R4CBL20	eappined connection cable dedicated for the conversion and

1.3.4 Serial Multi-Drop Connection Unit

Product name	Model	Specifications
Serial multi-drop connection unit	GT01-RS4-M	GOT multi-drop connection module Mitsubishi Products 18. GOT MULTI-DROP CONNECTION

1.3.5 Field Network Adapter Unit

Product name	Model	Specifications
Field network adapter unit	GT25-FNADP	The field network adapter unit can be used with the following field networks by using the Anybus CompactCom M40 network communication module manufactured by HMS (hereinafter referred to as the communication module). Field networks: • PROFIBUS DP-V1 • DeviceNet How to incorporate the communication module to the field network adapter unit, and the details of the product name of the communication module, refer to the following manual.

1.3.6 Installing a unit on another unit (Checking the unit installation position)

This section describes the precautions for installing units on another unit.

For the installation method of each unit, refer to the User's Manual for the communication unit and option unit you are using.

For the method for installing a unit on another unit, refer to the following.

■ When using a bus connection unit


The installation position varies depending on the bus connection unit to be used.

(1) Wide bus units (GT15-75QBUS(2)L, GT15-75ABUS(2)L, GT15-QBUS2, GT15-ABUS2)

Install a bus connection unit in the 1st stage of the extension interface.

If a bus connection unit is installed in the 2nd stage or above, the unit cannot be used.


Example: Installing a bus connection unit and serial communication units

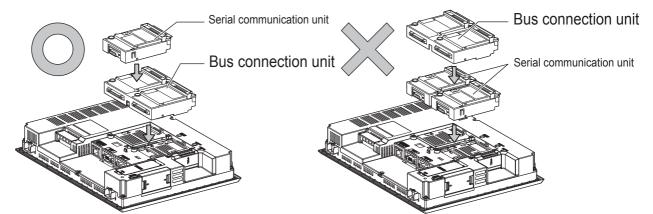

(2) Standard size bus connection unit (GT15-QBUS and GT15-ABUS)

A bus connection unit can be installed in any position (1st to 3rd stage) of the extension interface.

Example: Installing a bus connection unit and serial communication units

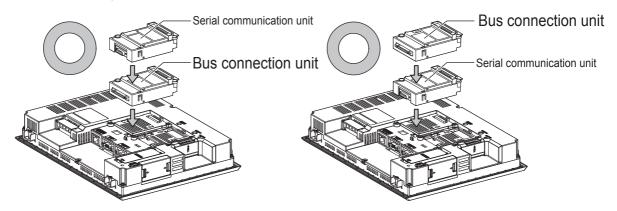


■ When using a MELSECNET/H communication unit, CC-Link IE Controller Network communication unit, or CC-Link communication unit (GT15-J61BT13)

Install a MELSECNET/H communication unit, CC-Link IE Controller Network communication unit, or CC-Link communication unit in the 1st stage of an extension interface.


If a bus connection unit is installed in the 2nd stage or above, the unit cannot be used.

Example: When installing a MELSECNET/H communication unit and a serial communication unit

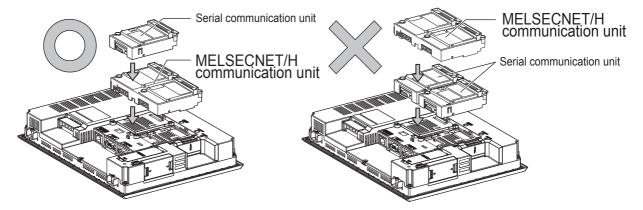

■ When using a serial communication unit


A serial communication unit can be installed in any position (1st to 3rd stage) of the extension interface.

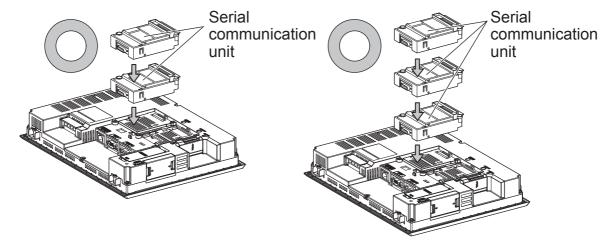

■ When using a field network adapter unit

A field network adapter unit can be installed in any position (1st to 3rd stage) of the extension interface. However, at the top of the field network adapter unit, you will not be able to mount the each communication unit.


Example: Installing a field network adapter unit

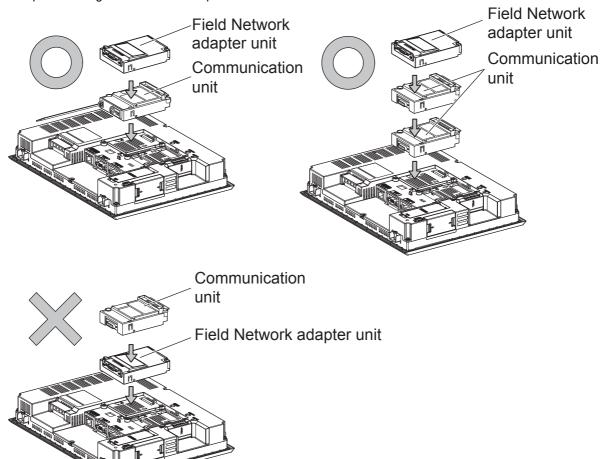

■ When using the sound output unit or external I/O unit

The sound output unit or external I/O unit can be installed in any position (1st to 3rd stage) of the extension interface.

Example: When installing a sound output unit

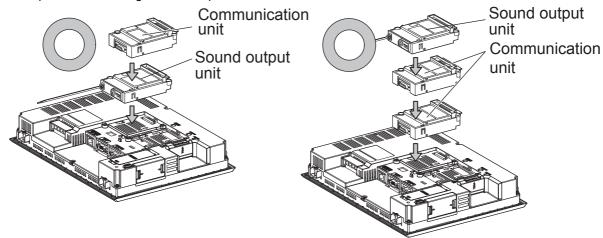


■ When using the video input unit, RGB input unit, video/RGB input unit, RGB output unit, or multimedia unit

Only either one of the video input unit, RGB input unit, video/RGB input unit, RGB output unit, or multimedia unit can be installed to the GOT.

Install the video input unit, RGB input unit, video/RGB input unit, RGB output unit, or multimedia unit at the 1st stage of the extension interface. These communication units cannot be used if installed in the 2nd or higher stage. When any of these units is used, the communication units indicated below must be installed in the 2nd stage of the extension interface.

Communication unit	Model	
Bus connection unit	GT15-QBUS2,	GT15-ABUS2
MELSECNET/H communication unit	GT15-J71LP23-25,	GT15-J71BR13
CC-Link IE Controller Network connection	GT15-J71GP23-SX	
CC-Link communication unit	GT15-J61BT13	

Example: When installing a video input unit and a MELSECNET/H communication unit

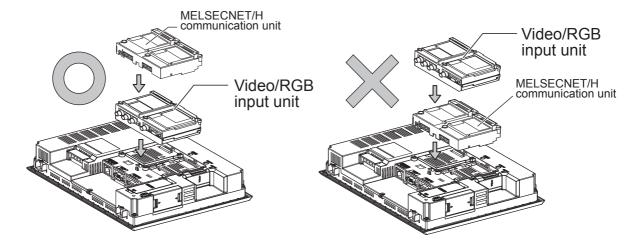

1.4 Connection Cables for the Respective Connection

To connect the GOT to a device in the respective connection type, connection cables between the GOT and a device are necessary.

For cables needed for each connection, refer to each chapter for connection.

1.4.1 GOT connector specifications

The following shows the connector specifications on the GOT side. Refer to the following table when preparing connection cables by the user.

■ RS-232 interface

Use the following as the RS-232 interface and the RS-232 communication unit connector on the GOT. For the GOT side of the connection cable, use a connector and connector cover applicable to the GOT connector.

(1) Connector specifications

GOT	Hardware Version	Connector type	Connector model	Manufacturer
GT27 GT25 GT23 GT2105-QTBDS GT2105-QMBDS	-	9-pin D-sub (male) inch screw fixed type	17LE-23090-27(D4C□)	DDK Ltd.
GT15-RS2-9P	-	9-pin D-sub (male)	17LE-23090-27(D3CC)	DDK Ltd.
GT01-RS4-M	-	inch screw fixed type		
GT2104-RTBD GT2104-PMBDS2 GT2103-PMBDS2	-	9-pin terminal block*1	MC1.5/9-G-3.5BK	PHOENIX CONTACT Inc

^{*1} The terminal block (MC1.5/9-ST-3.5 or corresponding product) of the cable side is packed together with the GT2104-RTBD, GT2103-PMBDS2.

(2) Connector pin arrangement

GT27, GT25, GT23, GT15-RS2-9P, GT01-RS4-M	GT2104-RTBD, GT2103-PMBDS2	
GOT main part connector see from the front	See from the back of a GOT main part	
1 5	N N C R S D TT R S C C C S S G R R D D 9-pin terminal block	

■ RS-422/485 interface

Use the following as the RS-422/485 interface and the RS-422/485 communication unit connector on the GOT. For the GOT side of the connection cable, use a connector and connector cover applicable to the GOT connector.

(1) Connector model

GOT	Connector type	Connector model	Manufacturer
GT27 GT25 GT23 GT2105-QTBDS GT2105-QMBDS	9-pin D-Sub (female) M2.6 millimeter screw fixed type	17LE-13090-27(D2AC)	DDK Ltd.
GT2104-PMBD GT2103-PMBD	5-pin terminal block ^{*1}	MC1.5/5-G-3.5BK	PHOENIX CONTACT Inc
GT2104-RTBD GT2104-PMBDS GT2104-PMBLS GT2103-PMBDS GT2103-PMBLS	9-pin terminal block*2	MC1.5/9-G-3.5BK	PHOENIX CONTACT Inc
GT15-RS4-9S GT01-RS4-M	9-pin D-Sub (female) M2.6 millimeter screw fixed type	17LE-13090-27(D3AC)	DDK Ltd.
GT15-RS4-TE	-	-	SL-SMT3.5/10/90F BOX

^{*1} The terminal block (MC1.5/5-ST-3.5 or corresponding product) of the cable side is packed together with the GT2103-PMBD.

(2) Connector pin arrangement

GT27, GT25, GT23, GT2105-QTBDS, GT2105-QMBDS, GT01-RS4-M	GT2104-PMBD, GT2103-PMBD	GT2104-RTBD GT2104-PMBDS GT2104-PMBLS GT2103-PMBDS GT2103-PMBLS	
GOT main part connector see from the front	See from the back of a GOT main part	See from the back of a GOT main part	
5 1 0 0 9 6 9-pin D-sub (female)	SDD	C C RR S G B D B B B B B B B B B B B B B B B B B	


^{*2} The terminal block (MC1.5/9-ST-3.5 or corresponding product) of the cable side is packed together with the GT2104-RTBD, GT2103-PMBDS, GT2103-PMBLS.


1.4.2 Coaxial cableconnector connection method


The following describes the method for connecting the BNC connector (connector plug for coaxial cable) and the cable.

ACAUTION


Solder the coaxial cable connectors properly.
 Insufficient soldering may result in malfunctions.

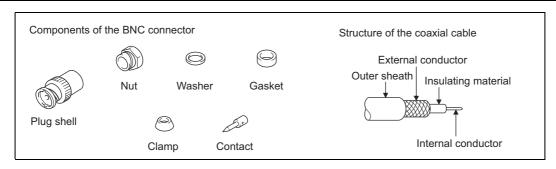

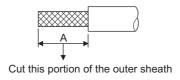


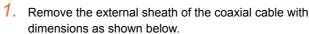

Cable in use	Α
3C-2V	15 mm
5C-2V, 5C-2V-CCY	10 mm

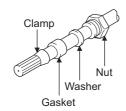

Pass the nut, washer, gasket, and clamp through the coaxial cable as shown on the left and loosen the external conductor.

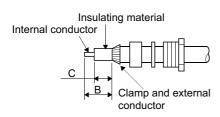

Cut the external conductor, insulting material, and internal
conductor with the dimensions as shown below.
Note that the external conductor should be cut to the same
dimension as the tapered section of the clamp and smoothed
down to the clamp.

Cable in use	В	С
3C-2V	6 mm	3 mm
5C-2V, 5C-2V-CCY	7 mm	5 mm



4. Solder the contact to the internal conductor.



5. 4. Insert the connector assembly shown in ### into the plug shell and screw the nut into the plug shell.

Precautions for soldering

Note the following precautions when soldering the internal conductor and contact.

- · Make sure that the solder does not bead up at the soldered section.
- · Make sure there are no gaps between the connector and cable insulator or they do not cut into each other.
- · Perform soldering quickly so the insulation material does not become deformed.

1.4.3 Terminating resistors of GOT

The following shows the terminating resistor specifications on the GOT side. When setting the terminating resistor in each connection type, refer to the following.

RS-422/485 communication unit


Set the terminating resistor using the terminating resistor setting switch.

Tamain ating pagints.*1	Switch No.						
Terminating resistor*1	1	2					
100 OHM	ON	ON					
Disable	OFF	OFF					



*1 The default setting is "Disable".

• For RS422/485 communication unit

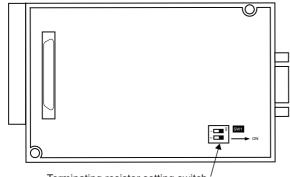

Terminating resistor setting switch

Rear view of RS-422/485 communication unit.

■ GT27


Set the terminating resistor using the terminating resistor setting switch.

Terminating resistor*1	Switch No.					
Terminating resistor	1	2				
100 OHM	ON	ON				
Disable	OFF	OFF				



*1 The default setting is "Disable".

• For GT2710-V

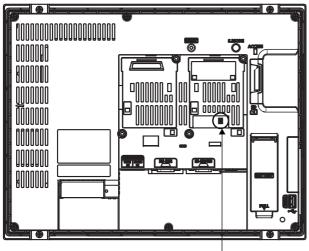

Terminating resistor setting switch (inside the cover)

■ GT25


Set the terminating resistor using the terminating resistor setting switch.

Terminating resistor*1	Switch No.					
reminating resistor	1	2				
100 OHM	ON	ON				
Disable	OFF	OFF				



*1 The default setting is "Disable".

• For GT2510-V

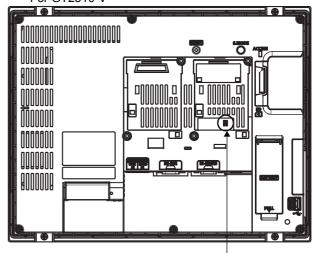

Terminating resistor setting switch (inside the cover)

■ GT23


Set the terminating resistor using the terminating resistor setting switch.

T*1	Switch No.					
Terminating resistor*1	1	2				
100 OHM	ON	ON				
Disable	OFF	OFF				



*1 The default setting is "Disable".

• For GT2310-V

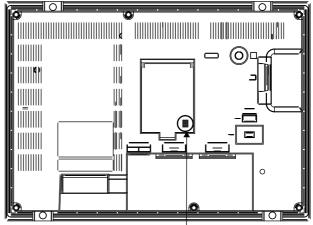


Terminating resistor setting switch (inside the cover)

■ GT21

Set the terminating resistor using the terminating resistor setting switch.

• For GT2103-PMBD

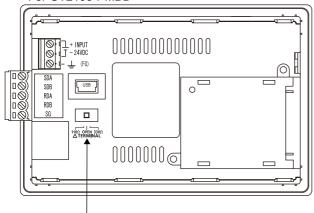

Terminating resistor selector switch


1.5 Verifying GOT Recognizes Connected Equipment

Verify the GOT recognizes controllers on [Communication Settings] of the Utility.


- · Channel number of communication interface, communication drivers allocation status
- · Communication unit installation status

For details on the Utility, refer to the following manual.

GOT2000 Series User's Manual (Utility)

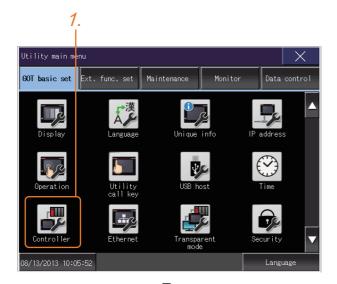

 After powering up the GOT, touch [GOT basic set] → [Controller] from the Utility.

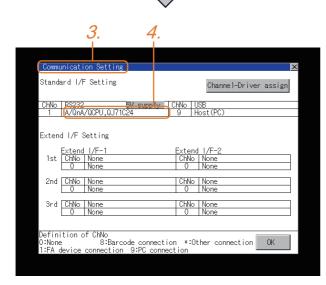


- 2. The [Communication Settings] appears.
- Verify that the communication driver name to be used is displayed in the communication interface box to be used.
- When the communication driver name is not displayed normally, carry out the following procedure again.
 - 1.1Setting the Communication Interface



Utility

(1) How to display Utility (at default)

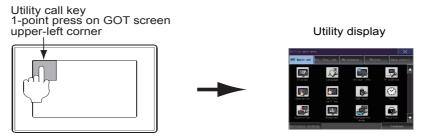

(2) Utility call

When setting [Pressing time] to other than 0 second on the setting screen of the utility call key, press and hold the utility call key until the buzzer sounds. For the setting of the utility call key, refer to the following.

GOT2000 Series User's Manual (Utility)

(3) Communication interface setting by the Utility

The communication interface setting can be changed on the Utility's [Communication setting] after writing [Communication Settings] of project data.

For details on the Utility, refer to the following manual.

GOT2000 Series User's Manual (Utility)

(4) Precedence in communication settings

When settings are made by GT Designer3 or the Utility, the latest setting is effective.

1.6 Checking for Normal Monitoring


1.6.1 Check on the GOT

Check for errors occurring on the GOT

Presetting the system alarm to project data allows you to identify errors occurred on the GOT, PLC CPU, servo amplifier and communications.

For details on the operation method of the GOT Utility screen, refer to the following manual.

GOT2000 Series User's Manual (Utility)

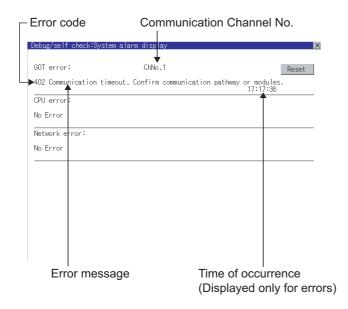



Alarm popup display

With the alarm popup display function, alarms are displayed as a popup display regardless of whether an alarm display object is placed on the screen or not (regardless of the display screen).

Since comments can be flown from right to left, even a long comment can be displayed all.

For details of the alarm popup display, refer to the following manual.

GT Designer3 (GOT2000) Screen Design Manual


■ Perform an I/O check

Whether the PLC can communicate with the GOT or not can be checked by the I/O check function. If this check ends successfully, it means correct communication interface settings and proper cable connection. Display the I/O check screen by Main Menu.

• Display the I/O check screen by [Main menu] → [Self check] → [I/O check].


For details on the I/O check, refer to the following manual:

GOT2000 Series User's Manual (Utility)

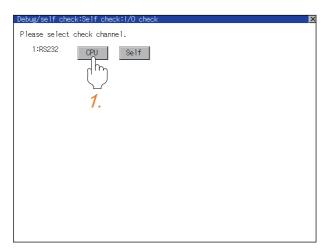

Touch [CPU] on the I/O check screen.
 Touching [CPU] executes the communication check with the connected PLC.



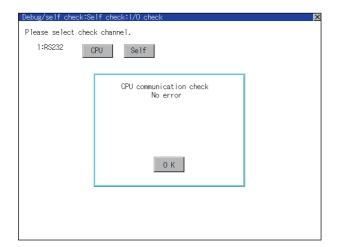


2. When the communication screen ends successfully, the screen on the left is displayed.

Communication monitoring function

The communication monitoring is a function that checks whether the PLC can communicate with the GOT. If this check ends successfully, it means correct communication interface settings and proper cable connection. Display the communication monitoring function screen by [Main Menu] \rightarrow [Comm. Setting] \rightarrow [Comm. Monitor]. For details on the communication monitoring function, refer to the following manual:

GOT2000 Series User's Manual (Utility)

(Operation of communication monitoring function screen)

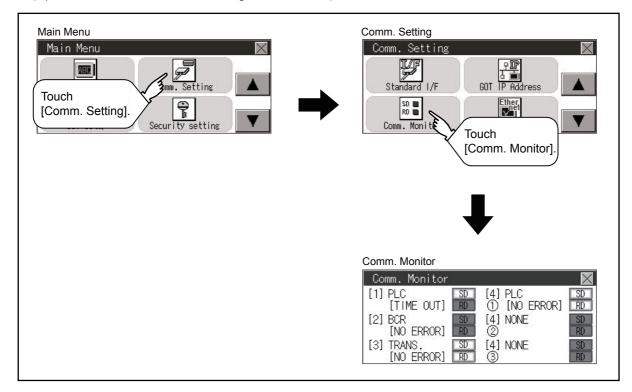


1.6.2 Confirming the communication state on the GOT side (For Ethernet connection)

- Confirming the communication state on Windows[®], GT Designer3
 - (1) When using the Command Prompt of Windows[®]
 Execute a Ping command at the Command Prompt of Windows[®].
 - (a) When normal communication
 C:\>Ping 192.168.3.18
 Reply from 192.168.3.18: bytes=32 time<1ms TTL=64
 - (b) When abnormal communication C:\>Ping 192.168.3.18 Request timed out.
 - (2) When using the [Connection Test] of GT Designer3
 Select [Communication] → [Communication settings] from the menu to display [TEST].



- 1. Set the [PC side I/F] to the [Ethernet].
- Specify the [GOT IP Address] of the [Communication Configuration] and click the [Test] button.

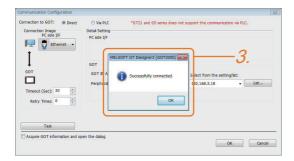

Check if GT Designer3 has been connected to the GOT.

(4) When abnormal communication


At abnormal communication, check the followings and execute the Ping command or [Connection Test] again.

- · Mounting condition of Ethernet communication unit
- · Cable connecting condition
- Confirmation of [Communication Settings]
- · IP address of GOT specified by Ping command

■ Confirming the communication state on the GOT

[PING Test] can be confirmed by the Utility screen of the GOT. For details on the operation method of the GOT Utility screen, refer to the following manual.

GOT2000 Series User's Manual (Utility)

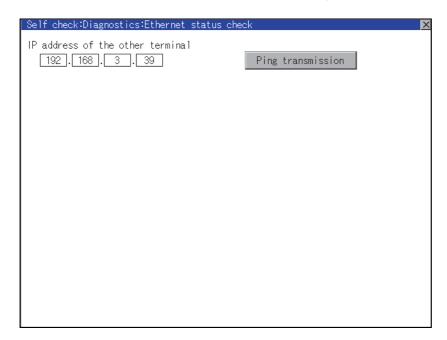

1.6.3 Confirming the communication state to each station (Station monitoring function)

The station monitoring function detects the faults (communication timeout) of the stations monitored by the GOT. When detecting the abnormal state, it allocates the data for the faulty station to the GOT special register (GS).

- (1) No. of faulty stations
 - (a) Ethernet connection (Except for Ethernet multiple connection) Total No. of the faulty CPU is stored.

Device	b15 to b8	b7 to b0
GS230	(00н fixed)	No. of faulty stations

(b) Ethernet multiple connectionTotal No. of the faulty connected equipment is stored.

Channel	Device	b15 to b8	b7 to b0
Ch1	GS280	(00H fixed)	No. of faulty stations
Ch2	GS300	(00H fixed)	No. of faulty stations
Ch3	GS320	(00H fixed)	No. of faulty stations
Ch4	GS340	(00H fixed)	No. of faulty stations




When monitoring GS230 on Numerical Display

When monitoring GS230 on Numerical Display, check [mask processing] with data operation tab as the following. For the data operation, refer to the following manual.

GT Designer3 (GOT2000) Screen Design Manual


Numerical Display (Data Operation tab)

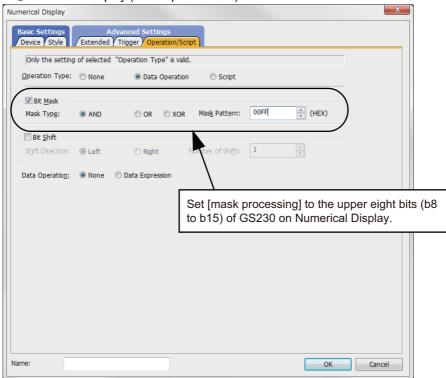

(2) Faulty station information

The bit corresponding to the faulty station is set. (0: Normal, 1: Abnormal) The bit is reset after the fault is recovered.

(a) Ethernet connection (Except for Ethernet multiple connection)

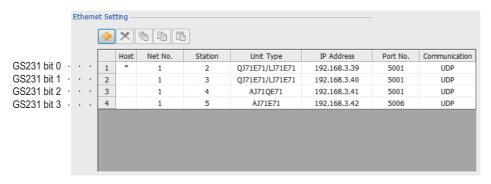

Device	Ethernet setting No.															
Device	b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
GS231	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
GS232	32	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17
GS233	48	47	46	45	44	43	42	41	40	39	38	37	36	35	34	33
GS234	64	63	62	61	60	59	58	57	56	55	54	53	52	51	50	49
GS235	80	79	78	77	76	75	74	73	72	71	70	69	68	67	66	65
GS236	96	95	94	93	92	91	90	89	88	87	86	85	84	83	82	81
GS237	112	111	110	109	108	107	106	105	104	103	102	101	100	99	98	97
GS238	128	127	126	125	124	123	122	121	120	119	118	117	116	115	114	113

(b) Ethernet connection, CC-Link IE Controller Network connection, CC-Link IE Field Network connection, Temperature controller connection, Inverter connection, Servo amplifier connection.

The station number to which each device corresponds changes according to the connection/non connection with Ethernet.

With Ethernet connection: 1 to 128

With other than Ethernet connection: 0 to 127

Example) With Ethernet connection, when PC No. 100 CPU connecting to Ch3 is faulty, GS327.b3 is set.

• With Ethernet connection: 1 to 128

			Station number																
Ch1	Ch2	Ch3	Ch4	b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
GS281	GS301	GS321	GS341	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
GS282	GS302	GS322	GS342	32	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17
GS283	GS303	GS323	GS343	48	47	46	45	44	43	42	41	40	39	38	37	36	35	34	33
GS284	GS304	GS324	GS344	64	63	62	61	60	59	58	57	56	55	54	53	52	51	50	49
GS285	GS305	GS325	GS345	80	79	78	77	76	75	74	73	72	71	70	69	68	67	66	65
GS286	GS306	GS326	GS346	96	95	94	93	92	91	90	89	88	87	86	85	84	83	82	81
GS287	GS307	GS327	GS347	112	111	110	109	108	107	106	105	104	103	102	101	100	99	98	97
GS288	GS308	GS328	GS348	128	127	126	125	124	123	122	121	120	119	118	117	116	115	114	113

• With other than Ethernet connection: 0 to 127

	De	vice		Station number															
Ch1	Ch2	Ch3	Ch4	b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
GS281	GS301	GS321	GS341	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0 *1
GS282	GS302	GS322	GS342	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
GS283	GS303	GS323	GS343	47	46	45	44	43	42	41	40	39	38	37	36	35	34	33	32
GS284	GS304	GS324	GS344	63	62	61	60	59	58	57	56	55	54	53	52	51	50	49	48
GS285	GS305	GS325	GS345	79	78	77	76	75	74	73	72	71	70	69	68	67	66	65	64
GS286	GS306	GS326	GS346	95	94	93	92	91	90	89	88	87	86	85	84	83	82	81	80
GS287	GS307	GS327	GS347	111	110	109	108	107	106	105	104	103	102	101	100	99	98	97	96
GS288	GS308	GS328	GS348	127 *1*2	126 *1*2	125 *1*2	124 *1*2	123 *1*2	122 *1*2	121 *1*2	120	119	118	117	116	115	114	113	112

- *1 When CC-Link IE controller network connection is not used.
- *2 When CC-Link IE field network connection is not used.

For details on the GS Device, refer to the following help.

GT Designer3 (GOT2000) Screen Design Manual

(3) Network No., station No. notification

The network No. and station No. of the GOT in Ethernet connection are stored at GOT startup. If connected by other than Ethernet, 0 is stored.

	Dev	vice	Description				
CH1	CH2	CH3	CH4	Description			
GS376	GS378	GS380	GS382	Network No. (1 to 239)			
GS377	GS379	GS381	GS383	Station No. (1 to 64)			



CONNECTIONS TO NON-MITSUBISHI PRODUCTS

2.	CONNECTION TO IAI ROBOT CONTROLLER2 -	1
3.	CONNECTION TO AZBIL (former YAMATAKE) CONTROL EQUIPMENT	1
4.	CONNECTION TO OMRON PLC	1
5.	CONNECTION TO OMRON TEMPERATURE CONTROLLER5 -	1
6.	CONNECTION TO KEYENCE PLC6 -	1
7.	CONNECTION TO KOYO EI PLC	1
8.	CONNECTION TO JTEKT PLC8 -	1
9.	CONNECTION TO SHARP PLC	1
10.	CONNECTION TO SHINKO TECHNOS INDICATING CONTROLLER	1
11.	CONNECTION TO CHINO CONTROLLER11 -	1
12.	CONNECTION TO TOSHIBA PLC	1
13.	CONNECTION TO TOSHIBA MACHINE PLC13 -	1
14.	CONNECTION TO PANASONIC SERVO AMPLIFIER 14 -	1
15.	CONNECTION TO PANASONIC INDUSTRIAL DEVICES SUN PLC	



2

CONNECTION TO IAI ROBOT CONTROLLER

2.1	Connectable Model List
2.2	System Configuration
2.3	Connection Diagram 2 - 17
2.4	GOT Side Settings
2.5	Robot Controller Side Setting
2.6	Device Range that Can Be Set 2 - 29
2.7	Precautions

2. CONNECTION TO IAI ROBOT CONTROLLER


2.1 Connectable Model List

The following table shows the connectable models.

Series	Model name	Clock	Communication Type	Connectable GOT	Refer to
	XSEL-J				
	XSEL-K	XSEL-KE XSEL-KT			
	XSEL-KE				
	XSEL-KT				
	XSEL-KET				
Y_QEI	X-SEL-P XSEL-Q				
A-GLL	XSEL-Q				
	XSEL-JX	×	RS-232	27 25 23 21 GS	2.2.1
	XSEL-KX				
	XSEL-KTX				
	XSEL-PX				
	XSEL-QX				
SSEL	SSEL				
ASEL	ASEL				
PSEL	PSEL				
	PCON-C				
	PCON-CG				
	PCON-CF				
	PCON-CY				
PCON	PCON-SE				
	PCON-PL				
	PCON-PO				
	PCON-CA				
	PCON-CFA	×	RS-232	27 25 GT GT GS	2.2.2
	ACON-C		RS-422	27 25 23 21 93	2.2.2
	ACON-CG				
ACON	ACON-CY				
AOON	ACON-SE				
	ACON-PL				
	ACON-PO				
SCON	SCON-C				
	SCON-CA				
ERC2	ERC2				

2.2 System Configuration

2.2.1 System Configuration for connecting to X-SEL, SSEL, ASEL, PSEL

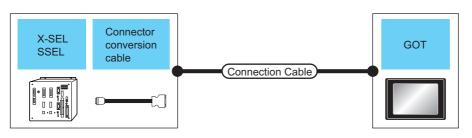



PLC RS-232C Communication		Connection cable		GC	ОТ	Number of	
Model name	RS-232C adapter	Communication Type	Cable model Connection diagram number	Max. distance	Option device	Model	connectable equipment
					- (Built into GOT)	GT 25 27 25 GT 27000 GS	
X-SEL (Teaching connector)				10m	GT15-RS2-9P	er er 27 25	
	- F	RS-232			GT10-C02H- 6PT9P*2	GT _{0.3P} GT _{0.3P} 210-4P Z10-4P R4 R2	
			CB-ST-E1MW050*1 + User RS-232 connection diagram 4) or User RS-232 connection	10m	(Built into GOT)	GT ₀ 04R GT ₀ 03P 21 21 21 22 22 22 22 22 22 22 22 22 22 2	1 GOT for 1 Controller
			diagram 5)			GT GT	
		- RS-232			- (Built into GOT)	GS GT	
X-SEL			(User) RS-232 connection diagram 2)	10m	GT15-RS2-9P	er er 27 25	
(General RS232C port connector)	-				GT10-C02H- 6PT9P*2	GT 03P 2103P 2104P R4 R2 R2	
			User RS-232 connection diagram 6)	10m	- (Built into GOT)	GT _{OSP} 210 ^{4R} GT _{OSP} 210 ^{4P} R2	


	PLC		Connection cable		GO	ОТ	Number of	
Model name	RS-232C adapter	Communication Type	Cable model Connection diagram number	Max. distance	Option device	Model	connectable equipment	
	CB-SEL-SJ002*1 F				- (Built into GOT)	et 27 25 27 25 33 27000 GS		
		RS-232	CB-ST-E1MW050*1	10m GT15-RS2-9P		et et 27 25		
SSEL ASEL PSEL					GT10-C02H- 6PT9P*2	GT 03P GT 03P 210-IP 2104P R4 R2 R2	1 GOT for 1 Controller	
			CB-ST-E1MW050*1 + (User) RS-232 connection diagram 4) or (User) RS-232 connection diagram 5)	10m	- (Built into GOT)	GT OAR 27 CUP 27		

Product manufactured by IAI Corporation. For details of the product, contact IAI Corporation.

When a GT10-C02H-6PT9P unit of the sub version A or B is used, do not ground the case of the D-sub (9-pin) connector.

2.2.2 System Configuration for connecting to PCON, ACON, SCON, ERC2

- When connecting to one controller
 - (1) When using the RS-232 connection
 - (a) PCON, ACON, SCON, ERC2 (SIO specifications), ERC2 (NP/PN specifications)

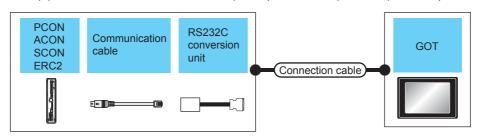




	Control	ler		Connection	cable	GOT		Number of	
Model name	Communication cable	RS232C conversion unit	Communication Type	Connection diagram number	Max. distance	Option device	Model	connectable equipment	
						- (Built into GOT)	27 25 67 25 23 21 GS		
PCON ACON SCON ERC2 (NP/PN specifications)*3	CB-RCA-SIO050*1 (5m)	RCB-CV-MW ^{*1}	RS-232	-	-	GT15-RS2-9P	ет ет 27 25	1 GOT for 1	
		(5m) (0.3	(0.3m)	110 202			GT10-C02H- 6PT9P* ⁴		Controller
				User RS-232 connection diagram 7)		- (Built into GOT)	GT 04R GT 03P 2104P R2		
						- (Built into GOT)	27 25 27 25 23 ²¹		
ERC2 (SIO	CB-ERC2-SIO020*1 + CB-ERC2-PWBIO	RCB-CV-MW*1	RS-232	-	-	GT15-RS2-9P	GT15-RS2-9P	1 GOT for 1	
specifications)*2	or CB-ERC2-PWBIO	or CB-ERC2-PWBIO	110 202			GT10-C02H- 6PT9P ^{*4}	GT 03P 2104P R4 R2	Controller	
				User)RS-232 connection diagram 7)	10m	- (Built into GOT)	GT 04RR GT 03P 21 04P R2		

- Product manufactured by IAI Corporation. For details of the product, contact IAI Corporation.
- *2 Use ERC2-[]-[]-[]-[]-SE-[]-[].
- *4 When a GT10-C02H-6PT9P unit of the sub version A or B is used, do not ground the case of the D-sub (9-pin) connector.

(b) ERC2 (NP/PN specifications) only

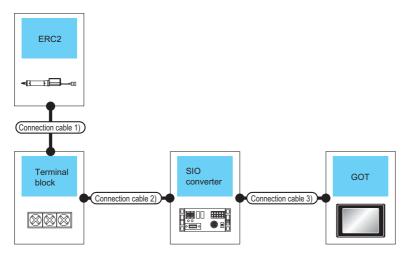



Controller	Connection cable 1)*1		Connection cable 2)		SIO co	nverter*1	Connection of	cable 3)	G	ОТ	Number of		
Model name	Cable model	Terminal block	Connection diagram number	Max. distance	Model name	Communi cation Type	Cable model Connection diagram number	Max. distance	Option device	Model	connectable equipment		
ERC2 (NP/PN specifications) CB-E PW	CB-ERC-PWBIO CB-ERC-PWBIO CB-ERC-PWBIO	Terminal block (User preparing)	User (print) RS-422/485 connection diagram 7) or User (print) RS-422/485 connection diagram 8)			D0 000	RCB-CV- MW ^{*1} (0.3m) + CB-RCA- SIO050 ^{*1} (5m)		- (Built into GOT)	ет 27 25 ет 23 21 ет Стром ет Стром ет Стром ет Стром			
		or CB-ERC- PWBIO	or CB-ERC- PWBIO			100m	RCB- TU- SIO-□	RS-232	or User Preparts RS-232 connection diagram 3)	15m	GT15- RS2-9P	GT GT 25	1 GOT for 16 Controller
		RC □ -TU-PIO*1	RS-422/485 connection diagram 9)						GT10- C02H- 6PT9P *3	GT 03P 2104P R4 R2			
							RS-232	User (pressing) 2 connection gram 8)		- (Built into GOT)	GT _{04R} GT _{03P} 2104P R2		

^{*1} Product manufactured by IAI Corporation. For details of the product, contact IAI Corporation.

^{*3} When a GT10-C02H-6PT9P unit of the sub version A or B is used, do not ground the case of the D-sub (9-pin) connector.


Communication driver


IAI ROBO CYLINDER

▔▎▘

(2) When using the RS-422/485 cable

(a) PCON, ACON, SCON, ERC2 (SIO specifications), ERC2 (NP/PN specifications)

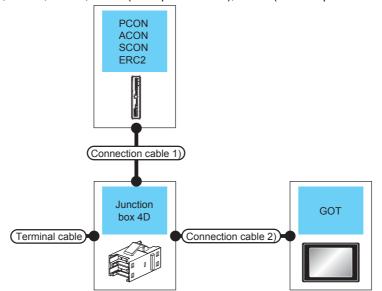

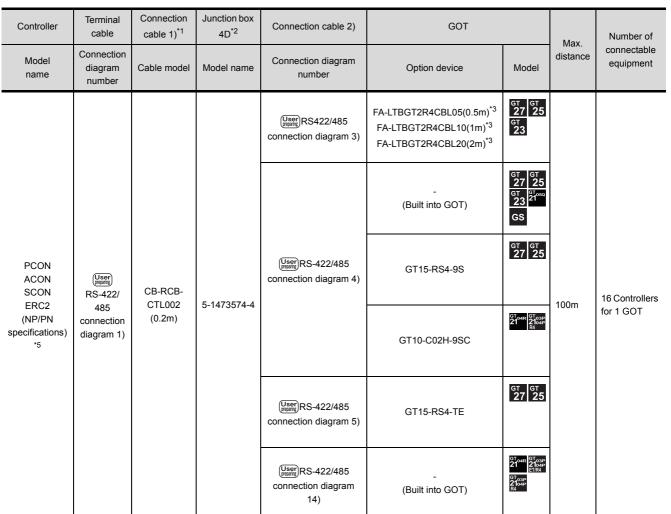

Controller	Terminal cable	Connection cable 1)*1	Junction box 4D*2	Connection cable 2)	GOT		Max.	Number of
Model name	Connection diagram number	Cable model	Model name	Connection diagram number	Option device	Model	distance	connectable equipment
				(User) RS422/485 connection diagram 3)	FA-LTBGT2R4CBL05(0.5m)*3 FA-LTBGT2R4CBL10(1m)*3 FA-LTBGT2R4CBL20(2m)*3	ет 27 25 ет 23		
			- (Built into GOT)	GS GT GT 25 GT 25 GT 21 GT				
ERC2 (SIO	User) (Preserve) (Pres	CB-ERC2- CTL001 + CB-ERC2- PWBIO	5-1473574-4	(User proving) RS-422/485 connection diagram 4)	GT15-RS4-9S	ет 27 25	- 100m	16 Controllers
specifications) *4		or CB-ERC2- PWBIO □□□ -RB	LI RC2- IIO		GT10-C02H-9SC	GT 04R 2104P 2104P R4	100	for 1 GOT
				RS-422/485 connection diagram 5)	GT15-RS4-TE	ет ет 27 25		
				RS-422/485 connection diagram	- (Built into GOT)	GT 03P 2104P ET/R4 GT 03P 2104P R4		


^{*1} Product manufactured by IAI Corporation. For details of the product, contact IAI Corporation.

^{*2} Product manufactured by Tyco Electronics. For details of the product, contact Tyco Electronics.

^{*3} Product manufactured by MITSUBISHI ELECTRIC ENGINEERING COMPANY LIMITED. For details of the product, contact MITSUBISHI ELECTRIC ENGINEERING COMPANY LIMITED.

^{*4} Use ERC2-[]-[]-[]-[]-SE-[]-[].

(b) ERC2 (NP/PN specifications) only

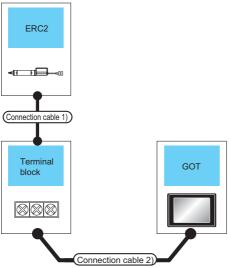




Controller	Connection cable 1)*1	TiI blli	Connection cable 2)	GOT		Max.	Number of
Model name	Cable model	Terminal block	Connection diagram number	Option device	Model	distance	connectable equipment
			User (yrgirig) RS-422/485 connection diagram 10)	FA-LTBGT2R4CBL05(0.5m)*2 FA-LTBGT2R4CBL10(1m)*2 FA-LTBGT2R4CBL20(2m)*2	27 25 27 25 6T 23		
				- (Built into GOT)	GT GT 25 25 23 GT 21 GS		16 Controllers for 1 GOT
ERC2 (NP/PN	CB-ERC- PWBIO	Terminal block	(User) RS-422/485 connection diagram 11)	GT15-RS4-9S	ет ет 27 25	100m	
specifications)*3	or CB-ERC- PWBIO □□□-RB	CB-ERC- PWBIO (User preparing)		GT10-C02H-9SC	GT _{04R} GT _{03P} 21 ^{04P} R4		
			(User) RS-422/485 connection diagram 12)	GT15-RS4-TE	बर बर 27 25		
			(User) RS-422/485 connection diagram 15)	- (Built into GOT)	GT 04R GT 03P 2104P ET/R4 GT 03P 2104P R4		

- Product manufactured by IAI Corporation. For details of the product, contact IAI Corporation.

 Product manufactured by MITSUBISHI ELECTRIC ENGINEERING COMPANY LIMITED. For details of the product, contact *2 MITSUBISHI ELECTRIC ENGINEERING COMPANY LIMITED.
- *3 Use the following models: ERC2-[]-[]-[]-[]-NP-[]-[], ERC2-[]-[]-[]-[]-[]-[]-[]-[]

■ When connecting to multiple controllers

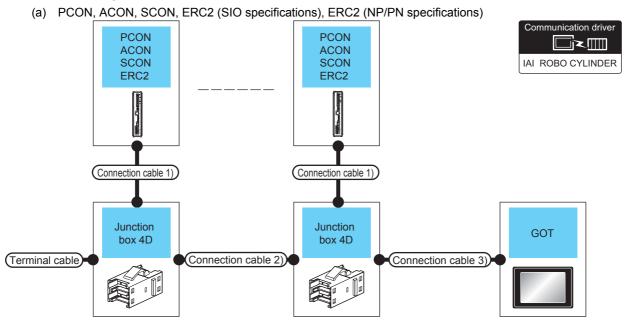

Controller	Terminal cable	Connection cable 1)*1	Junction box 4D*2	Connection cable 2)	Connection cable 3)	GOT		Max.	Number of		
Model name	Connection diagram number	Cable model	Model name	Connection diagram number	Connection diagram number	Option device	Model	disatance	connectable equipment		
				RS422/485 connection diagram 3)	FA-LTBGT2R4CBL05(0.5m)*3 FA-LTBGT2R4CBL10(1m)*3 FA-LTBGT2R4CBL20(2m)*3	ет 27 25 ет 23					
									- (Built into GOT)	GS GT GT 25 GT 23 GT 21 GS	
PCON ACON	User greating	S-422/ CB-RCB- 485 CTL002 5-1473574 nection (0.2m)	RS-422/ 485 connection diagram 4)	GT15-RS4-9S	ет ет 27 25	ह्म हम 27 25	16				
SCON ERC2 (NP/PN specifications) *5	485 connection diagram 1)		5-1473574-4	RS-422/ 485 connection diagram 2)		GT10-C02H-9SC	GT ₀ 3P 21 ^{04R} 21 _{04P} R4	100m	Controllers for 1 GOT		
				RS 4 conn	User Presents RS-422/ 485 connection diagram 5)	GT15-RS4-TE	ет ет 27 25				
					User [1759418] RS-422/ 485 connection diagram 14)	- (Built into GOT)	GT04P 2104P ET/R4 GT03P 2104P R4				

Controller	Terminal cable	Connection cable 1)*1	Junction box $4D^{*2}$	Connection cable 2)	Connection cable 3)	GOT		Max.	Number of
Model name	Connection diagram number	Cable model	Model name	Connection diagram number	Connection diagram number	Option device	Model	disatance	connectable equipment
					RS422/485 connection diagram 3)	FA-LTBGT2R4CBL05(0.5m)*3 FA-LTBGT2R4CBL10(1m)*3 FA-LTBGT2R4CBL20(2m)*3	ет 27 25 ет 23		
						- (Built into GOT)	GS GT 25 GT 25 GT 21 GT		
ERC2	(User preparing)	PWBIO ction or	5-1473574-4 2-	User Proports RS-422/ 485 connection diagram 2)	User RS-422/ 485 connection diagram 4) User User RS-422/ 485 connection diagram 5) User RS-422/ 485 connection diagram 5)	GT15-RS4-9S	ет ет 27 25		16
(SIO specifications) *4	RS-422/ 485 connection diagram 1)					GT10-C02H-9SC	GT _{04P} 21 _{03P} 21 _{04P} R4	100m	Controllers for 1 GOT
						GT15-RS4-TE	^{ст} 27 25		
						- (Built into GOT)	GT04R 2104P 2104P ET/R4 GT03P 2104P R4		

^{*1} Product manufactured by IAI Corporation. For details of the product, contact IAI Corporation.


ERC2-[]-[]-[]-[]-NP-[]-[], ERC2-[]-[]-[]-[]-[]-PN-[]-[]

^{*2} Product manufactured by Tyco Electronics. For details of the product, contact Tyco Electronics.

^{*3} Product manufactured by MITSUBISHI ELECTRIC ENGINEERING COMPANY LIMITED. For details of the product, contact MITSUBISHI ELECTRIC ENGINEERING COMPANY LIMITED.

^{*4} Use ERC2-\(_-\)-\(_-\)-\(_-\)

^{*5} Use the following models.

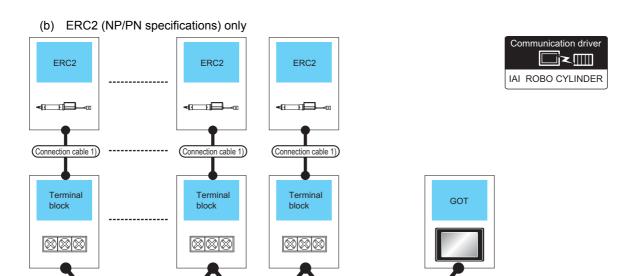


Controller	Connection cable 1)*1	Terminal block	Connection cable 2)	GOT		Max.	Number of connectable equipment
Model name	Cable model	Terriiriai biock	Connection diagram number	Option device	Model	disatance	
			User (Justing) RS-422/485 connection diagram 10)	FA-LTBGT2R4CBL05 (0.5m)*2 FA-LTBGT2R4CBL10 (1m)*2 FA-LTBGT2R4CBL20 (2m)*2	ет ет 27 25 ет 23		
				- (Built into GOT)	GT GT 25 GT 25 GT 23 GT 21 GS		
ERC2 (NP/PN	CB-ERC- PWBIO	Terminal block	(User) (VSer) (V	GT15-RS4-9S	ет ет 27 25	100m	16 Controllers
specifications)*4	specifications)*4 or CB-ERC-PWBIO □□□-RB	(User preparing)		GT10-C02H-9SC	GT _{04R} GT _{03P} 21 ^{04P} R4	100111	for 1 GOT
			(User) RS-422/485 connection diagram 12)	GT15-RS4-TE	ет ет 27 25		
			User (Jugard) RS-422/485 connection diagram 15)	- (Built into GOT)	GT _{04R} GT _{03P} 21 ^{04R} 21 ^{04P} ET/R4 GT _{03P} 21 ^{04P} R4		

^{*1} Product manufactured by IAI Corporation. For details of the product, contact IAI Corporation.

^{*2} Product manufactured by MITSUBISHI ELECTRIC ENGINEERING COMPANY LIMITED. For details of the product, contact MITSUBISHI ELECTRIC ENGINEERING COMPANY LIMITED.

■ When connecting to multiple controllers (via SIO converter)

(a) PCON, ACON, SCON, ERC2 (SIO specifications), ERC2 (NP/PN specifications)

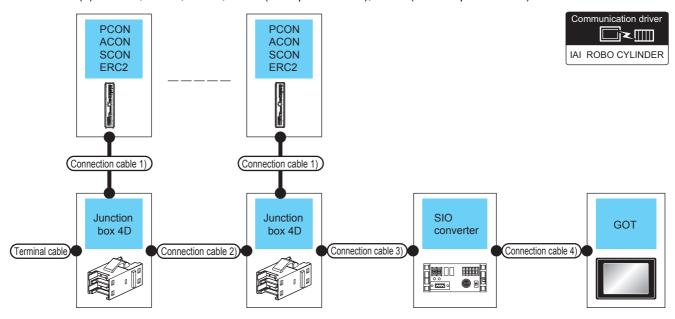


Controll er	Terminal cable	Connection cable 1)*1	Junction box 4D*2	Connection cable 2)	Connection cable 3)	Max.	SIO coi	nverter*1	Connection cal	ole 4)	GO	DΤ	Number of
Model name	Connection diagram number	Cable model	Model name	Connection diagram number	Connection diagram number	Connection disat ance	Model name	Communica tion Type	Cable model Connection diagram number	Max. disat ance	Option device	Model	connectable equipment
					(Icar)				RCB-CV-MW*1 (0.3m) +		- (Built into GOT)	GT GT 25 CT 25 CT 23 CT 21 CT	
PCON ACON	NO-422/	RS-422/	RS-422/ 485 connection diagram 2)	100m	RCB-TU-	RS-232	CB-RCA- SIO050*1 (5m) or User	15m	GT15- RS2-9P	ет 27 25	16 Controllers		
SCON	485 connection diagram 1)	(0.2m)	J-14/35/4-4	485 connection diagram 2)	Or (User) (RS-422/ 485 connection	Toom	SIO-□	NO-232	RS-232 connection diagram 3)	13111	GT10- C02H- 6PT9P*6	GT _{03P} GT _{03P} 2104P R4 R2	for 1 GOT
					diagram 6)				RS-232 connection diagram 8)		- (Built into GOT)	GT 04R 2103P 2104P R2	

Controll er	Terminal cable	Connection cable 1)*1	Junction box 4D*2	Connection cable 2)	Connection cable 3)	Max.	SIO cor	nverter*1	Connection cab	ole 4)	GC)T	Number of
Model name	Connection diagram number	Cable model	Model name	Connection diagram number	Connection disat ance number	Model name	Communica tion Type	Cable model Connection diagram number	Max. disat ance	Option device	Model	connectable equipment	
							RCB-TU- SIO-□		RCB-CV-MW ^{*1} (0.3m) + CB-RCA- SIO050 ^{*1} (5m) or User RS-232 connection diagram 3)		- (Built into GOT)	GT GT 25 25 21 21 21 21 21 21 21 21 21 21 21 21 21	
PCON	User preparing RS-422/	CB-RCB-				400				GT15- RS2-9P	ет ет 27 25	2 Controllers	
ACON SCON	485 connection diagram 1)	ection (0.2m)	* *	-	-	- 100m		RS-232		15M	GT10- C02H- 6PT9P ^{*6}	GT 03P 2104P R4 R2	for 1 GOT
									(User) RS-232 connection diagram 8)		- (Built into GOT)	GT _{04R} GT _{03P} 2104P R ₂	
		2S-422/ PWBIO 485	CTL001 + CB-ERC2- PWBIO or CB-ERC2- PWBIO			100m	RCB-TU- SIO-□		RCB-CV-MW*1 (0.3m) + CB-RCA- SIO050*1 (5m) or (User) RS-232 RS-232 connection diagram 3)		- (Built into GOT)	GT 25 25 GT 23 21 ST	
ERC2 (SIO	User preparing RS-422/			User greparing RS-422/	RS-422/ 485 connection diagram 2)						GT15- RS2-9P	ет 27 25	16 Controllers for 1 GOT
specific ations)*4	connection diagram 1)			485 connection diagram 2)	or User (Preint) RS-422/ 485 connection diagram 6)			110-232		15m	GT10- C02H- 6PT9P ^{*6}	GT _{03P} GT _{03P} 2104P R4 R2	
									(User) RS-232 connection diagram 8)		- (Built into GOT)	GT _{04R} 21 _{03P} 21 _{04P} R ₂	

Controll er	Terminal cable	Connection cable 1)*1	Junction box 4D*2	Connection cable 2)	Connection cable 3)	Max.	SIO cor	nverter*1	Connection cab	ole 4)	GC	T	Number of
Model name	Connection diagram number	Cable model	Model name	Connection diagram number	Connection diagram number	disat ance	Model name	Communica tion Type	Cable model Connection diagram number	Max. disat ance	Option device	Model	connectable equipment
									RCB-CV-MW*1 (0.3m)		- (Built into GOT)	GT 25 25 21°50 GS	
ERC2 (SIO		CB-ERC2- CTL001 + CB-ERC2- PWBIO				400	RCB-TU-		+ CB-RCA- SIO050*1 (5m) or	GT15- RS2-9P	ет ет 27 25	2 Controllers	
specific ations)*4	cific - - - 100m ;	SIO-□ RS-232	RS-232 connection diagram 3)	GT10- C02H- 6PT9P*6	GT 03P GT 03P 2104P 2104P R4 R2	for 1 GOT							
									User RS-232 connection diagram 8)		- (Built into GOT)	GT 04R GT 03P 2104P R2	
		485 Terminal 5-147 block (User	PWBIO		(User (propring)) RS-422/ 485 connection diagram 2)		RCB-TU-		RCB-CV-MW*1 (0.3m) + CB-RCA- SIO050*1 (5m) or		- (Built into GOT)	27 25 27 25 32 21050 GS	-
ERC2 (NP/PN	RS-422/		or CB-ERC- PWBIO □□□-RB	User presents RS-422/						15m	GT15- RS2-9P	ет ет 27 25	
specific ations)*5	485 connection diagram 1)		5-1473574-4 485 connection diagram 2)	or User (Preparing) RS-422/ 485 connection diagram 6)	100m	SIO-□	RS-232	2 RS-232 connection diagram 3)	15m	GT10- C02H- 6PT9P*6	GT _{03P} GT _{03P} 2104P R4 R2	for 1 GOT	
		RS-422/485 connection diagram 13)							(User) RS-232 connection diagram 8)		- (Built into GOT)	GT 04R GT 03P 2104P R2	

- *1 Product manufactured by IAI Corporation. For details of the product, contact IAI Corporation.
- *2 Product manufactured by Tyco Electronics. For details of the product, contact Tyco Electronics.
- *3 When not using junction box 4D, connection cable 2) or connection cable 3), connect the controller to the SIO converter directly by the cable CR-RCB-CTL002.
- *4 Use ERC2-□-□-□-□-SE-□-□.
- *5 Use the following models.
- *6 When a GT10-C02H-6PT9P unit of the sub version A or B is used, do not ground the case of the D-sub (9-pin) connector.

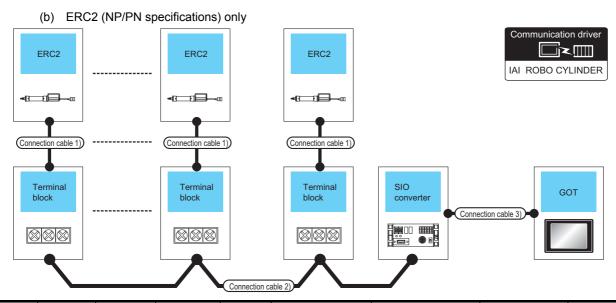

Controller	Connection cable 1)*1		Connection cable 2)		SIO c	onverter*1	Connection cable 4)		GOT		
Model name	Cable model	Terminal block	Connection diagram number	Max. disatance	Model name	Connection diagram number	Cable model Connection diagram number	Max. disatance	Option device	Model ^{*3}	Number of connectable equipment
	CB-ERC-	Terminal block (User preparing)	Cuser (property) RS-422/485 connection diagram 13) or Cuser (property) RS-422/485 connection diagram 8)				RCB-CV- MW*1 (0.3m) + CB-RCA- SIO050*1		- (Built into GOT)	27 25 GT 27 23 22 22 22 22 22 22 22 22 22 22 22 22 2	
PWBIO ERC2 (NP/PN specifications) or *3 CB-ERC- PWBIO	PWBIO Or CB-ERC-	PWBIO Or CB-ERC- PWBIO	(Isor)	100m	RCB- TU- SIO-□	ΓU- RS-232	(5m) or User RS-232 connection diagram 3)	15m	GT15- RS2- 9P*2	GT GT 25	Controllers for 1 GOT
		RC □-TU- PIO ^{*1}	RS-422/485 connection diagram 9)						GT10- C02H- 6PT9P *4	GT _{03P} 2104P 2104P R4	
							RS-232 connection diagram 8)		- (Built into GOT)	GT 04R 2104P 2204P R2	

- *1 Product manufactured by IAI Corporation. For details of the product, contact IAI Corporation.
- *2 Connect it to the RS-232 interface (built into GOT). It cannot be mounted on GT1655 and GT155 \square .
- *3 Use the following models.
 - ERC2-[]-[]-[]-[]-NP-[]-[], ERC2-[]-[]-[]-[]-[]-PN-[]-[]
- *4 When a GT10-C02H-6PT9P unit of the sub version A or B is used, do not ground the case of the D-sub (9-pin) connector.


2.3 Connection Diagram

The following diagram shows the connection between the GOT and the PLC.


2.3.1 RS-232 cable

Connection diagram


(1) RS-232 connection diagram 1)

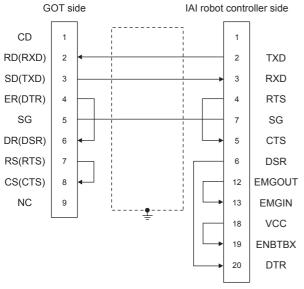


(2) RS-232 connection diagram 2)

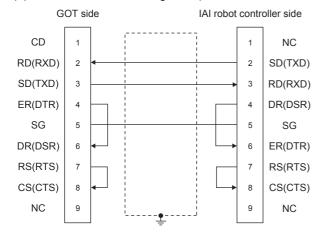


(3) RS-232 connection diagram 3)

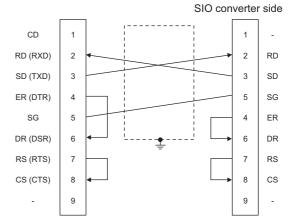


(4) RS-232 connection diagram 4)

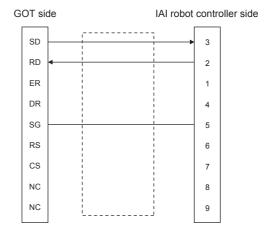


(5) RS-232 connection diagram 5)

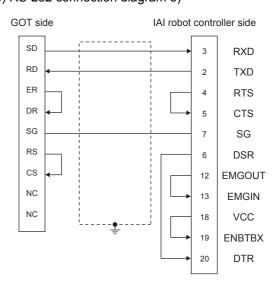


(6) RS-232 connection diagram 6)

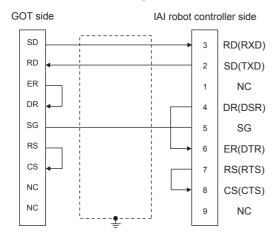

(7) RS-232 connection diagram 7)

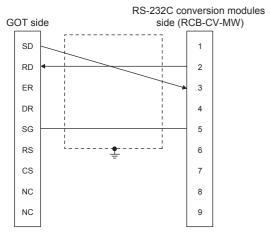

(8) RS-232 connection diagram 8)

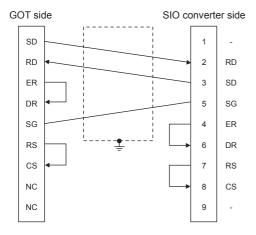


■ Precautions when preparing a cable

- (1) Cable length
 The length of the RS-232 cable must be 10cm or less.
- (2) GOT side connectorFor the GOT side connector, refer to the following.1.4.1 GOT connector specifications
- (3) IAI Robot Controller side connector Use the connector compatible with the IAI Robot Controller. For details, refer to the IAI Robot Controller user's manual.


2.3.2 RS-422/485 cable

■ Connection diagram


(1) RS-422/485 connection diagram 1)

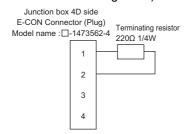


(2) RS-422/485 connection diagram 2)

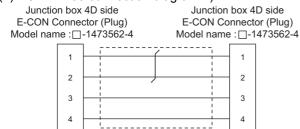


(3) RS-422/485 connection diagram 3)

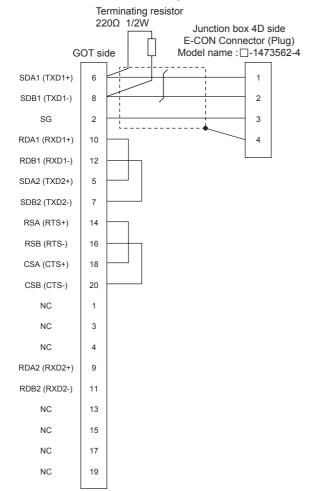


(4) RS-422/485 connection diagram 4)

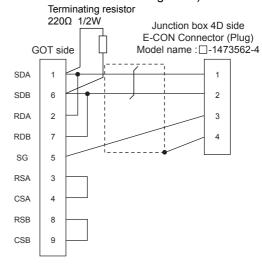


(5) RS-422/485 connection diagram 5)

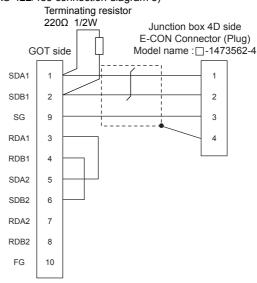


(6) RS-422/485 connection diagram 6)

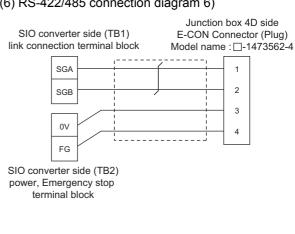

(7) RS-422/485 connection diagram 7)

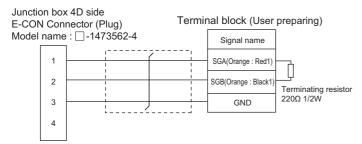


(8) RS-422/485 connection diagram 8)

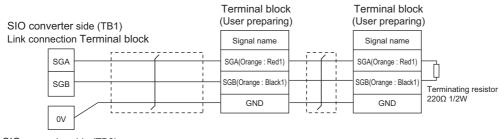

SIO converter side (TB2) power supply or Emergency stop Terminal block


(9) RS-422/485 connection diagram 9)

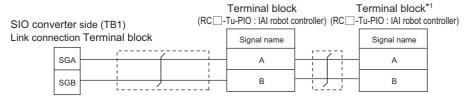


SIO converter side (TB2) power supply or Emergency stop Terminal block

*1 Turn the terminator switch of a terminal block which will be a terminal to "RTON".


(10)RS-422/485 connection diagram 10)

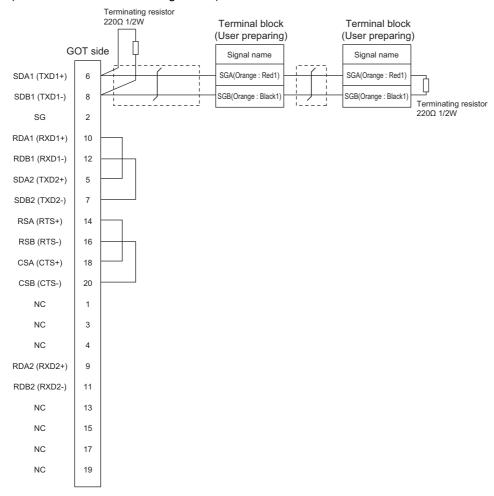


(11)RS-422/485 connection diagram 11)

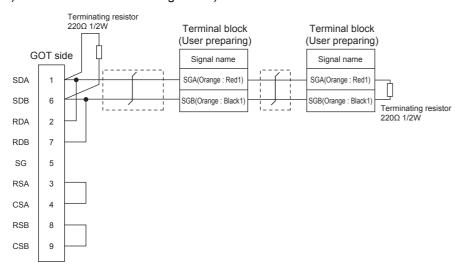


(12)RS-422/485 connection diagram 12)

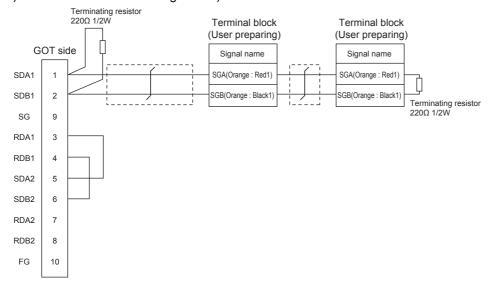


(13)RS-422/485 connection diagram 13)

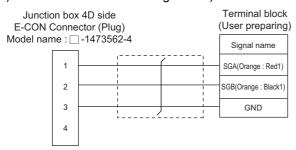

(14)RS-422/485 connection diagram 14)

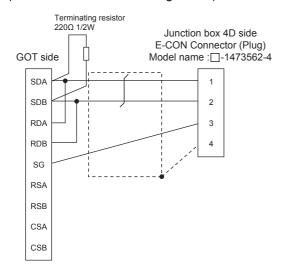

(15)RS-422/485 connection diagram 15)

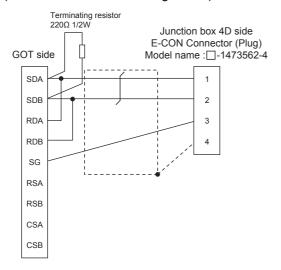

Precautions when preparing a cable

(1) Cable length

The maximum length of the RS-422/485 cable must be 100m or less.

(2) GOT side connector

For the GOT side connector, refer to the following.

1.4.1 GOT connector specifications

(3) E-CON connector (plug) (Type name: □-1473562-4) Product manufactured by Tyco Electronics. For details of the product, contact Tyco Electronics.

Connecting terminating resistors

(1) GOT side

When connecting a PLC to the GOT, a terminating resistor must be connected to the GOT.

- (a) For GT27, GT25, GT23
 Set the terminating resistor setting switch of the GOT main unit to "Disable".
- (b) For GT21


Set the terminating resistor selector to "OPEN ". For the procedure to set the terminating resistor, refer to the following.

1.4.3 Terminating resistors of GOT

2.4 GOT Side Settings

2.4.1 Setting communication interface (Communication settings)

Set the channel of the equipment to be connected to the GOT.

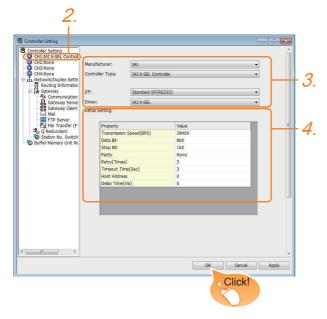

- Select [Common] → [Controller Setting] from the menu.
- 2. The Controller Setting window is displayed. Select the channel to be used from the list menu.
- Set the following items.
 - · Manufacturer: IAI
 - Controller Type: Set either of followings.
 Connecting to X-SEL, SSEL, ASEL, PSEL>
 IAI X-SEL Controller
 Connecting to PCON, ACON, SCON, ERC2>
 IAI ROBO CYLINDER
 - · I/F: Interface to be used
 - Driver: Set either of followings.
 Connecting to X-SEL, SSEL, ASEL, PSEL>
 IAI X-SEL
 Connecting to PCON, ACON, SCON, ERC2>
 IAI ROBO CYLINDER
- The detailed setting is displayed after Manufacturer, Controller Type, I/F, and Driver are set. Make the settings according to the usage environment.

2.4.2 Communication detail settings

Click the [OK] button when settings are completed.



The settings of connecting equipment can be confirmed in [I/F Communication Setting]. For details, refer to the following.

1.1.2 I/F communication setting

2.4.2 Communication detail settings

Make the settings according to the usage environment.

Property	Value
Transmission Speed(BPS)	38400
Data Bit	8 bit
Stop Bit	1 bit
Parity	None
Retry(Times)	3
Timeout Time(Sec)	3
Host Address	0
Delay Time(ms)	0

Item	Description	Range
Transmission Speed	Set this item when change the transmission speed used for communication with the connected equipment. (Default: 38400bps)	9600bps, 19200bps, 38400bps, 57600bps, 115200bps
Data Bit	Set this item when change the data length used for communication with the connected equipment. (Default: 8bits)	7bit, 8bit
Stop Bit	Specify the stop bit length for communications. (Default: 1bits)	1bit, 2bit
Parity	Specify whether or not to perform a parity check, and how it is performed during communication. (Default: None)	None Even Odd
Retry	Set the number of retries to be performed when a communication error occurs. (Default: 3timse)	0 to 5times
Timeout Time	Set the time period for a communication to time out. (Default: 3sec)	1 to 30sec
Host Address	Make the settings according to the station number (station code) of the controller to be monitored. (Default: 0)	<connecting to<br="">X-SEL, SSEL> 0 to 255 <connecting to<br="">PCON, ACON, SCON> 0 to 15</connecting></connecting>
Delay Time	Set this item to adjust the transmission timing of the communication request from the GOT. (Default: 0ms)	0 to 300 (ms)



- (1) Communication interface setting by the Utility
 The communication interface setting can be
 changed on the Utility's [Communication Settings]
 after writing [Communication Settings] of project
 data.
 For details on the Utility, refer to the following
 - For details on the Utility, refer to the following manual.
- GOT2000 Series User's Manual (Utility)
- (2) Precedence in communication settings
 When settings are made by GT Designer3 or the
 Utility, the latest setting is effective.

2.5 Robot Controller Side Setting



IAI Robot Controller

For details of IAI Robot Controller, refer to the following manuals.

[IAI Robot Controller user's Manual

2.5.1 Connecting to X-SEL

Parameter setting

Enter the following parameters using peripheral software. When setting parameters, set the mode switch of the controller to "MANU".

Parameter	Parameter Name	Set Value*4
I/O parameter 90	Usage of SIO channel 1*1 opened to user	When used in "MANU" Set either of the following. SEL opened program Independent of the when used in "AUTO" Independent of the "AUTO" Independent of
I/O parameter 91	Station code of SIO channel 1*1 opened to user	0 to 255 153*
I/O parameter 92	Baud rate type of SIO channel 1*1 opened to user	0: 9600bps* 1: 19200bps 2: 38400bps 3: 57600bps 5: 115200bps
I/O parameter 93	Data length of SIO channel 1*1 opened to user	7bit, 8bit*
I/O parameter 94	Stop bit length of SIO channel 1*1 opened to user	1bit*, 2bit
I/O parameter 95	Parity type of SIO channel 1 *1 opened to user	0: None* 1: Odd 2: Even
I/O parameter 97	IAI-protocol minimum response delay for SIO channel 1*1 opened to user	0 to 999(ms)
Other parameter 46	Other setting bit pattern 1	bit0 to 3 = 1 (fixed)


- *1 For X-SEL(P/Q/PX/QX), the parameter becomes the SIO channel 0 opened to user.
- *2 Indicates only the transmission that can be specified on the GOT side.
 - Specify the transmission speed to match the baud rate of the GOT.
- *3 Set it only when a wait time is required before the response and transmission to the GOT request. Normally, the communication is available using default values.
- *4 When using the "MANU" mode, the set value is fixed to the value with *. Adjust the settings of the GOT side to the * settings

However, the communication setting of the PC software becomes the setting of X-SEL after the PC software for X-SEL is connected. In this case, adjust the communication setting of the GOT to the setting of the PC software.

■ Mode switch

(1) X-SEL K type


- (a) When setting the mode switch to "MANU" Connect the GOT to the following teaching connector.
- (b) When setting the mode switch to "AUTO" Connect the GOT to the following general RS232C port connector.

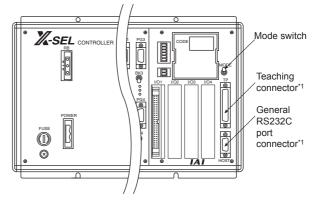

*1 The teaching connector and general RS232C port connector cannot be used at the same time.

(2) Other than X-SEL K type

Set the mode switch to "MANU" or "AUTO" and connect the GOT to the following teaching connector.

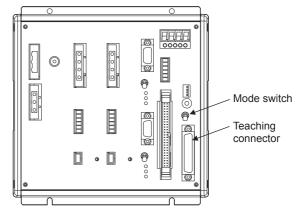

2.5.2 Connecting to SSEL, ASEL, PSEL

Parameter setting

Enter the following parameters using peripheral software. When setting parameters, set the mode switch of the controller to "MANU".


Parameter	Parameter Name	Set Value
I/O parameter 90	Usage of SIO channel 0 opened to user	2: IAI protocol B (fixed)
I/O parameter 91	Station code of SIO channel 0 opened to user	0 to 255
I/O parameter 92 *1	Baud rate type of SIO channel 0 opened to user	0: 9600bps 1: 19200bps 2: 38400bps 3: 57600bps 5: 115200bps
I/O parameter 93	Data length of SIO channel 0 opened to user	7bit, 8bit
I/O parameter 94	Stop bit length of SIO channel 0 opened to user	1bit, 2bit
I/O parameter 95	Parity type of SIO channel 0 opened to user	0: None 1: Odd 2: Even
I/O parameter 97	IAI-protocol minimum response delay for SIO channel 0 opened to user	0 to 999(ms)
Other parameter 46	Other setting bit pattern 1	bit0 to 3 = 1 (fixed)

^{*1} Indicates only the transmission that can be specified on the GOT side.

Specify the transmission speed to match the baud rate of the GOT.

■ Mode switch


Set the mode switch to "AUTO" and connect the GOT to the following teaching connector.

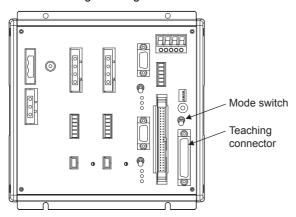

2.5.3 Connecting to PCON, ACON, SCON

Axis number setting, Mode select

For controllers without the following switches, set from the setting tool (PC software).

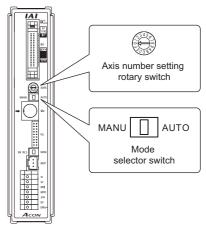

Switch	Setting details
Axis number setting rotary switch	0 to 15
Mode selector switch	<only monitor="" the=""> AUTO <monitor, change="" data=""> MANU</monitor,></only>

Transmission speed setting

Set the transmission speed from the setting tool (PC software).

Item	Range
SIO transmission	9600/19200/38400/57600/115200bps
speed*1	Default: 38400bps

^{*1} Indicates only the transmission speeds that can be set on the GOT side.

Set the same transmission speed of the GOT.

^{*2} Set it only when a wait time is required before the response and transmission to the GOT request. Normally, the communication is available using default values.

2.5.4 Connecting to ERC2

Axis number setting, Mode select Set from the setting tool (PC software).

Transmission speed setting Set the transmission speed from the setting tool (PC software).

Item	Range
SIO transmission	9600/19200/38400/57600/115200bps
speed*1	Default: 38400bps


^{*1} Indicates only the transmission speeds that can be set on the GOT side.

Set the same transmission speed of the GOT.

2.5.5 Station No.settings

Set each station number so that no station number overlaps.

The station number can be set without regard to the cable connection order. There is no problem even if station numbers are not consecutive.

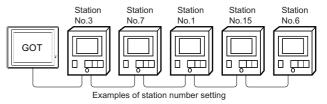

(1) Direct specification

When setting the device, specify the station number of the controller of which data is to be changed.

Model name	Specification range	Refer to
PCON, ACON, SCON	0 to 15	2.5.3
ERC2	0 to 15	2.5.4

(2) Indirect specification

When setting the device, indirectly specify the station number of the controller of which data is to be changed using the 16-bit GOT internal data register (GD10 to GD25).

When specifying the station No. from 100 to 115 on GT Designer3, the value of GD10 to GD25 compatible to the station No. specification will be the station No. of the controller.

Specification station No.	Compatible device	Setting range
100	GD10	
101	GD11	
102	GD12	
103	GD13	
104	GD14	
105	GD15	
106	GD16	
107	GD17	0 to 15 (If setting a value out of the range
108	GD18	above, a timeout error occurs.)
109	GD19	,
110	GD20	
111	GD21	
112	GD22	
113	GD23	
114	GD24	
115	GD25	

2.6 Device Range that Can Be Set

The device ranges of controller that can be used for GOT are as follows.

Note that the device ranges in the following tables are the maximum values that can be set in GT Designer3.


The device specifications of controllers may differ depending on the models, even though belonging to the same series.

Please make the setting according to the specifications of the controller actually used.

When a non-existent device or a device number outside the range is set, other objects with correct device settings may not be monitored.

2.6.1 IAI robot controller (IAI X-SELController)

Setting item

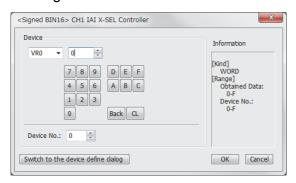

Item	Description		
	Set the device name, device number, and bit number. The bit number can be set only when specifying the bit of word device.		
Device	Device No.	Set the number of the program for which the device is used.	
	Information	Displays the device type and setting range which are selected in [Device].	
Switch to the device dfine dialog	Device definition can be checked.		



Memory area for writing position data

Position data can be written to RAM or ${\sf E}^2{\sf PROM}$ of the controller.

- (1) When written to RAM Remember that written position data are cleared when power supply to the controller is turned off.
- (2) When written to E²PROM
 Written position data are not cleared even when power supply to the controller is turned off.
 However, there are limits in the number of writing to E²PROM. If the data is frequently updated (more than once in an hour), write the parameters to the RAM. For details, refer to the manual of the controller used.

■ Device

Device name		Setting Range	Device No. representation	
	Input Port (IP)*1	IP000 to IP299		
Bit device	Output Port (OP)	OP300 to OP599		
	Flag (FG)	FG000:600 to FG000899 FG001:900 to FG001:999	Decimal	
		FG128:900 to FG128:999		
	Point Data Clear (PCLR)*2*6	PCLR0001 to PCLR4E20	Hexadecimal	
	Point Data Total Count (PDT)*1	PDT0		
	String (STR)*3	STR000:300 to STR000:998 STR001:001 to STR001:299	Decimal	
	(011)	STR128:001 to STR128:299		
	Axis Status (AXST)*1	AXST00 to AXST2F		
	Scara Axis Status 0 (Base coordinate system) (SAXS0)*1	SAXS000 to SAXS0FF		
	Scara Axis Status 1 (Selected work coordinate system) (SAXS1)*1	SAXS100 to SAXS1FF	Hexadecimal	
0	Scara Axis Status 2 (Reserved for system use) (SAXS2)*1	SAXS200 to SAXS2FF		
Word device	Scara Axis Status 3 (Each axis system) (SAXS3)*1	SAXS300 to SAXS3FF		
	Version 0 (Main CPU applica-	VR00:0 to VR00:F		
	tion/) (VR0)*1	VR0F:0 to VR0F:F		
	Version 1	VR10:0 to VR10:F		
	(Main CPU core) (VR1) ^{*1}	: VR1F:0 to VR1F:F	Hexadecimal	
	Version 2	VR20:0 to VR20:F		
	(Driver CPU) (VR2)*1	: VR2F:0 to VR2F:F		
	Version 3	VR30:0 to VR30:F		
	(Mount SIO) (VR3)*1	: VR3F:0 to VR3F:F		
	Program Status (PGST)*1	PGST000 to PGST511		
	System Status (SYST)*1	SYST0 to SYST6	Decimal	
	Program Control (PRG)*2*4	PRG000 to PRG128		
	Alarm Reset (AR)*2	AR0	Decimal	

Device name		Setting Range	Device No. representation	
	Software Reset (SR)*2*5	SR0		
	Drive-Source Recovery (DSR)*2	DSR0		
	Operation-Pause Reset (OPR)*2	OPR0	Decimal	
	Servo (SV)*7	SV0 to SV2		
	Write to Flash ROM (FRW)*7	FRW0 to FRW1		
	Coordinate Affiliate	CD000:0 to CD000:F		
	Data 0 (CD0)*1	CD0FF:0 to CD0FF:F	Hexadecimal	
	Coordinate Affiliate	CD100:0 to CD100:F	пехацесппа	
	Data 1 (CD1)*1	: CD1FF:0 to CD1FF:F		
	Integer (INT)	INT000:0200 to INT000:1299 INT001:0001 to INT001:1099		
		: INT128:0001 to INT128:1099		
	Real (RL)	RL000:0300 to INT000:1399 RL001:0100 to INT001:1199	Decimal	
		: INT128:0100 to INT128:1199		
	Error Detail 0	ER000:000:00 to ER0FF:000:FF		
	(System error) (ER0)*1	: ER000:FFF:00 to ER0FF:FFF:FF		
	Error Detail 1	ER100:000:00 to ER1FF:000:FF		
vice	(Axis-specific error) (ER1)*1	: ER100:FFF:00 to ER1FF:FFF:FF	Hexadecimal	
ord de	Error Detail 2	ER200:000:00 to ER2FF:000:FF		
Double word device	(Program-specific error:) (ER2)*1	: ER200:FFF:00 to ER2FF:FFF:FF		
Dou	Error Detail 3	ER300:000:00 to ER3FF:000:FF		
	(Error in error list	or list		
	record)(ER3)*1 Error Detail 4	ER300:FFF:00 to ER3FF:FFF:FF		
	(Reserved for system	ER400:000:00 to ER4FF:000:FF :		
	use) (ER4) ^{*1}	ER400:FFF:00 to ER4FF:FFF:FF		
	Error Detail 5 (Reserved for system	ER500:000:00 to ER5FF:000:FF		
	use) (ER5) ^{*1}	ER500:FFF:00 to ER5FF:FFF:FF		
	Error Detail 6 (Reserved for system	ER600:000:00 to ER6FF:000:FF	Hexadecimal	
	use) (ER6) ^{*1}	: ER600:FFF:00 to ER6FF:FFF:FF		
	Error Detail 7 (Reserved for system	ER700:000:00 to ER7FF:000:FF		
	use) (ER7) ^{*1}	ER800:FFF:00 to ER8FF:FFF:FF		
	Point Data Total	PD00 to PD9E		
	Count (PD)*7			
	Simple Interference Check Zone Data	SD01:0 to SD01:F :		
	(SD)*1	SDFF:0 to SDFF:F		

- *1 Write disabled
- *2 Read disabled
- *3 The following restrictions are applied depending on the program number.
 - When the program number is 000, the variable number can be only even numbers.
 - When the program number is 001 to 128, the variable number can be only odd numbers.
- *4 For the program control device, the command to be sent differs depending on the write data. Write data other than the followings are processed as an internal error of GOT.
 - Write data 0: Program Exit Command(0x254)
 - Write data 1: Program Execution Command(0x253)
 - Write data 2: Program Pause Command(0x255)
 - Write data 3: Program 1 Step Execution Command(0x256)
 - Write data 4: Program Restart Command(0x257)
- *5 When performing software reset, a no response error is displayed after a non-communicating period of ten and several seconds, and then the communication is resumed.
- *6 For the word address, the value is specified only when the last digit is 1.
- *7 For the device whose obtained data No.0 is a command trigger, a request is sent to the controller when the Write or Read is input to the command trigger. It is not sent when the Clear is input.



Device representation

(1) Flag device

```
FG000 : 600

Flag number:
Global area (600 to 899)
Local area (900 to 999)

Program number:
Global area (000)
Local area (001 to 128)
```


(2) String device

```
STR000 : 300

Variable number:
Global area (300 to 998 (only even))
Local area (001 to 299 (only odd))

Program number:
Global area (000)
Local area (001 to 128)
```

(3) Version device

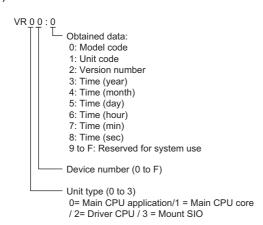

(4) Axis Status device

AXST00 Obtained data: AXST00 to AXST05: Single-axis status 00: Axis status Bit 7 (Reserved for system use) Bit 6 (Reserved for system use) Bit 5 (Push error detection): 0 = Not detected / 1 = Detected Bit 4 (Operation command successful completion): 0 = Not yet complete / 1 = Completed successfully * Can be used only for completion check after an operation command. Bit 3 (Servo): 0 = OFF / 1 = ON Bit 1-2 (Origin return): 0 = Not yet performed / 1 = Returning to origin / 2 = Completed Bit 0 (Servo axis in use): 0 = Not in use / 1 = In use (moving, etc.) * "Servo axis in use" indicates that a given task has the right to use the applicable axis. Therefore, this bit will turn ON in the following conditions: - When an operation command involving axis movement is in progress (including when an axis is moving) - Servo is starting up from an OFF state - Servo is shutting down from an ON state (excluding emergency stop) Operation axis is paused 01: Axis sensor input status Bit 3 (Reserved for system use) Bit 2 (Origin sensor): 0 = OFF / 1 = ON Bit 1 (Overrun sensor): 0 = OFF / 1 = ON Bit 0 (Creep sensor): 0 = OFF / 1 = ON 02: Axis error code 03: Encoder status Bit 7 (Battery alarm (BA)) Bit 6 (Battery error (BE)) Bit 5 (Multi-rotation error (ME)) Bit 4 (Reserved for system use) Bit 3 (Counter overflow (OF)) Bit 2 (Count error (CE)) Bit 1 (Full absolute status (FS)) Bit 0 (Overspeed (OS)) 04: Current position (L) unit (0.001mm) Indicates the lower 16 bits of the current position in Hex. 05: Current position (H) unit (0.001mm) Indicates the upper 16 bits of the current position in Hex. AXST06 to AXST11: Double axes status AXST42 to AXST47: Eight axes status

(5) Scara Axis Status device

```
SAXS <u>0</u> <u>00</u>
              Obtained data:
               00: Work coordinate system selection number
               01: Tool coordinate system selection number
               02: Common axis status
               Bit 7 (Reserved for system use)
               Bit 6 (Reserved for system use)
Bit 5 (Reserved for system use)
               Bit 4 (Reserved for system use)
Bit 2-3 (Scara axis current position coordinate system type):
                  0 = Base coordinate system
                  / 1 = Selected work coordinate system
                  /2 = Reserved for system use /3 = Each axis system
               Bit 0-1: (Scara axis current arm system):
                  0 = Right arm system / 1 = Left arm system
                  / 2 = Indeterminable / 3 = Reserved for system use
               03: Axis pattern
                   Bit - 7 6 5 4 3 2 1 0
                                                     1st axis
                                                     8th axis
                                                     Reserved for system use
               04 to 09: Single-axis status
               04: Axis status
               Bit 7 (Reserved for system use)
               Bit 6 (Reserved for system use)
               Bit 5 (Push error detection): 0 = Not detected / 1 = Detected
               Bit 4 (Operation command successful completion):
                   0 = Not yet complete / 1 = Completed successfully
               * Can be used only for completion check after an
                 operation command.(For positioning that includes any
                 of the X, Y and R axes, be sure to check completion
                 for all of the X, Y and R axes.)
               Bit 3 (Servo): 0 = OFF / 1 = ON
               Bit 1-2 (Origin return): 0 = Not yet performed
                  / 1 = Returning to origin / 2 = Completed
               Bit 0 (Servo axis in use): 0 = Not in use
                                         / 1 = In use (moving, etc.)
               * "Servo axis in use" indicates that a given task has the
                  right to use the applicable axis. Therefore, this bit will
                  turn ON in the following conditions:
                 - When an operation command involving axis
                  movement is in progress
                  (including when an axis is moving)
                 - Servo is starting up from an OFF state
                 - Servo is shutting down from an ON state
                  (excluding emergency stop)
                  Operation axis is paused
               05: Axis sensor input status
               Bit 3 (Reserved for system use)
               Bit 2 (Origin sensor): 0 = OFF / 1 = ON
               Bit 1 (Overrun sensor): 0 = OFF / 1 = ON
               Bit 0 (Creep sensor): 0 = OFF / 1 = ON
               06: Axis error code
               07: Encoder status
               Bit 7 (Battery alarm (BA))
               Bit 6 (Battery error (BE))
               Bit 5 (Multi-rotation error (ME))
               Bit 4 (Reserved for system use)
               Bit 3 (Counter overflow (OF))
               Bit 2 (Count error (CE))
               Bit 1 (Full absolute status (FS))
               Bit 0 (Overspeed (OS))
               08: Current position (L) unit (0.001mm or 0.001deg)
               Indicates the lower 16 bits of the current position in Hex.
               09: Current position (H) unit (0.001mm or 0.001deg)
               Indicates the upper 16 bits of the current position in Hex.
               0A to 0E: Double axes status
               2E to 33: Eight axes status
               34 to FF: Reserved for system use
              Unit type (0 to F)
               Bit 3 (Reserved for system use) Fixed to 0
               Bit 2 (Reserved for system use) Fixed to 0
               Bit 0-1 (Scara axis current position type):
                0 = Base coordinate system
                / 1 = Selected work coordinate system
```

/ 2 = Reserved for system use / 3 = Each axis system

(6) Program Status device

```
PGST 000

Obtained data:
000 to 003: Program number 1 status
000: Status
Bit 3 (Reserved for system use)
Bit 2 (Reserved for system use)
Bit 1 (Reserved for system use)
Bit 0 (Start): 0 = Not started / 1 = Started
001: Execution program step number
002: Program-dependent error code
003: Error occurrence step number
004 to 007: Program number 2 status
...
508 to 511: Program number 128 status
```

(7) System Status device

```
SYST 0
            Obtained data:
            0: System mode
              0 = Indeterminable / 1 = AUTO mode / 2 = MANUAL mode
              / 3 = Slave update mode / 4 = Core update mode
             1 Critical level system error number
             2: Latest system error number
             3: System status byte 1
               Bit 7 (Reserved for system use)
               Bit 6 (Battery voltage error status) : 0 = No error / 1 = Error
               Bit 5 (Battery voltage low warning status): 0 = No low / 1 = Low
Bit 4 (Power error status): 0 = Normal / 1 = Error
               Bit 3 (Emergency stop switch status):
               0 = No emergency stop / 1 = Emergency stop
Bit 2 (Safety gate status): 0 = CLOSE / 1 = OPEN
                * X-SEL (P/Q Series) (Multi axes/Scara)/SSEL/ASEL/PSEL: Enable switch
                (Deadman switch / Enable switch) status is indicated.
               Bit 1 (TP enable switch status): 0 = ON / 1 = OFF
                * X-SEL (P/Q Series) (Multi axes/Scara)/SSEL/ASEL/PSEL:
                 This bit is disabled (fixed to 0).
               Bit 0 (Operation mode switch status): 0 = AUTO / 1 = MANUAL
             4: System status byte 2
               Bit 7 (Reserved for system use)
               Bit 6 (Reserved for system use)
Bit 5 (Program run status): 0 = Not run / 1 = Running
              Bit 4 (Restart wait status): 0 = Not waiting / 1 = Waiting
Bit 3 (I/O interlock status): 0 = No interlock / 1 = Interlock
               Bit 2 (Servo interlock status): 0 = No interlock / 1 = Interlock
              Bit 1 (Slave parameter writing status):

0 = Not writing / 1 = Writing
               Bit 0 (Application data flash ROM write status):
                                  0 = Not writing/erasing / 1 = Writing/erasing
               * When the core program is in operation (Application update mode), only Bit 0 is enabled. Data for System mode, Critical level
                 system error number, Latest system error number,
                 System status byte 1, System status byte 3 and System \,
                status byte 4 is disabled.
             5: System status byte 3
Bit 7 (Reserved for system use)
               Bit 6 (Reserved for system use)
               Bit 5 (Reserved for system use)
               Bit 4 (Operation mode):
                                      0 = Program mode / 1 = Position mode
               Bit 3 (Reserved for system use)
               Bit 2 (System ready status): 0 = Not ready / 1 = Ready
               Bit 1 (System operation status):
                                         0 = Not operating in AUTO mode
              / 1 = Operating in AUTO mode
Bit 0 (Drive-source cutoff status): 0 = Not cut off / 1 = Cut off
             6: System status byte 4
```

Reserved for system use

(8) Coordinate Affiliate Data device


```
CD 0 00: 0

Obtained data:
0: X axis coordinate offset
1: Y axis coordinate offset
2: Z axis coordinate offset
3: R axis coordinate offset
4 to F: Reserved for system use

Coordinate system definition data number (00 to FF)
Work/tool coordinate system definition data number (0 to)

Type 1 (0 to 1)
0 = Work coordinate system definition data
/ 1 = Tool coordinate system definition data
```


(9) Servo device

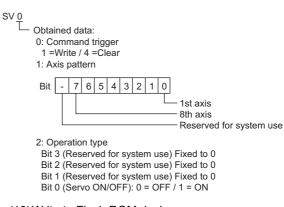


(10) Write to Flash ROM device

```
FRW 0
Obtained data
0 : Command trigger
1=Write/
1 : Reserved for system use
```

(11) Integer device

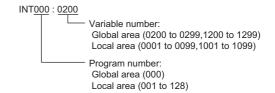

(12) Real device

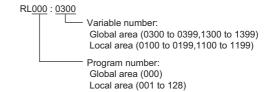


(13) Error Detaildevice(Detail 0 to Detail 7)

ER<u>0</u> <u>00</u> : <u>000</u> : <u>00</u> Obtained data: 00: Error number 01: Detail information 1 Other than system-down level error: Program number (Error source is indicated if the step number is not 0.) System-down level error: System down type 02: Detail information 2 Other than system-down level error: Step number (Error source) System-down level error: System down error code 03: Detail information 3 Other than system-down level error: Axis number System-down level error: System down information 1 04: Detail information 4 Other than system-down level error: Point number (Negative value at interpolation point) System-down level error: System down information 2 05: Detail information 5 06: Detail information 6 07: Detail information 7 08: Detail information 8 09: Message bytes 0A: Message 1 (4 bytes) 10: Message 2 (4 bytes) 49: Message 64 (4 bytes) 50 to FF: Reserved for system use Reserved for system use Type 2 (0 to FF) System error: 0 = Critical level error / 1 = Latest error Axis-specific error: Axis number Program-specific error: Program number Error in error list record: Record number (1 to) 0 = System error /1 = Axis-specific error / 2 = Program-specific error / 3 = Error in error list record / 4 or later = Reserved for system use

(14) Point Data Total Count device

```
PD 00
        Obtained data:
         00: Command trigger
          1 =Write / 2 =Read / 4 =Clear
         01: Starting point number
         02: Number of point data
         03 to 0F: Point data 1
         03: Point number
         04: Axis pattern
         05: Acceleration unit (0.01G)
         06: Deceleration unit (0.01G)
         07: Speed unit (mm/sec)
        08 to 0F: Position data unit (0.001 mm)
          08: 1st axis position data
         0F: 8th axis position data
         10 to 1C: Point data 2
        92 to 9E: Point data 12
```

(15) Simple Interference Check Zone Data device

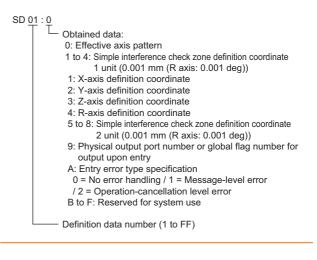

2.6.2 IAI robot controller (IAI PCON, ACON, SCON, ERC2 controller)

■ Setting item



Item	Description			
Device	,	Set the device name, device number, and bit number. The bit number can be set only when specifying the bit of word device.		
Infomation	Displays the device type a	Displays the device type and setting range which are selected in [Device].		
Network Station No.		Monitors the robo cylinder of the specified station No. 0 to 15: To monitor the robo cylinder of the specified station No. 100 to 115: To set the station No. of the robo cylinder to be monitored by the value of GOT data register (GD).*1		
Swich to the device define dialog	Device definition can be checked.			

^{*1} The following shows the relation between station numbers of the robo cylinder and the GOT data register.

Station No.	GOT data register (GD)	Setting range
100	GD10	
101	GD11	0 to 15
:	:	(If setting a value out of the range above, a timeout error
114	GD24	occurs.)
115	GD25	,

■ Device

(1) Device name

Device name		Setting Range	Device No. representation
	Status (S)	S0000 to SFFFF	
Bit device	The bit specification of the word device	Setting range of each word device	Hexadecimal
Word / Double word device	Register (R)	R0000 to RFFFF	Hexadecimal

(2) Status (S) (Bit device) The following shows device numbers which can be set for the status and the corresponding device contents.

Status	Area name	Description	Abbreviation
0000 to 00FF	-	(Reserved for system)	
0100		EMG status	EMGS
0101		Safety speed enabled status	SFTY
0102		Controller ready status	PWR
0103		Servo ON status	SV
0104		Missed work in push-motion operation	PSFL
0105		Major failure status	ALMH
0106		Minor failure status	ALML
0107	Device status register 1 (DSS1)	Absolute error status	ABER
0108		Brake forced-release status	BKRL
0109		Cannot be used	
010A		Pause status	STP
010B		HomingHome return status	HEND
010C		Positioning completion Position complete status	PEND
010D to 010F		Cannot be used	'
0110		Cannot be used	
0111		Cannot be used	
0112		Load output judgment status	LOAD
0113		Torque level status	TRQS
0114		Teaching mode status	MODS
0115		Position-data load command status	TEAC
0116		Jog+ status	JOG+
0117		Jog- status	JOG-
0118	Device status register 2 (DSS2)	Completed positionPosition complete 7	PE7
0119		Completed positionPosition complete 6	PE6
011A		Completed positionPosition complete 5	PE5
011B		Completed positionPosition complete 4	PE4
011C		Completed positionPosition complete 3	PE3
011D		Completed positionPosition complete 2	PE2
011E		Completed positionPosition complete 1	PE1
011F		Completed positionPosition complete 0	PE0
0120		Emergency stop status	EMGP
0121		Motor voltage low status	MPUV
0122		Operation mode status	RMDS
0123		Cannot be used	1
0124		HomingHome return status	GHMS
0125	Expansion device status register (DSSE)	Push-motion operation in progress	PUSH
0126		Excitation detection status	PSNS
0127		PIO/Modbus switching status	PMSS
0128		Cannot be used	1
0129		Cannot be used	
012A		Moving signal	MOVE

Status	Area name	Description	Abbreviation
012B to 012F	Expansion device status register (DSSE)	Cannot be used	•
0130 to 0136		Cannot be used	
0137		Completed position numberPosition complete number status bit 256	PM256
0138		Completed position numberPosition complete number status bit 128	PM128
0139		Completed position numberPosition complete number status bit 64	PM64
013A		Completed position numberPosition complete number status bit 32	PM32
013B	Position number status register (POSS)	Completed position numberPosition complete number status bit 16	PM16
013C		Completed position numberPosition complete number status bit 8	PM8
013D		Completed position numberPosition complete number status bit 4	PM4
013E		Completed position numberPosition complete number status bit 2	PM2
013F		Completed position numberPosition complete number status bit 1	PM1
0140		Cannot be used	
0141		Limit sensor output monitor 2	LS2
0142		Limit sensor output monitor 1	LS1
0143		Limit sensor output monitor 0	LS0
0144 to 0146	Zone status register (ZONS)	Cannot be used	
0147		Position zone output monitor	ZP
0148 to 014D		Cannot be used	
014E		Zone output monitor 2	Z2
014F		Zone output monitor 1	Z1
0150 to 015F	Input port monitor register (DIPM)	PIO connector pin numbers 20A (IN15) to 5A (IN0)	
0160 to 016F	Output port monitor register (DOPM)	PIO connector pin numbers 16B (OUT15) to 1B (OUT0)	
0170		Cannot be used	
0171		Command pulse NP signal status	NP
0172		Cannot be used	
0173		Command pulse PP signal status	PP
0174 to 0175		Cannot be used	
0176		Cannot be used	
0177	Special input port monitor register (SIPM)	Mode switch status	MDSW
0178		Cannot be used	
0179 to 017B		Cannot be used	
017C		Home-check sensor monitor	HMCK
017D		Overtravel sensor	ОТ
017E		Creep sensor	CREP
017F		Limit sensor	LS
0180 to 03FF	-((Reserved for system)	•

	Status	Area name	Description	Abbreviation
0400			EMG operation specification	EMG
0401			Safety speed command	SFTY
0402			Cannot be used	l
0403			Servo ON command	SON
0404 to	0406		Cannot be used	l
0407			Alarm reset command	ALRS
0408		Device control register 1 (DRG1)	Brake forced-release command	BKRL
0409			Cannot be used	L
040A			Pause command	STP
040B			HomingHome return command	HOME
040C			Positioning start command	CSTR
040D to	040F		Cannot be used	L
0410			Cannot be used	
0411			Jog/inch switching	JISL
0412 to	0413		Cannot be used	
0414			Teaching mode command	MOD
0415			Position data load command	TEAC
0416			Jog+ command	JOG+
0417			Jog- command	JOG-
0418		Device control register 2 (DRG2)	Start position 7	ST7
0419		,	Start position 6	ST6
041A			Start position 5	ST5
041B			Start position 4	ST4
041C			Start position 3	ST3
041D			Start position 2	ST2
041E			Start position 1	ST1
041F			Start position 0	ST0
0420 to	0426		Cannot be used	
0427			PIO/Modbus switching specification	PMSL
0428 to	042B	Expansion device control register (DRGE)	Cannot be used	I
042C			Deceleration stop	STOP
042D to	042F		Cannot be used	
0430 to	0436		Cannot be used	
0437			Position command bit 256	PC256
0438			Position command bit 128	PC128
0439			Position command bit 64	PC64
043A		Position number specification register	Position command bit 32	PC32
043B		(POSR)	Position command bit 16	PC16
043C			Position command bit 8	PC8
043D			Position command bit 4	PC4
043E			Position command bit 2	PC2
043F			Position command bit 1	PC1
			Reserved for system)	

■ Register (R) (Word device/Double word device)

The following shows device numbers which can be set for the register and the corresponding device contents.

Register	Data length	Area name		Abbrevi ation			
0000 to 0CFF		-	(Reserved for system)				
0D00	Word		Device control registe	DRG1			
0D01	Word	I/O control information category	Device control registe	er 2	DRG2		
0D03	Word		Position number spec	cification register	POSR		
0D04 to 0FFF		-	(Reserved for system)				
			Offset (Hex.)	Offset (Hex.)			
	Double word		+0000н	Target position	PCMD		
	Double word		+0002н	In-position bandPositioning band	INP		
	Double word		+0004н	Speed command	VCMD		
	Double word	Position table information	+0006н	Individual zone boundary +	ZNMP		
	Double word	(low-speed memory area)	+0008н	Individual zone boundary -	ZNLP		
	Word		+000AH	Acceleration command	ACMD		
	Word		+000Вн	Deceleration command	DCMD		
1000 to 3FFF	Word		+000Сн	Push-current limiting value	PPOW		
	Word		+000DH	Load current threshold	LPOW		
	Word		+000EH	Control flag specification			
	Example) Position number						
	Example) Position number Device content Device number *1 Calculated in	er: 5 : Speed command (Offset value = $\frac{1}{2}$ (Hex) = $\frac{1000}{1000}$ + $\frac{16 \times 5}{1000}$ = $\frac{1000}{1000}$ + $\frac{1}{2}$	0004н) + 0004н = 1000н + 50н [*]				
4000 to 8FFF	Example) Position number Device content Device number *1 Calculated in	er: 5 : Speed command (Offset value = $\frac{1}{1000}$ (Hex) = $\frac{1000}{1000}$ + $\frac{16 \times 5}{1000}$ = $\frac{1000}{1000}$ h decimal. $\frac{16 \times 5}{1000}$ = 80 to hexadecimal results	0004н) + 0004н = 1000н + 50н [*] 50н.				
4000 to 8FFF	Example) Position number Device content Device number *1 Calculated ir *2 Converting 1	er: 5 : Speed command (Offset value = $\frac{1}{1000}$ (Hex) = $\frac{1000}{1000}$ + $\frac{16 \times 5}{1000}$ = $\frac{1000}{1000}$ h decimal. $\frac{16 \times 5}{1000}$ = 80 to hexadecimal results	0004н) + 0004н = 1000н + 50н* 50н. (Reserved for system)	² + 0004н = 1054н	PNOW		
9000	Example) Position number Device content Device number *1 Calculated ir *2 Converting 1	er: 5 : Speed command (Offset value = $\frac{1}{1000}$ (Hex) = $\frac{1000}{1000}$ + $\frac{16 \times 5}{1000}$ = $\frac{1000}{1000}$ h decimal. $\frac{16 \times 5}{1000}$ = 80 to hexadecimal results	0004H) + 0004H = 1000H + 50H [*] 50H. (Reserved for system) Current position moni	² + 0004н = 1054н tor	PNOW		
9000 9002	Example) Position number Device content Device number *1 Calculated ir *2 Converting 1 Double word Word	er: 5 : Speed command (Offset value = $\frac{1}{1000}$ (Hex) = $\frac{1000}{1000}$ + $\frac{16 \times 5}{1000}$ = $\frac{1000}{1000}$ h decimal. $\frac{16 \times 5}{1000}$ = 80 to hexadecimal results	0004H) + 0004H = 1000H + 50H* 50H. (Reserved for system) Current position moni	² + 0004н = 1054н tor	ALMC		
9000 9002 9003	Example) Position number Device content Device number *1 Calculated ir *2 Converting 1 Double word Word	er: 5 : Speed command (Offset value = $\frac{1}{1000}$ (Hex) = $\frac{1000}{1000}$ + $\frac{16 \times 5}{1000}$ = $\frac{1000}{1000}$ h decimal. $\frac{16 \times 5}{1000}$ = 80 to hexadecimal results	D004H) + 0004H = 1000H + 50H* 50H. (Reserved for system) Current position monital Present alarm code qualitation in the position in the pos	² + 0004 _H = 1054 _H tor uery	ALMC DIPM		
9000 9002 9003 9004	Example) Position number Device content Device number *1 Calculated ir *2 Converting 1 Double word Word Word Word	er: 5 : Speed command (Offset value = $\frac{1}{1000}$ (Hex) = $\frac{1000}{1000}$ + $\frac{16 \times 5}{1000}$ = $\frac{1000}{1000}$ h decimal. $\frac{16 \times 5}{1000}$ = 80 to hexadecimal results	D004H) + 0004H = 1000H + 50H* 50H. (Reserved for system) Current position moni Present alarm code query Input port query Output port monitor query	² + 0004н = 1054н tor uery	ALMC DIPM DOPM		
9000 9002 9003 9004 9005	Example) Position number Device content Device number *1 Calculated ir *2 Converting 1 Double word Word Word Word Word Word Word	er: 5 : Speed command (Offset value = $\frac{1}{1000}$ (Hex) = $\frac{1000}{1000}$ + $\frac{16 \times 5}{1000}$ = $\frac{1000}{1000}$ h decimal. $\frac{16 \times 5}{1000}$ = 80 to hexadecimal results	D004H) + 0004H = 1000H + 50H* 50H. (Reserved for system) Current position moni Present alarm code q Input port query Output port monitor q Device status 1 query	² + 0004 _H = 1054 _H tor uery	ALMC DIPM DOPM DSS1		
9000 9002 9003 9004 9005 9006	Example) Position number Device content Device number *1 Calculated ir *2 Converting 1 Double word Word Word Word Word Word Word Word W	er: 5 : Speed command (Offset value = $\frac{1}{1000}$ (Hex) = $\frac{1000}{1000}$ + $\frac{16 \times 5}{1000}$ = $\frac{1000}{1000}$ h decimal. $\frac{16 \times 5}{1000}$ = 80 to hexadecimal results	D0004H) + 0004H = 1000H + 50H (Reserved for system) Current position monit Present alarm code q Input port query Output port monitor q Device status 1 query Device status 2 query	² + 0004H = 1054H tor uery v	ALMC DIPM DOPM DSS1 DSS2		
9000 9002 9003 9004 9005 9006	Example) Position number Device content Device number *1 Calculated ir *2 Converting 1 Double word Word Word Word Word Word Word Word W	er: 5 : Speed command (Offset value = 1 (Hex) = 1000н + (16 × 5 = 80)*1*2 n decimal. 16 × 5 = 80 to hexadecimal results	D004H) + 0004H = 1000H + 50H* 50H. (Reserved for system) Current position moni Present alarm code q Input port query Output port monitor q Device status 1 query Device status 2 query Expansionded device	² + 0004H = 1054H tor uery v	ALMC DIPM DOPM DSS1 DSS2 DSSE		
9000 9002 9003 9004 9005 9006 9007 9008	Example) Position number Device content Device number *1 Calculated ir *2 Converting 1 Double word Word Word Word Word Word Word Word W	er: 5 : Speed command (Offset value = $\frac{1}{1000}$ (Hex) = $\frac{1000}{1000}$ + $\frac{16 \times 5}{1000}$ = $\frac{1000}{1000}$ h decimal. $\frac{16 \times 5}{1000}$ = 80 to hexadecimal results	D0004H) + 0004H = 1000H + 50H (Reserved for system) Current position monit Present alarm code q Input port query Output port monitor q Device status 1 query Device status 2 query Expansionded device System status query	2 + 0004H = 1054H tor uery uery status query	ALMC DIPM DOPM DSS1 DSS2 DSSE STAT		
9000 9002 9003 9004 9005 9006 9007 9008 900A	Example) Position number Device content Device number *1 Calculated ir *2 Converting 1 Double word Word Word Word Word Word Word Word Double word Double word	er: 5 : Speed command (Offset value = r (Hex) = 1000+ + (16 × 5 = 80)*1*2 in decimal. 16 × 5 = 80 to hexadecimal results	D004H) + 0004H = 1000H + 50H* 50H. (Reserved for system) Current position moni Present alarm code quality Input port query Output port monitor quality Device status 1 query Device status 2 query Expansionded device System status query Current speed monitor	2 + 0004H = 1054H tor uery uery status query	ALMC DIPM DOPM DSS1 DSS2 DSSE STAT VNOW		
9000 9002 9003 9004 9005 9006 9007 9008 900A 900C	Example) Position number Device content Device number *1 Calculated ir *2 Converting 1 Double word Word Word Word Word Word Word Word Double word Double word Double word	er: 5 : Speed command (Offset value = r (Hex) = 1000+ + (16 × 5 = 80)*1*2 in decimal. 16 × 5 = 80 to hexadecimal results	D004H) + 0004H = 1000H + 50H* 50H. (Reserved for system) Current position monion Present alarm code query Input port query Output port monitor query Device status 1 query Device status 2 query Expansionded device System status query Current speed monitor Current ampere moni	2 + 0004H = 1054H tor uery uery status query	ALMC DIPM DOPM DSS1 DSS2 DSSE STAT VNOW CNOW		
9000 9002 9003 9004 9005 9006 9007 9008 900A 900C 900E	Example) Position number Device content Device number *1 Calculated ir *2 Converting 1 Double word Word Word Word Word Word Word Double word Double word Double word Double word Double word	er: 5 : Speed command (Offset value = r (Hex) = 1000+ + (16 × 5 = 80)*1*2 in decimal. 16 × 5 = 80 to hexadecimal results	D004H) + 0004H = 1000H + 50H* 50H. (Reserved for system) Current position monit Present alarm code of Input port query Output port monitor of Device status 1 query Expansionded device System status query Current speed monitor Current ampere monitor of Input port query Device status 2 query Expansionded device System status query Current ampere monitor	2 + 0004H = 1054H tor uery uery status query	ALMC DIPM DOPM DSS1 DSS2 DSSE STAT VNOW CNOW DEVI		
9000 9002 9003 9004 9005 9006 9007 9008 900A 900C 900E	Example) Position number Device content Device number *1 Calculated ir *2 Converting 1 Double word Word Word Word Word Word Word Double word	er: 5 : Speed command (Offset value = r (Hex) = 1000+ + (16 × 5 = 80)*1*2 in decimal. 16 × 5 = 80 to hexadecimal results	D004H) + 0004H = 1000H + 50H* (Reserved for system) Current position monion Present alarm code quality Input port query Output port monitor quality Device status 1 query Device status 2 query Expansionded device System status query Current speed monitor Current ampere monion Deviation monitor System timer query	2 + 0004H = 1054H tor uery uery status query or tor	ALMC DIPM DOPM DSS1 DSS2 DSSE STAT VNOW CNOW DEVI STIM		
9000 9002 9003 9004 9005 9006 9007 9008 900A 900C 900E 9010 9012	Example) Position number Device content Device number *1 Calculated ir *2 Converting 1 Double word Word Word Word Word Word Word Double word	er: 5 : Speed command (Offset value = r (Hex) = 1000+ + (16 × 5 = 80)*1*2 in decimal. 16 × 5 = 80 to hexadecimal results	D004H) + 0004H = 1000H + 50H* 50H. (Reserved for system) Current position monion Present alarm code of Input port query Output port monitor of Device status 1 query Device status 2 query Expansionded device System status query Current speed monitor Current ampere monion Deviation monitor System timer query Special input port que	2 + 0004H = 1054H tor uery uery status query or tor	ALMC DIPM DOPM DSS1 DSS2 DSSE STAT VNOW CNOW DEVI STIM SIPM		
9000 9002 9003 9004 9005 9006 9007 9008 900A 900C 900E	Example) Position number Device content Device number *1 Calculated ir *2 Converting 1 Double word Word Word Word Word Word Word Double word	er: 5 : Speed command (Offset value = r (Hex) = 1000+ + (16 × 5 = 80)*1*2 in decimal. 16 × 5 = 80 to hexadecimal results	D004H) + 0004H = 1000H + 50H* (Reserved for system) Current position monitor query Output port monitor query Device status 1 query Device status 2 query Expansionded device System status query Current speed monitor Current ampere monitor Deviation monitor System timer query Special input port query Zone status query Completed position n	2 + 0004H = 1054H tor uery uery status query or tor	ALMC DIPM DOPM DSS1 DSS2 DSSE STAT VNOW CNOW DEVI STIM		
9000 9002 9003 9004 9005 9006 9007 9008 900A 900C 900E 9010 9012 9013	Example) Position number Device content Device number *1 Calculated ir *2 Converting 1 Double word Word Word Word Word Word Word Double word Double word Double word Double word Double word Double word Word Word Word Word Word Word Word W	er: 5 : Speed command (Offset value = 1 (Hex) = 1000H + (16 × 5 = 80)*1*2 in decimal. 16 × 5 = 80 to hexadecimal results Controller monitor information category	D004H) + 0004H = 1000H + 50H* 50H. (Reserved for system) Current position monicular present alarm code quality port query Output port monitor quality Device status 1 query Expansionded device System status query Current speed monitor Current ampere monicular present alarm code quality port query Expansionded device System status query Current ampere monicular present present ampere monicular present present query Special input port query Zone status query Completed position in status query	2 + 0004H = 1054H tor uery uery status query or tor	ALMC DIPM DOPM DSS1 DSS2 DSSE STAT VNOW CNOW DEVI STIM SIPM ZONS		
9000 9002 9003 9004 9005 9006 9007 9008 900A 900C 900E 9010 9012 9013	Example) Position number Device content Device number *1 Calculated ir *2 Converting 1 Double word Word Word Word Word Word Word Double word Double word Double word Double word Double word Double word Word Word Word Word Word Word Word W	er: 5 : Speed command (Offset value = 1 (Hex) = 1000H + (16 × 5 = 80)*1*2 in decimal. 16 × 5 = 80 to hexadecimal results Controller monitor information category	D004H) + 0004H = 1000H + 50H* (Reserved for system) Current position monitor query Output port monitor query Device status 1 query Device status 2 query Expansionded device System status query Current speed monitor Current ampere monitor Deviation monitor System timer query Special input port query Zone status query Completed position n	2 + 0004H = 1054H tor uery uery status query or tor umberPosition complete number	ALMC DIPM DOPM DSS1 DSS2 DSSE STAT VNOW CNOW DEVI STIM SIPM ZONS		

Register	Data length	Area name	Description	Abbrevi ation		
9900	Double word		Target position coordinate specification register	PCMD		
9902	Double word		In-position bandPositioning band specification register	INP		
9904	Double word	Numerical value command	Speed specification register	VCMD		
9906	Word	category	Acceleration/deceleration speed specification register	ACMD		
9907	Word		Push-current limiting value	PPOW		
9908	Word		Control flag specification register			
9909 to FFFF	- (Reserved for system)					

2.7 Precautions

Program control device

- When Program Execution Command (0), Program Exit Command (2), or Program Restart Command (4) is written to the program control device (PRG 0), it will be a request for all programs running in the controllers.
- When unsupported write data is input to the program control device, the following error is displayed in the system alarm.

315: Device writing error.
Correct device.

Variable devices

The variable number 99 of Integer device and variable number 199 of Real device are special devices used for operations by the X-SEL controller system. Do not use these variables for general purpose.

Command trigger compatible device

- For the device whose obtained data No.0 is a command trigger, communication with the controller is performed when the Write(1)/Read(2) is set to the command trigger. When the command trigger and setting value are written in a batch, the communication is performed based on the value set with batch write.
- When Clear(4) is set to the command trigger, the communication with the controller is not performed and the set value is initialized.
- When an unsupported set value is input to the command trigger, the following error is displayed in the system alarm.

315: Device writing error.
Correct device.

■ Device reserved for system use

Devices of "Reserved for system use" are devices with indefinite values. Do not write to these devices.

Write to the flash ROM

- The point data can be written to the flash ROM of the X-SEL controller. When the point data is written to the flash ROM, it is not cleared even when power supply to the controller is turned off. However, there are limits in the number of writing. For details, refer to the user's manual of X-SEL controller used.
- Never turn off the main power supply during the flash ROM write. Doing so may cause the loss of data and malfunction of controllers. For details, refer to the user's manual of X-SEL controller used.

Communication disconnection

- Writing to the flash ROM disconnects the communication with controllers until the writing is completed.
- Resetting software restarts the controllers. During this time, the communication with controllers is disconnected.

Station number setting of the IAI robot controller system

The robot controller with the station number set with the host address must be included.

2.4.2 Communication detail settings

■ Connection of the IAI X-SEL K type

Note the following precaution when using the controller with the mode switch set to MANU.

 After powering up the X-SEL, connecting the GOT before the PC software causes the program startup disabled (A1D alarm) on the X-SEL side.



	_
	_
	_

CONNECTION TO AZBIL (former YAMATAKE) CONTROL EQUIPMENT

3.1	Connectable Model List
3.2	System Configuration
3.3	Connection Diagram 3 - 31
3.4	GOT Side Settings
3.5	Control Equipment Side Setting
3.6	Device Range that Can Be Set
3.7	Precautions

3. CONNECTION TO AZBIL CONTROL EQUIPMENT

3.1 Connectable Model List

The following table shows the connectable models.


Series	Model name	Clock	Communication Type	Connectable model	Refer to
DMC	DMC10	×	RS-232 RS-485	ет ет ет 27 25 23	3.2.1
DIVIC	DMC50	×	RS-485	ет ет ет 27 25 23	3.2.2
	SDC15				
	SDC25				
	SDC26	×	RS-232 RS-485	27 25 GT 23	3.2.3
	SDC35		110 100		
	SDC36				
	SDC20		RS-232	GT GT	1
000	SDC21	×	RS-485	27 25 23	3.2.4
SDC	SDC30		RS-232	GT GT	
	SDC31	×	RS-485	27 25 23	3.2.5
	SDC40A			ет ет ет 27 25 23	
	SDC40B	×	RS-232 RS-485		3.2.6
	SDC40G				
	SDC45		RS-232	GT GT	3.2.7
	SDC46	×	RS-485	27 25 23	
CMS	CMS	×	RS-232 RS-485	ет ет ет 27 25 23	3.2.8
OME	CMF015		RS-232	GT GT GT	
CMF	CMF050	×	RS-485	27 25 23	3.2.9
CML	CML	×	RS-232 RS-485	ет ет ет 27 25 23	3.2.10
MQV	MQV				3.2.8
MPC	MPC	×	RS-232	ет ет ет 27 25 23	3.2.8
MVF	MVF		RS-485		3.2.8
PBZ	PBC201-VN2	×	RS-232 RS-485	ет ет ет 27 25 23	3.2.10
ALID	AUR350C		RS-232	GT GT	
AUR	AUR450C	×	RS-485	27 25 23	[₹ 3.2.11
RX	RX	×	RS-232 RS-485	ет ет ет 27 25 23	3.2.8

Series	Model name	Clock	Communication Type	Connectable GOT	Refer to
СМС	CMC10B	×	RS-232 RS-485	ет ет ет 27 25 23	3.2.12
AHC2001	AHC2001	×	RS-232 RS-485	ет ет ет 27 25 23	3.2.13
	NX-D15				
	NX-D25	1			
	NX-D35	1			3.2.14
	NX-DX1	1		ет ет ет 27 25 23	
	NX-DX2	1	RS-232 RS-485		
	NX-DY	×	(MODBUS)		
	NX-S01	1			
	NX-S11	1			
	NX-S12	1			
NX	NX-S21				
IVA	NX-D15		Ethernet	ет ет ет 27 25 23	3.2.14
	NX-D25	1			
	NX-D35	1			
	NX-DX1	1			
	NX-DX2	×			
	NX-DY] ^	(MODBUS)		
	NX-S01	1			
	NX-S11	1			
	NX-S12	1			
	NX-S21				

3.2 System Configuration

3.2.1 Connecting to DMC10


■ When using the Interface converter

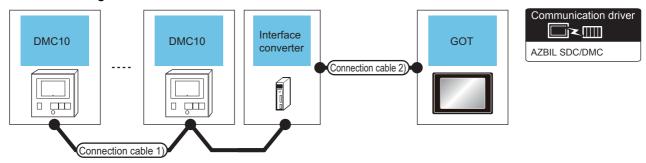

Temperatur e controller	Connection cable	1)	Interface co	erface converter*1 Connection cable 2)		GOT		Number of		
Model name	Cable model Connection diagram number	Max. distan ce	Model name	Commu nication Type	Cable model Connection diagram number	Max. distan ce	Option device	Model	connectable equipment	
DMC10	User)RS485 connection diagram 1)	500m CMC10L	CMC10I	DC 222	User greene RS232	45.00	- (Built into GOT)	ет 27 25 ст 23	Up to 15 temperature	
			0L RS-232	connection diagram 1)	15m	GT15-RS2-9P	ет ет 27 25	controllers for 1 GOT		

^{*1} Product manufactured by Azbil Corporation. For details on the product, contact Azbil Corporation.

■ When connecting directly

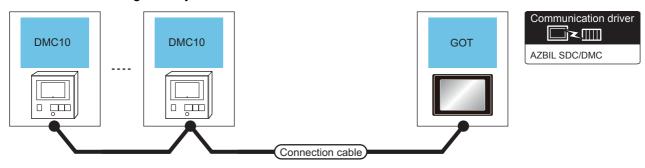


Temperatur	e controller	Connection cable		GOT		Number of connectable
Model name	Communic ation Type	Cable model Connection diagram number	Model	equipment		
		User RS485 connection diagram 12)	500m	- (Built into GOT)	er er 25 27 25 Gr 23	
DMC10	RS-485	User) RS485 connection diagram 3)	500m*1	FA-LTBGT2R4CBL05 (0.5m)*2 FA-LTBGT2R4CBL10 (1m)*2 FA-LTBGT2R4CBL20 (2m)*2	et et 25 27 25 et 23	Up to 15 temperature controllers for 1 GOT
		User RS485 connection diagram 5)	500m	GT15-RS4-TE	er er 27 25	

^{*1} Including the cable length of the option devices.

^{*2} Product manufactured by MITSUBISHI ELECTRIC ENGINEERING COMPANY LIMITED. For details of the product, contact MITSUBISHI ELECTRIC ENGINEERING COMPANY LIMITED.

3.2.2 Connecting to DMC50

■ When using the COM module

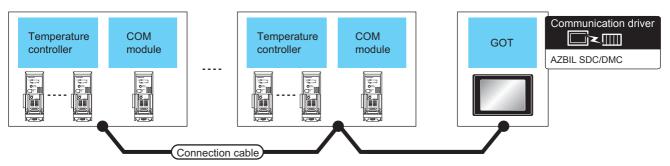


Temperature controller	Connection cable		COM modul	e*1	GOT		Number of connectable	
Model name	Connection diagram number	Max. distan ce	Model name	Commu nication Type	Option device	Option device Model		
	(User) RS485 connection diagram 8)	500m *2	DMC50M20X	RS-485	FA-LTBGT2R4CBL05 (0.5m)*3 FA-LTBGT2R4CBL10 (1m)*3 FA-LTBGT2R4CBL20 (2m)*2	ет ет 27 25 ет 23		
DMC50CX					- (Built into GOT)	ет ет 25 ет 23	Up to 8 COM module for 1 GOT. Up to 120 temperature	
DMC50CX	(User)RS485 connection diagram 9	500m	DMC50M20X RS-4		GT15-RS4-9S	ет ет 27 25	controllers for 1 COM module.	
	User RS485 connection diagram 9)				GT15-RS4-TE	ет ет 27 25		

¹ Including the cable length of the option devices.

^{*2} Product manufactured by Azbil Corporation. For details on the product, contact Azbil Corporation.

^{*3} Product manufactured by MITSUBISHI ELECTRIC ENGINEERING COMPANY LIMITED. For details of the product, contact MITSUBISHI ELECTRIC ENGINEERING COMPANY LIMITED.

■ When connecting directly to one temperature controller

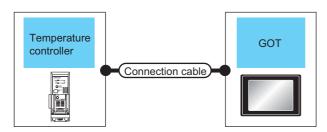




Temperature controller	Connection	n cable		GOT		Number of connectable
Model name	Connection diagram number	Max. distance	Communi cation Type	Option device	Model	equipment
	(User) (resurts) RS485 connection diagram 10)	500m*1	RS-485	FA-LTBGT2R4CBL05 (0.5m)*2 FA-LTBGT2R4CBL10 (1m)*2 FA-LTBGT2R4CBL20 (2m)*2	27 25 GT 23	
DMC50CX	User RS485 connection diagram 13)	500m	RS-485	- (Built into GOT)	GT 27 25 GT 23	Up to 1 temperature controller for 1 GOT
	User RS485 connection diagram 11)	500m	RS-485	GT15-RS4-TE	ет ет 27 25	

^{*1} Including the cable length of the option devices.

^{*2} Product manufactured by MITSUBISHI ELECTRIC ENGINEERING COMPANY LIMITED.For details of the product, contact MITSUBISHI ELECTRIC ENGINEERING COMPANY LIMITED.

3.2.3 Connecting to SDC15, SDC25/26 or SDC35/36


■ When using the Interface converter

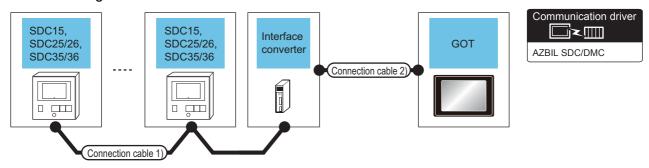

Temperature controller	Connection cable 1)		Interface converter*1		Connection cable 2)		GOT		
Model name	Cable model Connection diagram number	Max. distan ce	Model name Communica on Type		Cable model Connection diagram number	Max. distan ce	Option device	Option device Model Number	
SDC15 SDC25/26	User RS485	500m	CMC10L	RS-232	User RS232	15m	- (Built into GOT)	27 25 GT 25 23	Up to 31 temperature
SDC35/36	connection diagram 1)	300111	CINIC TOL	N3-232	connection diagram 1)	13111	GT15-RS2-9P	ет ет 27 25	controllers for 1 GOT

^{*1} Product manufactured by Azbil Corporation. For details on the product, contact Azbil Corporation.

■ When connecting directly

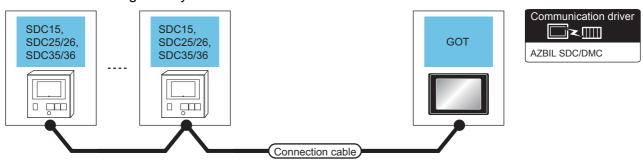


Temperature	controller	Connection cable		GOT		Number of
Model name	Communic ation Type	Cable model Connection diagram number	Max. distance	Option device	Model	connectable equipment
SDC15 SDC25/26 SDC35/36		(User) RS485 connection diagram 3)	500m ^{*1}	FA-LTBGT2R4CBL05 (0.5m)*2 FA-LTBGT2R4CBL10 (1m)*2 FA-LTBGT2R4CBL20 (2m)*2	er er 25 27 25 er 23	
	RS-485	(User) RS485 connection diagram 12)	500m	- (Built into GOT)	et et 25 27 25 et 23	Up to 31 temperature controllers for 1 GOT
		User RS485 connection diagram 5)	500m	GT15-RS4-TE	ет ет 27 25	

^{*1} Including the cable length of the option devices.

^{*2} Product manufactured by MITSUBISHI ELECTRIC ENGINEERING COMPANY LIMITED.For details of the product, contact MITSUBISHI ELECTRIC ENGINEERING COMPANY LIMITED.

3.2.4 Connecting to SDC20/21


■ When using the Interface converter

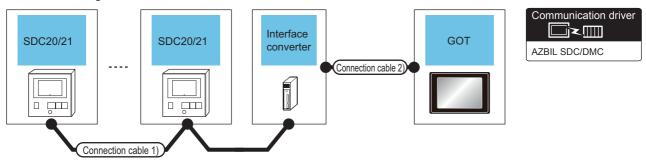

Temperatur e controller	Connection cable 1)		Interface converter*1		Connection cable 2)		GOT		
Model name	Cable model Connection diagram number	Max. distan ce	Model name	Communi cation Type	Cable model Connection diagram number	Max. distan ce	Option device	Model	Number of connectable equipment
SDC20/21	User RS485	500m	CMC10L	RS-232	User RS232	15m	- (Built into GOT)	er er 25 27 25 er 23	Up to 31 temperature
00020/21	connection diagram 2)	300111	GWIGTOL	10-232	connection diagram 1)	13111	GT15-RS2-9P	er er 27 25	controllers for 1 GOT

Product manufactured by Azbil Corporation. For details on the product, contact Azbil Corporation.


■ When connecting directly to one temperature controller

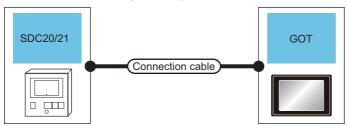



Temperature	controller	Connection cable		GOT		
Model name	Commun ication Type	Cable model Connection diagram number	Max. distance	Option device	Model	Number of connectable equipment
SDC20/21	RS-232	User RS232 connection diagram	15m	- (Built into GOT)	er er 25 27 25 er 23	Up to 1 temperature
35020/21	110-202	2)	13111	GT15-RS2-9P	er er 27 25	controller for 1 GOT

■ When connecting directly to multiple temperature controllers

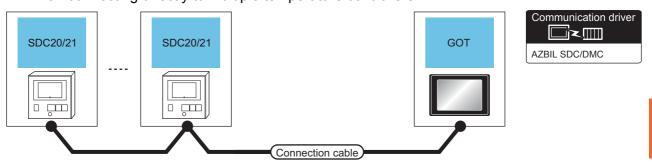


Temperature	controller	Connection cable		GOT		
Model name	Commun ication Type	Cable model Connection diagram number	Max. distance	Option device	Model	Number of connectable equipment
		User)RS485 connection diagram 4)(4-wire) User)RS485 connection diagram	500m ^{*1}	FA-LTBGT2R4CBL05 (0.5m)*2 FA-LTBGT2R4CBL10 (1m)*2	27 25 GT 23	
		14)(2-wire)		FA-LTBGT2R4CBL20 (2m)*2		
		User RS485 connection diagram	500m	- (Built into GOT)	er er 25 er 25 er 23	
SDC20/21	RS-485	6)(4-wire)	300111	GT15-RS4-9S	er er 27 25	Up to 31 temperature controllers for 1 GOT
		User) RS485 connection diagram 15)(2-wire)	500m	- (Built into GOT)	et et 25 27 25 et 23	
		(User RS485 connection diagram 7)(4-wire)	500m	GT15-RS4-TE	ет 27 25	
		(User properties) RS485 connection diagram 16)(2-wire)				

^{*1} Including the cable length of the option devices.

^{*2} Product manufactured by MITSUBISHI ELECTRIC ENGINEERING COMPANY LIMITED. For details of the product, contact MITSUBISHI ELECTRIC ENGINEERING COMPANY LIMITED.

3.2.5 Connecting to SDC30/31


■ When using the Interface converter

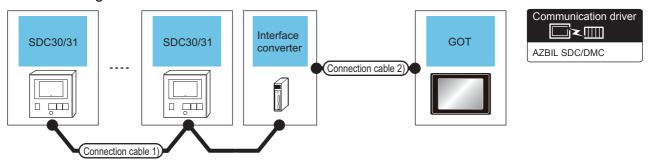

Temperatur e controller	Connection cable 1)		Interface converter*1		Connection cable 2)		GOT		
Model name	Cable model Connection diagram number	Max. distanc e	Model name	Commun ication Type	Cable model Connection diagram number	Max. distanc e	stanc Option device Model		Number of connectable equipment
SDC30/31	User RS485	500m	CMC10L	RS-232	User RS232	15m	- (Built into GOT)	27 25 27 25 37 23	Up to 31 temperature
30030/31	connection diagram 2)	300111	CIMCTOL	K3-232	connection diagram 1)	13111	GT15-RS2-9P	er er 27 25	controllers for 1 GOT

^{*1} Product manufactured by Azbil Corporation. For details on the product, contact Azbil Corporation.

■ When connecting directly

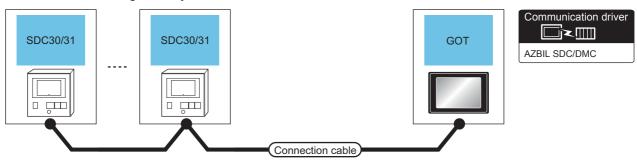


Temperature	controller	Connection cable		GOT		Number of
Model name	Communic ation Type	Cable model Connection diagram number	Max. distance	Option device	Model	connectable equipment
		User) RS485 connection diagram 4)(4-wire) User) RS485 connection diagram	500m ^{*1}	FA-LTBGT2R4CBL05 (0.5m)*2 FA-LTBGT2R4CBL10 (1m)*2 FA-LTBGT2R4CBL20 (2m)*2	27 25 GT 23	
		14)(2-wire)		` ,		
SDC30/31	RS-485	User RS485 connection diagram	500m	- (Built into GOT)	er 27 25 er 23	Up to 31 temperature
35030/31		6)(4-wire)	300111	GT15-RS4-9S	controllers for 1 GOT	
		(User)RS485 connection diagram 7)(4-wire)	500m	GT15-RS4-TE	ет ет 27 25	
		User RS485 connection diagram 16)(2-wire)	300111	0110110712		

Including the cable length of the option devices.

Product manufactured by MITSUBISHI ELECTRIC ENGINEERING COMPANY LIMITED. For details of the product, contact MITSUBISHI ELECTRIC ENGINEERING COMPANY LIMITED.

3.2.6 Connecting to SDC40A/40B/40G


■ When using the Interface converter

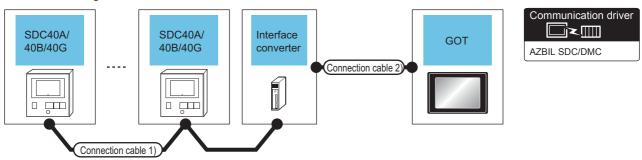

Temperatur e controller	Connection cable 1)		Interface converter*1		Connection cable 2)		GOT		
Model name	Cable model Connection diagram number	Max. distanc e	Model name	Communi cation Type	Cable model Connection diagram number	Max. distanc e	Option device	Model	Number of connectable equipment
SDC40A/	User RS485	500m	CMC10L	RS-232	User RS232	15m	- (Built into GOT)	er er 25 27 25 er 23	Up to 31 temperature
40B/40G	connection diagram 2)	300111	GWIGTOL	10-232	connection diagram 1)	13111	GT15-RS2-9P	er er 25	controllers for 1 GOT

Product manufactured by Azbil Corporation. For details on the product, contact Azbil Corporation.


■ When connecting directly to one temperature controller

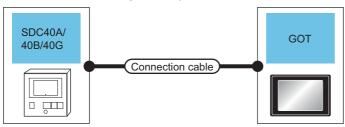



Temperature	controller	Connection cable		GOT			
Model name	Commun ication Type	Cable model Connection diagram number	Max. distance	Option device	Model	Number of connectable equipment	
SDC40A/	RS-232	User RS232 connection diagram		- (Built into GOT)	er er 25 25 23	Up to 1 temperature	
40B/40G	110-202	2)	15m	GT15-RS2-9P	er er 27 25	controller for 1 GOT	

■ When connecting directly to multiple temperature controllers

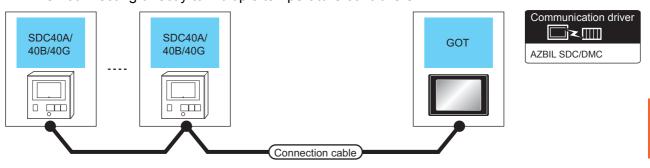


Temperature controller		Connection cable		GOT		
Model name	Commun ication Type	Cable model Connection diagram number	Max. distance	Option device	Model	Number of connectable equipment
		User) RS485 connection diagram 4)(4-wire) User) RS485 connection diagram 14)(2-wire)	500m ^{*1}	FA-LTBGT2R4CBL05 (0.5m)*2 FA-LTBGT2R4CBL10 (1m)*2 FA-LTBGT2R4CBL20 (2m)*2	27 25 er 23	
		User RS485 connection diagram	500	- (Built into GOT)	27 25 GT 23	
SDC40A/ 40B/40G	RS-485	6)(4-wire)	GT15-RS4-9S	ет ет 27 25	Up to 31 temperature controllers for 1 GOT	
		User) RS485 connection diagram 15)(2-wire)	500m	- (Built into GOT)	er er 25 27 25 er 23	
		User RS485 connection diagram 7)(4-wire) User RS485 connection diagram 16)(2-wire)	500m	GT15-RS4-TE	ет ет 27 25	

^{*1} Including the cable length of the option devices.

^{*2} Product manufactured by MITSUBISHI ELECTRIC ENGINEERING COMPANY LIMITED. For details of the product, contact MITSUBISHI ELECTRIC ENGINEERING COMPANY LIMITED.

3.2.7 Connecting to SDC45/46


■ When using the Interface converter

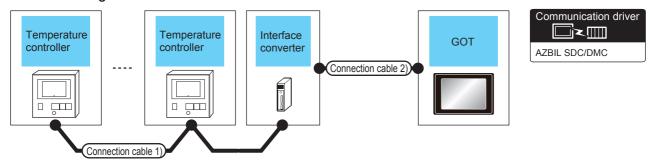

Temperature controller	Connection cable 1)		Interface co	onverter*1	Connection cable 2)		GOT		
Model name	Cable model Connection diagram number	Max. distan ce	Model name	Commu nication Type	Cable model Connection diagram number	Max. distan ce	Option device	Model	Number of connectable equipment
SDC45/46	User RS485	500m	CMC10L	RS-232	User RS232	15m	- (Built into GOT)	27 25 er 23	Up to 31 temperature
SDC43/40	connection diagram 17)	300111	CIMCTUL	K3-232	connection diagram 1)	15111	GT15-RS2-9P	ет ет 27 25	controllers for 1 GOT

^{*1} Product manufactured by Azbil Corporation. For details on the product, contact Azbil Corporation.

■ When connecting directly to multiple temperature controllers

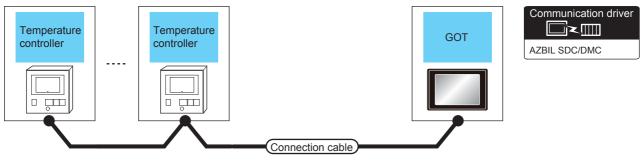


Temperature co	ontroller	Connection cable	е	GOT		Number of
Model name	Communic ation Type	Cable model Connection diagram number	Max. distance	Option device	Model	connectable equipment
		(User) RS485 connection diagram 18)	500m*1	FA-LTBGT2R4CBL05 (0.5m)*2 FA-LTBGT2R4CBL10 (1m)*2 FA-LTBGT2R4CBL20 (2m)*2	er er 25 27 25 er 23	
SDC45/46	RS-485	(User) RS485 connection diagram 19)	500m	GT15-RS4-TE	er er 27 25	Up to 31 temperature controller for 1 GOT
		(User) RS485 connection diagram 20)	500m	- (Built into GOT)	er er 27 25 er 23	

^{*1} Including the cable length of the option devices.

^{*2} Product manufactured by MITSUBISHI ELECTRIC ENGINEERING COMPANY LIMITED. For details of the product, contact MITSUBISHI ELECTRIC ENGINEERING COMPANY LIMITED.

3.2.8 Connecting to CMS, MQV, MPC, MVF, RX


■ When using the Interface converter

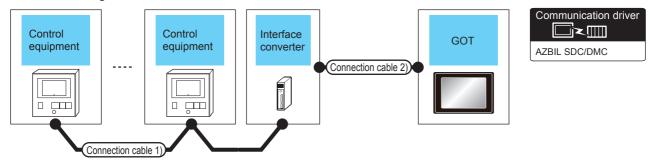

Control equipment	Connection ca	ble 1)	Interface co	onverter*1	Connection ca	able 2)	GOT		
Model name	Cable model Connection diagram number	Max. distan ce	Model name	Commu nication Type	Cable model Connection diagram number	Max. distan ce	Option device	Model	Number of connectable equipment
CMS MQV MPC	User RS485	500m	CMC10L	RS-232	User RS232	15m	- (Built into GOT)	eT GT 25 25 23	Up to 31 control
MVF RX	connection diagram 17)	30011	SMOTOL	110.202	connection diagram 1)	13111	GT15-RS2-9P	ст ст 27 25	equipment for 1 GOT

^{*1} Product manufactured by Azbil Corporation. For details on the product, contact Azbil Corporation.

■ When connecting directly to multiple control equipments

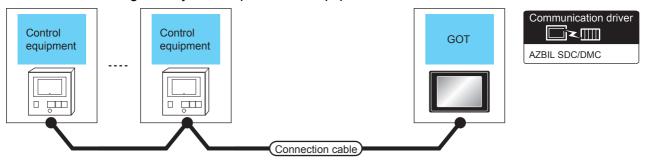


Control equip	ment	Connection cable	е	GOT		
Model name	Communic ation Type	Cable model Connection diagram number	Max. distance	Option device	Model	Number of connectable equipment
		(User) RS485 connection diagram 18)	500m*1	FA-LTBGT2R4CBL05 (0.5m)*2 FA-LTBGT2R4CBL10 (1m)*2 FA-LTBGT2R4CBL20 (2m)*2	er er 25 27 25 er 23	
CMS MQV MPC MVF RX	RS-485	(User) RS485 connection diagram 19)	500m	GT15-RS4-TE	ет ет 27 25	Up to 1 control equipment for 1 GOT
		(User) RS485 connection diagram 20)	500m	- (Built into GOT)	et et 25 27 25 et 23	

^{*1} Including the cable length of the option devices.

^{*2} Product manufactured by MITSUBISHI ELECTRIC ENGINEERING COMPANY LIMITED.For details of the product, contact MITSUBISHI ELECTRIC ENGINEERING COMPANY LIMITED.

3.2.9 Connecting to CMF015, CMF050

■ When using the Interface converter

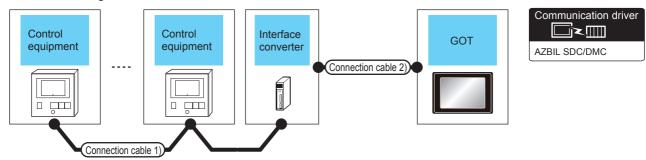


Control equipment	Connection ca	able 1)	Interface of	converter*1	Connection ca	able 2)	GOT	-	
Model name	Cable model Connection diagram number	Max. distan ce	Model name	Communicati on Type	Cable model Connection diagram number	Max. distan ce	Option device	Model	Number of connectable equipment
CME015	User RS485	500m	CMC10L	RS-232	User RS232	15m	- (Built into GOT)	ет ет 27 25 ет 23	Up to 31 control
CMF015	connection diagram 17)	Coom	GMG10L	130 202	connection diagram 1)	10	GT15-RS2-9P	ет ет 27 25	equipment for 1 GOT
CMF050	User RS485	500m	CMC10I	RS-232	User RS232	15m	- (Built into GOT)	ет ет 27 25 ет 23	Up to 31 control
CMF050	connection diagram 2)			110 202	connection diagram 1)	10111	GT15-RS2-9P	ет ет 27 25	equipment for 1 GOT

^{*1} Product manufactured by Azbil Corporation. For details on the product, contact Azbil Corporation.

■ When connecting directly

(1) Connecting to CMF015

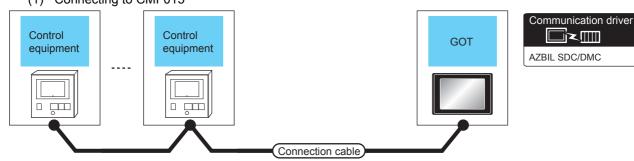


Control eq	uipment	Connection cable		GOT		Number of
Model name	Communic ation Type	Cable model Connection diagram number	Max. distance	Option device	Model	connectable equipment
		User RS485 connection diagram	500m* ¹	FA-LTBGT2R4CBL05 (0.5m)*2 FA-LTBGT2R4CBL10 (1m)*2 FA-LTBGT2R4CBL20 (2m)*2	ет ет 27 25 ет 23	
CMF015	RS-485	User)RS485 connection diagram	500m	GT15-RS4-TE	ет ет 27 25	Up to 1 control equipment for 1 GOT
		User RS485 connection diagram 20)	500m	- (Built into GOT)	27 25 GT 23	

^{*1} Including the cable length of the option devices.

^{*2} Product manufactured by MITSUBISHI ELECTRIC ENGINEERING COMPANY LIMITED.For details of the product, contact MITSUBISHI ELECTRIC ENGINEERING COMPANY LIMITED.

(2) Connecting to CMF050

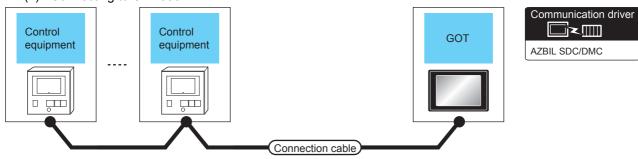


Control eq	uipment	Connection cable		GOT		
Model name	Commun ication Type	Cable model Connection diagram number	Max. distance	Option device	Model	Number of connectable equipment
		User RS485 connection diagram 4)(4-wire)	500m*1	FA-LTBGT2R4CBL05 (0.5m)*2 FA-LTBGT2R4CBL10 (1m)*2	ет ет 27 25 ет 23	
		(User) RS485 connection diagram 14)(2-wire)		FA-LTBGT2R4CBL20 (2m)*2	25	
		User RS485 connection diagram	500m	- (Built into GOT)	er 25 25 23	
CMF050	RS-485	6)(4-wire) S-485	333	GT15-RS4-9S	er er 27 25	Up to 1 control equipment for 1 GOT
	User) RS485 connection of 15)(2-wire)	User RS485 connection diagram 15)(2-wire)	500m	- (Built into GOT)	et et 25 27 25 et 23	
		User RS485 connection diagram 7)(4-wire)	500m	GT15-RS4-TE	ет ет 27 25	
		(User) RS485 connection diagram 16)(2-wire)				

^{*1} Including the cable length of the option devices.

Product manufactured by MITSUBISHI ELECTRIC ENGINEERING COMPANY LIMITED. For details of the product, contact MITSUBISHI ELECTRIC ENGINEERING COMPANY LIMITED.


■ When using the Interface converter

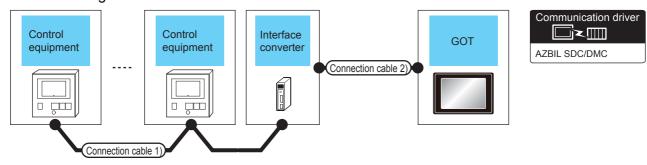

Control equipment	Connection ca	ble 1)	Interface co	onverter*1	Connection ca	able 2)	GOT		
Model name	Cable model Connection diagram number	Max. distan ce	Model name	Communi cation Type	Cable model Connection diagram number	Max. distan ce	Option device	Model	Number of connectable equipment
CML	User RS485	500m	CMC10L	RS-232	User RS232	15m	- (Built into GOT)	27 25 27 25 31 23	Up to 31 control
PBC201-VN2	connection diagram 2)	300111	GWGTGE	110-232	connection diagram 1)	13111	GT15-RS2-9P	ет ет 27 25	equipment for 1 GOT

^{*1} Product manufactured by Azbil Corporation. For details on the product, contact Azbil Corporation.

■ When connecting directly

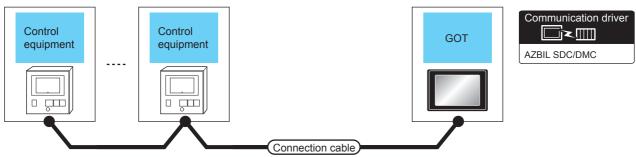


Control equi	ipment	Connection cable		GOT		
Model name	Commun ication Type	Cable model Connection diagram number	Max. distance	Option device	Model	Number of connectable equipment
		User) RS485 connection diagram 4)(4-wire) User) RS485 connection diagram 14)(2-wire)	500m ^{*1}	FA-LTBGT2R4CBL05 (0.5m)*2 FA-LTBGT2R4CBL10 (1m)*2 FA-LTBGT2R4CBL20 (2m)*2	er er 25 27 25 er 23	
		(User) RS485 connection diagram	500m	- (Built into GOT)	er er 25 27 25 er 23	
CML PBC201-VN2	User RS485 conn 15)(2-v User RS485 conn 7)(4-w User RS485 conn	6)(4-wire)	000	GT15-RS4-9S	gt et 27 25	Up to 1 control equipment for 1 GOT
		User RS485 connection diagram 15)(2-wire)	500m	- (Built into GOT)	ет 27 25 ет 23	
		(User) RS485 connection diagram 7)(4-wire) (User) RS485 connection diagram 16)(2-wire)	500m	GT15-RS4-TE	er er 27 25	

^{*1} Including the cable length of the option devices.

^{*2} Product manufactured by MITSUBISHI ELECTRIC ENGINEERING COMPANY LIMITED. For details of the product, contact MITSUBISHI ELECTRIC ENGINEERING COMPANY LIMITED.

3.2.11 Connecting to AUR350C, AUR450C


■ When using the Interface converter

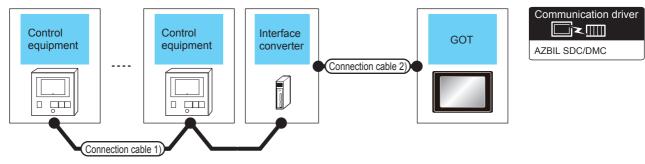

Control equipment	Connection cable 1)		Interface converter*1		Connection cable 2)		GOT		Number of
Model name	Cable model Connection diagram number	Max. distan ce	Model name	Commu nication Type	Cable model Connection diagram number	Max. distan ce	Option device	Model	connectable equipment
AUR350C	(User) (peoing) RS485	500m	CMC10L	CMC10L RS-232	(User) (pspring) (PS232	15m	- (Built into GOT)	27 25 er 23	Up to 31 control
AUR450C	connection diagram 1)	300111	GWGTOL	110-202	connection diagram 1)	13111	GT15-RS2-9P	ет ст 27 25	GOT

^{*1} Product manufactured by Azbil Corporation. For details on the product, contact Azbil Corporation.

■ When connecting directly

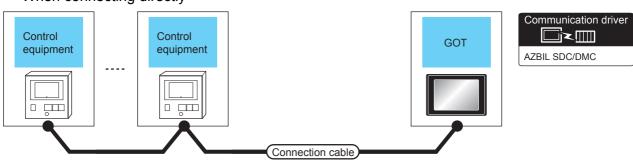


Control e	quipment	Connection cable		GOT		Number of connectable
Model name	Communic ation Type	Cable model Connection diagram number	Model	equipment		
		(User) RS485 connection diagram 3)	500m* ¹	FA-LTBGT2R4CBL05 (0.5m)*2 FA-LTBGT2R4CBL10 (1m)*2 FA-LTBGT2R4CBL20 (2m)*2	er er 25 27 25 Gr 23	
AUR350C AUR450C	RS-485	User) RS485 connection diagram 5)	500m	GT15-RS4-TE	et et 27 25	Up to 1 control equipment for 1 GOT
		User RS485 connection diagram 12)	500m	- (Built into GOT)	er er 25 27 25 er 23	

Including the cable length of the option devices.

^{*2} Product manufactured by MITSUBISHI ELECTRIC ENGINEERING COMPANY LIMITED. For details of the product, contact MITSUBISHI ELECTRIC ENGINEERING COMPANY LIMITED.


■ When using the Interface converter

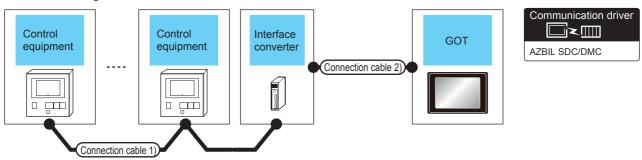

Control equipment	Connection ca	ble 1)	Interface converter*1		Connection cable 2)		GOT			
Model name	Cable model Connection diagram number	Max. distan ce	Model name	Communi cation Type	Cable model Connection diagram number	Max. distan ce	Option device	Model	Number of connectable equipment	
CMC10B	User RS485	500m	CMC10L	RS-232	User RS232	15m	- (Built into GOT)	er er 25 27 25 er 23	Up to 31 control	
CINIC TOD	connection diagram 2)	300111	GWIGTOL	10-232	connection diagram 1)	13111	GT15-RS2-9P	er er 27 25	equipment for 1 GOT	

^{*1} Product manufactured by Azbil Corporation. For details on the product, contact Azbil Corporation.

■ When connecting directly to multiple control equipments

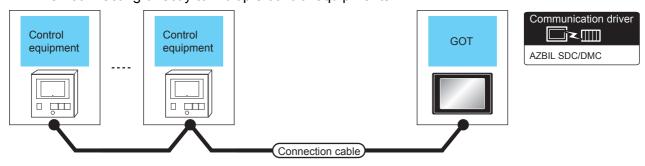


Control equ	uipment	Connection cable		GOT		
Model name	Commun ication Type	Cable model Connection diagram number	Max. distance	Option device	Model	Number of connectable equipment
		(User) RS485 connection diagram 4)	500m* ¹	FA-LTBGT2R4CBL05 (0.5m)*2 FA-LTBGT2R4CBL10 (1m)*2 FA-LTBGT2R4CBL20 (2m)*2	27 25 GT 23	
CMC10R	CMC10B RS-485	User RS485 connection diagram	500m	- (Built into GOT)	er er 27 25 er 23	Up to 1 control equipment for
CIVIC TOB		6)	300111	GT15-RS4-9S	er er 27 25	1 GOT
		(User) RS485 connection diagram 7)	500m	GT15-RS4-TE	ет ет 27 25	

^{*1} Including the cable length of the option devices.

^{*2} Product manufactured by MITSUBISHI ELECTRIC ENGINEERING COMPANY LIMITED. For details of the product, contact MITSUBISHI ELECTRIC ENGINEERING COMPANY LIMITED.

3.2.13 Connecting to AHC2001

■ When connecting to one temperature controller

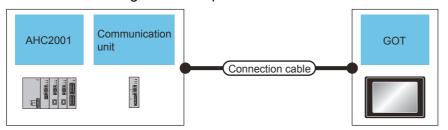




Cont	rol equipme	nt	Connection cable		GOT		Number of
Model name	Commun ication unit	Commun ication Type	Cable model Connection diagram number	Max. distance	Option device	Model	connectable equipment
	-	RS-232	(User) RS232 connection	15m	- (Built into GOT)	27 25 GT 23	
	SCU	110 202	diagram 2)	1311	GT15-RS2-9P	er er 27 25	
			User RS485 connection diagram 4)	- 500m*1	FA-LTBGT2R4CBL05 (0.5m)*2 FA-LTBGT2R4CBL10 (1m)*2	ет ет 27 25 ет 23	
			User RS485 connection diagram 14)	300111	FA-LTBGT2R4CBL20 (2m)*2	23	
AHC2001		SCU RS-485	(User) RS485 connection	500m	- (Built into GOT)	et et 25 25 23	Up to 1 temperature controllers for 1 GOT
	SCU		diagram 6)	500m -	GT15-RS4-9S	er er 27 25	
			(User) RS485 connection diagram 15)	500m	- (Built into GOT)	et et 25 27 25 et 23	
			(User) RS485 connection diagram 7)	500m	GT15-RS4-TE	^{вт} 27 25	
			(User) RS485 connection diagram 16)				

^{*1} Including the cable length of the option devices.

Product manufactured by MITSUBISHI ELECTRIC ENGINEERING COMPANY LIMITED. For details of the product, contact MITSUBISHI ELECTRIC ENGINEERING COMPANY LIMITED.

Communication driver

■ When connecting to multiple temperature controllers

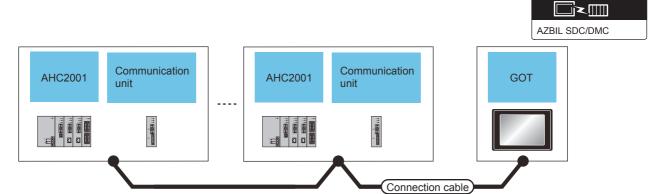

Cont	rol equipme	nt	Connection cable		GOT		Number of
Model name	Commun ication unit	Commun ication Type	Cable model Connection diagram number	Max. distance	Option device	Model	connectable equipment
			User RS485 connection diagram 4)	500m ^{*1}	FA-LTBGT2R4CBL05 (0.5m)*2 FA-LTBGT2R4CBL10 (1m)*2	ет ет 27 25 ет 23	
			User RS485 connection diagram 14)		FA-LTBGT2R4CBL20 (2m)*2	25	
			(User) RS485 connection	500m	- (Built into GOT)	27 25 GT 23	
AHC2001	SCU	RS-485	diagram 6)	300111	GT15-RS4-9S	er er 27 25	Up to 31 temperature controllers for 1 GOT
		(On	(User) RS485 connection diagram 15)	500m	- (Built into GOT)	GT GT 25 GT 23	
			(User) RS485 connection diagram 7) (User) RS485 connection diagram 16)	- 500m	GT15-RS4-TE	ет ет 27 25	

^{*1} Including the cable length of the option devices.

^{*2} Product manufactured by MITSUBISHI ELECTRIC ENGINEERING COMPANY LIMITED. For details of the product, contact MITSUBISHI ELECTRIC ENGINEERING COMPANY LIMITED.

3.2.14 Connecting to NX series



Use a MODBUS(R)/RTU or MODBUS(R)/TCP communication driver to connect the GOT to NX series. For the MODBUS(R)/RTU or MODBUS(R)/TCP connection, refer to the following manual.

GOT2000 Series Connection Manual (Microcomputer/MODBUS/Peripheral Connection)

- 4. MODBUS(R)/RTU CONNECTION
- 5. MODBUS(R)/TCP CONNECTION

For the valid devices, refer to the following Technical News.

List of Valid Devices Applicable for GOT2000 Series with MODBUS Connection (GOT-A-0070)


3.3 Connection Diagram

The following diagram shows the connection between the GOT and the control equipment.

3.3.1 RS-232 cable

Connection diagram


(1) RS232 connection diagram 1)

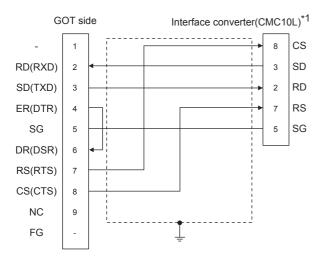

*1 For details on the setting method of the TERMINAL mode, refer to the following.

3.5.5 Connecting to CMC10L

(2) RS232 connection diagram 2)

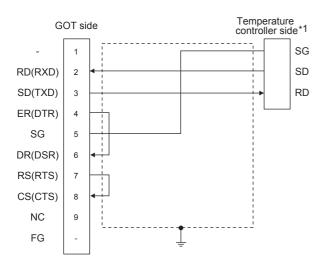

*1 Pin No. of temperature controller differs depending on model and optional function model. Refer to the following table. The numbers in () of the following table correspond to optional function models.

	Model of temperature controller									
Signal name	SDC20		SDC21	SDC40A, SDC40B, SDC40G	AHC2001					
	(03, 05) (10) (04, 07, 09)		(04, 07, 09)	3D040A, 3D040B, 3D040G	CPU	SCU				
	Pin No. Pin No.		Pin No.	Pin No.	Pin No.	Pin No.				
SG	5	18	29	61	5	5				
SD	17	16	27	60	3	3				
RD	18	17	28	59	2	2				

■ Precautions when preparing a cable

(3) Cable length
The length of the RS-232 cable must be 15m or less.

(4) GOT side connector
For the GOT side connector, refer to the following.


1.4.1 GOT connector specifications

(5) AZBIL control equipment side connector Use the connector compatible with the AZBIL control equipment side module.

For details, refer to the user's manual of the AZBIL control equipment

Connection diagram

(1) RS485 connection diagram 1)

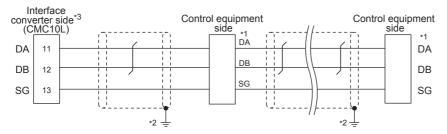

*1 Pin No. of control equipment differs depending on the model.Refer to the following table.


	Model of control equipment							
Signal name	DMC10	SDC15	SDC25/26 SDC35/36	AUR350C AUR450C				
	Pin No.	Pin No.	Pin No.	Pin No.				
DA	4	16	22	DA				
DB	5	17	23	DB				
SG	6	18	24	SG				

- *2 Connect FG grounding to the single-sided end of a cable shield line.
- *3 Set the terminal resistor to "Disable".

 For details of terminating resistor settings, refer to the following.

 3.5.5 Connecting to CMC10L

(2) RS485 connection diagram 2)

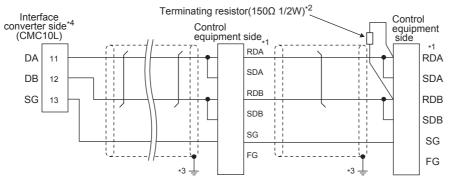


*1 Pin No. of control equipment differs depending on model and optional function model. Refer to the following table. The numbers in () of the following table correspond to optional function models.

		Model of control equipment									
Signal	SDC20		SDC21	SDC30	SDC31		SDC40A/	CMF050	PBC201-		
name	(02, 04)	(09)	(03, 06, 08)	(040, 041)	(045)	(446, 546)	40B/40G	CML	VN2	CMC10B	
	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	
RDA	17	18	27	18	18	27	59	9	12	11	
RDB	18	19	28	19	19	28	60	10	13	12	
SDA	15	16	25	16	16	25	57	7	14	13	
SDB	16	17	26	17	17	26	58	8	15	14	
SG	5	5	29	5	5	29	61	12	16	15	
FG	3, 4	3, 4	3, 4	3, 4	3, 4	3, 4	3	19	3	-	

- *2 Terminating resistor should be provided for a Interface converter and a control equipment which will be terminals.
- *3 Connect FG grounding to the single-sided end of a cable shield line.
- *4 Since the Interface converter has a built-in terminating resistor, set the terminating resistor of GOT to "Enable". For details of terminating resistor settings, refer to the following.

3.5.5 Connecting to CMC10L

(3) RS485 connection diagram 3)

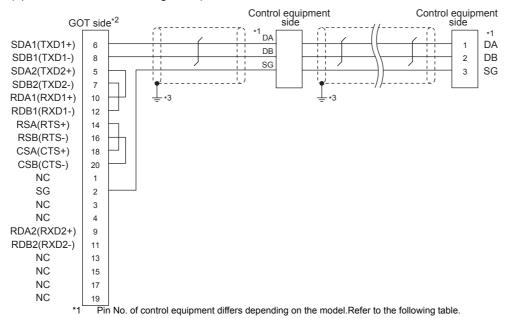

	Signal name	Model of control equipment							
		DMC10	SDC15	SDC25/26 SDC35/36	AUR350C AUR450C				
		Pin No.	Pin No.	Pin No.	Pin No.				
	DA	4	16	22	DA				
	DB	5	17	23	DB				
	SG	6	18	24	SG				


^{*2} Set the terminating resistor of GOT as follows.

Set the terminating resistor setting switch of the GOT main unit to "Disable".

■ Connecting terminating resistors

^{*3} Connect FG grounding to the single-sided end of a cable shield line.

(4) RS485 connection diagram 4)

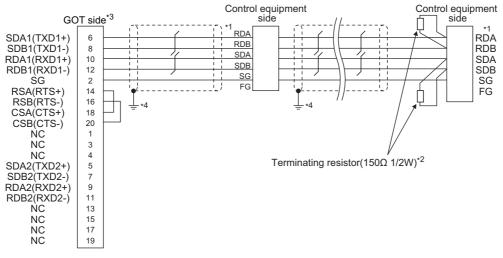

*1 Pin No. of control equipment differs depending on model or optional function model.

Refer to the following table. The numbers in () of the following table correspond to optional function models.

	Model of control equipmentr								
Signal name	SDC20		SDC21	SDC30	S	DC31	SDC40A/40B/40G		
Signal name	(02, 04)	(09)	(03, 06, 08)	(040, 041)	(045)	(446, 546)	SDC40A/40B/40G		
	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.		
RDA	17	18	27	18	18	27	59		
RDB	18	19	28	19	19	28	60		
SDA	15	16	25	16	16	25	57		
SDB	16	17	26	17	17	26	58		
SG	5	5	29	5	5	29	61		
FG	3, 4	3, 4	3, 4	3, 4	3, 4	3, 4	3		

	Model of control equipment							
Signal name	CMF050 CML	PBC201-VN2	CMC10B	AHC2001				
	Pin No.	Pin No.	Pin No.	Pin No.				
RDA	9	12	11	3				
RDB	10	13	12	2				
SDA	7	14	13	5				
SDB	8	15	14	4				
SG	12	16	15	1				
FG	19	3	-	-				

^{*2} Terminating resistor should be provided for a control equipment which will be a terminal.


Set the terminating resistor setting switch of the GOT main unit to "100 OHM".

■ Connecting terminating resistors

^{*3} Set the terminating resistor of GOT as follows.

^{*4} Connect FG grounding to the single-sided end of a cable shield line.

(5) RS485 connection diagram 5)

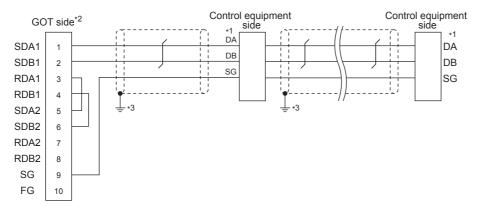

1 Pin No. of Model of control equipment differs depending on the model.Refer to the following table.


	Model of control equipment							
Signal name	DMC10	SDC15	SDC25/26 SDC35/36	AUR350C AUR450C				
	Pin No.	Pin No.	Pin No.	Pin No.				
DA	4	16	22	DA				
DB	5	17	23	DB				
SG	6	18	24	SG				

^{*2} Set the terminating resistor of GOT as follows. Set the terminating resistor setting switch of the GOT main unit to "Disable".

[■] Connecting terminating resistors

^{*3} Connect FG grounding to the single-sided end of a cable shield line.

(6) RS485 connection diagram 6)

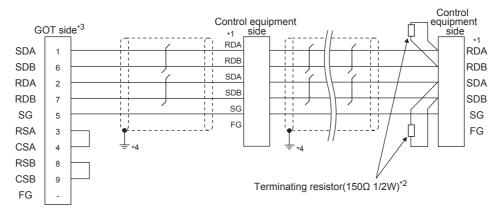

*1 Pin No. of control equipment differs depending on model or optional function model.

Refer to the following table. The numbers in () of the following table correspond to optional function models.

	Model of control equipment								
Signal name	SDC20		SDC21	SDC30	SDC31		SDC40A/40B/40G		
Signal flame	(02, 04)	(09)	(03, 06, 08)	(040, 041)	(045)	(446, 546)	30040A/406/40G		
	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.		
RDA	17	18	27	18	18	27	59		
RDB	18	19	28	19	19	28	60		
SDA	15	16	25	16	16	25	57		
SDB	16	17	26	17	17	26	58		
SG	5	5	29	5	5	29	61		
FG	3, 4	3, 4	3, 4	3, 4	3, 4	3, 4	3		

Signal name	Model of control equipment					
	CMF050 CML	PBC201-VN2	CMC10B	AHC2001		
	Pin No.	Pin No.	Pin No.	Pin No.		
RDA	9	12	11	3		
RDB	10	13	12	2		
SDA	7	14	13	5		
SDB	8	15	14	4		
SG	12	16	15	1		
FG	19	3	-	-		


^{*2} Terminating resistor should be provided for a control equipment which will be a terminal.

^{*3} Set the terminating resistor of GOT as follows. Set the terminating resistor setting switch of the GOT main unit to "100 OHM". Set the terminating resistor selector to "330 Ω ".

[■] Connecting terminating resistors

^{*4} Connect FG grounding to the single-sided end of a cable shield line.

(7) RS485 connection diagram 7)

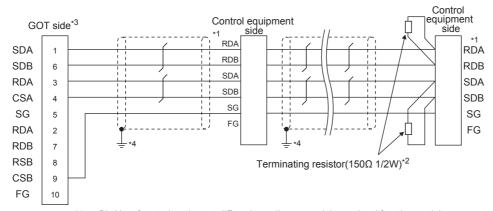

*1 Pin No. of control equipment differs depending on model or optional function model. Refer to the following table. The numbers in () of the following table correspond to optional function models.

Signal name	Model of control equipment						
	SDC20		SDC21	SDC30	SDC31		SDC40A/40B/40G
	(02, 04)	(09)	(03, 06, 08)	(040, 041)	(045)	(446, 546)	300407/400/400
	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.
RDA	17	18	27	18	18	27	59
RDB	18	19	28	19	19	28	60
SDA	15	16	25	16	16	25	57
SDB	16	17	26	17	17	26	58
SG	5	5	29	5	5	29	61
FG	3, 4	3, 4	3, 4	3, 4	3, 4	3, 4	3

Signal name	Model of control equipment					
	CMF050 CML	PBC201-VN2	CMC10B	AHC2001		
	Pin No.	Pin No. Pin No.		Pin No.		
RDA	9	12	11	3		
RDB	10	13	12	2		
SDA	7	14	13	5		
SDB	8	15	14	4		
SG	12	16	15	1		
FG	19	3	-	-		


^{*2} Terminating resistor should be provided for a control equipment which will be a terminal.

^{*3} Set the terminating resistor of GOT as follows. Set the terminating resistor setting switch of the GOT main unit to "100 OHM".

[■] Connecting terminating resistors


^{*4} Connect FG grounding to the single-sided end of a cable shield line.

(8) RS485 connection diagram 8)

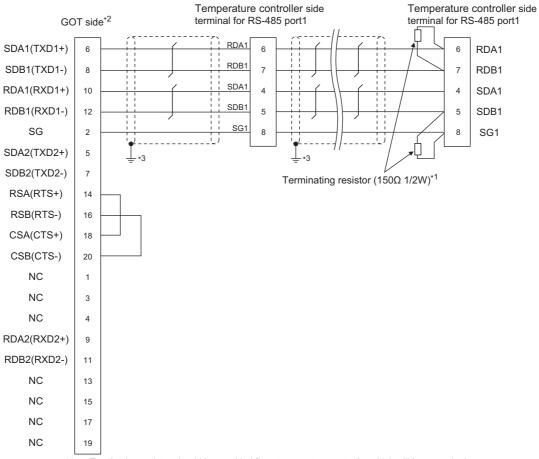


- *1 Terminating resistor should be provided for a temperature controller which will be a terminal.
- *2 Set the terminating resistor of GOT as follows. Set the terminating resistor setting switch of the GOT main unit to "100 OHM".
 - Connecting terminating resistors
- *3 Connect FG grounding to the single-sided end of a cable shield line.

(9) RS485 connection diagram 9)

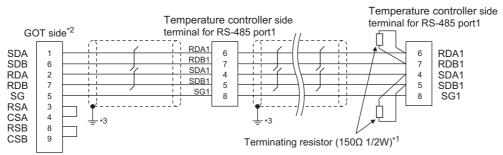

- *1 Terminating resistor should be provided for a temperature controller which will be a terminal.
- *2 Set the terminating resistor of GOT as follows. Set the terminating resistor setting switch of the GOT main unit to "100 OHM".
 - Connecting terminating resistors
- *3 Connect FG grounding to the single-sided end of a cable shield line.


(10) RS485 connection diagram 10)

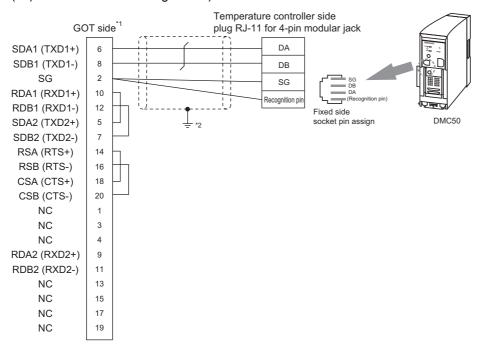

- Set the terminating resistor of GOT as follows.


 Set the terminating resistor setting switch of the GOT main unit to "100 OHM".
- Connecting terminating resistors
 Connect FG grounding to the single-sided end of a cable shield line.

(11) RS485 connection diagram 11)

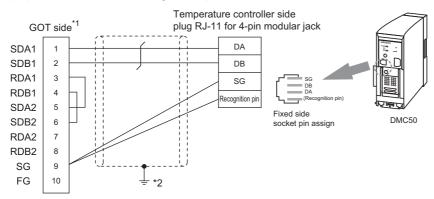

- Set the terminating resistor of GOT as follows.
 Set the terminating resistor setting switch of the GOT main unit to "100 OHM".
 - Connecting terminating resistors
- *2 Connect FG grounding to the single-sided end of a cable shield line.

(12) RS485 connection diagram 12)

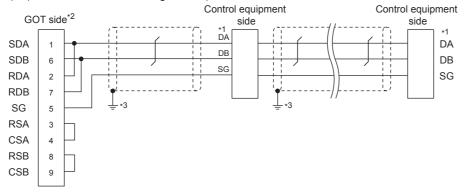

*1 Pin No. of control equipment differs depending on the model. Refer to the following table.


	Model of control equipment			
Signal name	DMC10	SDC15	SDC25/26 SDC35/36	AUR350C AUR450C
	Pin No.	Pin No.	Pin No.	Pin No.
DA	4	16	22	DA
DB	5	17	23	DB
SG	6	18	24	SG

^{*2} Set the terminating resistor setting switch of the GOT main unit to "100 OHM".

■ Connecting terminating resistors


*3 Connect FG grounding to the single-sided end of a cable shield line.

(13) RS485 connection diagram 13)

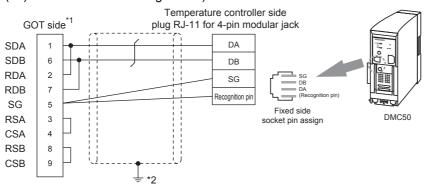

- *1 Set the terminating resistor setting switch of the GOT main unit to "100 OHM".
 - Connecting terminating resistors
- *2 Connect FG grounding to the single-sided end of a cable shield line.

(14) RS485 connection diagram 14)

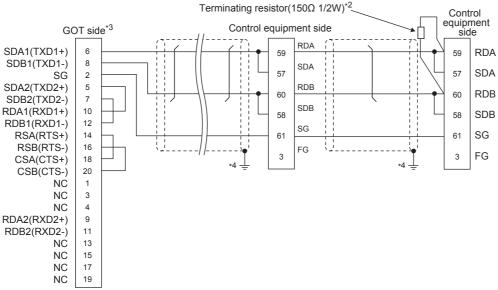

*1 Pin No. of control equipment differs depending on the model. Refer to the following table

T FIITING. OI	Firm No. of control equipment differs depending on the model. Neter to the following table.						
		Model of control equipment					
Signal name	SD	C20	SDC21	SDC30	SDO	C31	SDC40A/40B/40G
Signal hame	(02, 04)	(09)	(03, 06, 08)	(040, 041)	(045)	(446, 546)	3DC40A/40B/40G
	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.
RDA	17	18	27	18	18	27	59
RDB	18	19	28	19	19	28	60
SDA	15	16	25	16	16	25	57
SDB	16	17	26	17	17	26	58
SG	5	5	29	5	5	29	61
FG	3, 4	3, 4	3, 4	3, 4	3, 4	3, 4	3

		Model of control equipment		
Signal name	CMF050 CML	PBC201-VN2	CMC10B	AHC2001
	Pin No.	Pin No.	Pin No.	Pin No.
RDA	9	12	11	3
RDB	10	13	12	2
SDA	7	14	13	5
SDB	8	15	14	4
SG	12	16	15	1
FG	19	3	-	-


^{*2} Terminating resistor should be provided for a control equipment which will be a terminal.

^{*3} Set the terminating resistor of GOT as follows. Set the terminating resistor setting switch of the GOT main unit to "100 OHM".

[■] Connecting terminating resistors

^{*4} Connect FG grounding to the single-sided end of a cable shield line.

(15) RS485 connection diagram 15)

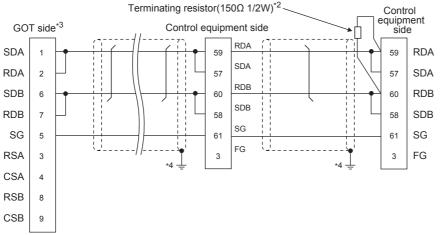

*1 Pin No. of control equipment differs depending on the model. Refer to the following table.

	· · · · · · · · · · · · · · · · · · ·					
	Model of control equipment					
Signal name	SDO	C20	SDC21	SDC40A/40B/40G		
Signal flame	(02, 04)	(09)	(03, 06, 08)	3DC40A/40B/40G		
	Pin No.	Pin No.	Pin No.	Pin No.		
RDA	17	18	27	59		
RDB	18	19	28	60		
SDA	15	16	25	57		
SDB	16	17	26	58		
SG	5	5	29	61		
FG	3, 4	3, 4	3, 4	3		

	Model of control equipment			
Signal name	CMF050 CML	PBC201-VN2	CMC10B	AHC2001
	Pin No.	Pin No.	Pin No.	Pin No.
RDA	9	12	11	3
RDB	10	13	12	2
SDA	7	14	13	5
SDB	8	15	14	4
SG	12	16	15	1
FG	19	3	-	-


^{*2} Terminating resistor should be provided for a control equipment which will be a terminal.

^{*3} Set the terminating resistor setting switch of the GOT main unit to "100 OHM".

[■] Connecting terminating resistors

^{*4} Connect FG grounding to the single-sided end of a cable shield line.

(16) RS485 connection diagram 16)

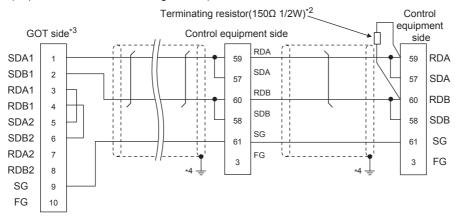

*1 Pin No. of control equipment differs depending on the model. Refer to the following table.

1 1111110.01	Model of control equipment						
	SDO	C20	SDC21	SDC30	SD	 C31	
Signal name	(02, 04)	(09)	(03, 06, 08)	(040, 041)	(045)	(446, 546)	SDC40A/40B/40G
	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.
RDA	17	18	27	18	18	27	59
RDB	18	19	28	19	19	28	60
SDA	15	16	25	16	16	25	57
SDB	16	17	26	17	17	26	58
SG	5	5	29	5	5	29	61
FG	3, 4	3, 4	3, 4	3, 4	3, 4	3, 4	3

		Model of cont	rol equipment	
Signal name	CMF050 CML	PBC201-VN2	CMC10B	AHC2001
	Pin No.	Pin No.	Pin No.	Pin No.
RDA	9	12	11	3
RDB	10	13	12	2
SDA	7	14	13	5
SDB	8	15	14	4
SG	12	16	15	1
FG	19	3	-	-


^{*2} Terminating resistor should be provided for a control equipment which will be a terminal.

■ Connecting terminating resistors

^{*3} Set the terminating resistor of GOT as follows. Set the terminating resistor setting switch of the GOT main unit to "100 OHM".

^{*4} Connect FG grounding to the single-sided end of a cable shield line.

(17) RS485 connection diagram 17)

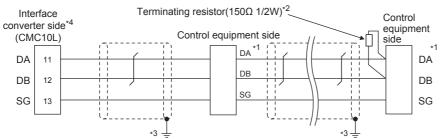


*1 Pin No. of control equipment differs depending on the model. Refer to the following table

		Model of control equipment				
Signal name	SDC45/46	CMS CMF015	MQV MPC	MVF	RX	
	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	
DA	C10	5	7	1	1	
DB	C11	6	8	2	2	
SG	C12	10	9	7	3	

- *2 Terminating resistor should be provided for an Interface converter and a control equipment which will be terminals.
- *3 Connect FG grounding to the single-sided end of a cable shield line.
- *4 Since the Interface converter has a built-in terminating resistor, set the terminating resistor of GOT to "Enable". For details of terminating resistor settings, refer to the following.

3.5.5 Connecting to CMC10L

(18) RS485 connection diagram 18)

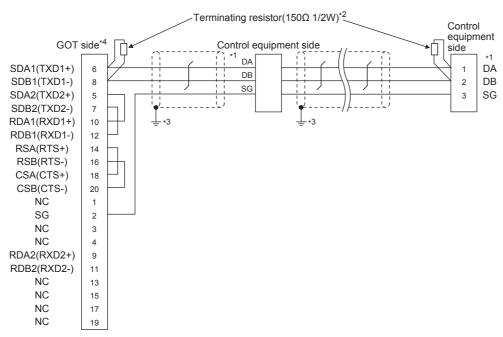


*1 Pin No. of control equipment differs depending on the model. Refer to the following table

		Model of control equipment				
Signal name	SDC45/46	CMS CMF015	MQV MPC	MVF	RX	
	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	
DA	C10	5	7	1	1	
DB	C11	6	8	2	2	
SG	C12	10	9	7	3	

- *2 Terminating resistor should be provided for an Interface converter and a control equipment which will be terminals.
- *3 Connect FG grounding to the single-sided end of a cable shield line.
- *4 Set the terminating resistor of GOT as follows. Set the terminating resistor setting switch of the GOT main unit to "Disable".
 - Connecting terminating resistors

(19) RS485 connection diagram 19)

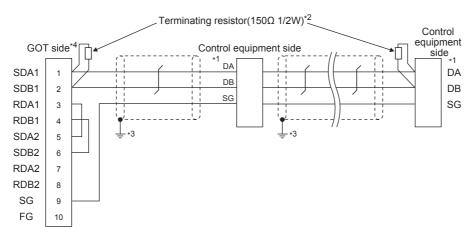


*1 Pin No. of control equipment differs depending on the model. Refer to the following table

	Model of control equipment				
Signal name	SDC45/46	CMS CMF015	MQV MPC	MVF	RX
	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.
DA	C10	5	7	1	1
DB	C11	6	8	2	2
SG	C12	10	9	7	3

- *2 Terminating resistor should be provided for an Interface converter and a control equipment which will be terminals.
- *3 Connect FG grounding to the single-sided end of a cable shield line.
- *4 Set the terminating resistor of GOT as follows. Set the terminating resistor setting switch of the GOT main unit to "Disable".

■ Connecting terminating resistors

(20) RS485 connection diagram 20)

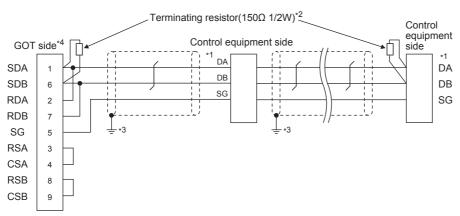

1 Pin No. of control equipment differs depending on the model. Refer to the following table

		Model of control equipment				
Signal name	SDC45/46	CMS CMF015	MQV MPC	MVF	RX	
	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	
DA	C10	5	7	1	1	
DB	C11	6	8	2	2	
SG	C12	10	9	7	3	

- *2 Terminating resistor should be provided for an Interface converter and a control equipment which will be terminals.
- *3 Connect FG grounding to the single-sided end of a cable shield line.
- *4 Set the terminating resistor of GOT as follows.

Set the terminating resistor setting switch of the GOT main unit to "Disable".

■ Connecting terminating resistors

Precautions when preparing a cable

(1) Cable length

The length of the RS-485 cable must be 500m or less.

(2) GOT side connector

For the GOT side connector, refer to the following.

1.4.1 GOT connector specifications

(3) AZBIL control equipment side connector

Use the connector compatible with the AZBIL control equipment side module.

For details, refer to the user's manual of the AZBIL control equipment.

Connecting terminating resistors

(1) GOT side

Set the terminating resistor by operating the terminating resistor setting switch.

For the procedure to set the terminating resistor, refer to the following.

1.4.3 Terminating resistors of GOT

(2) AZBIL control equipment side


When connecting a AZBIL control equipment to the GOT, a terminating resistor must be connected.

3.5 Control Equipment Side Setting

3.4 GOT Side Settings

3.4.1 Setting communication interface (Communication settings)

Set the channel of the connected equipment.

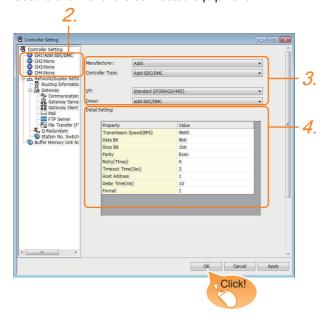

- Select [Common] → [Controller Setting] from the menu.
- 2. The Controller Setting window is displayed. Select the channel to be used from the list menu.
- Set the following items.
 - · Manufacturer: Azbil
 - Controller Type: Set either of the followings.
 Connecting to DMC50 and AHC2001>
 Azbil DMC50
 - <Connecting to a module other than above> Azbil SDC/DMC
 - · I/F: Interface to be used
 - Driver: Azbil SDC/DMC
- The detailed setting is displayed after Manufacturer, Controller Type, I/F, and Driver are set. Make the settings according to the usage environment.

3.4.2 Communication detail settings

Click the [OK] button when settings are completed.



The settings of connecting equipment can be confirmed in [I/F Communication Setting]. For details, refer to the following.

1.1.2 I/F communication setting

Communication detail settings 3.4.2

Property	Value
Transmission Speed(BPS)	9600
Data Bit	8 bit
Stop Bit	1 bit
Parity	Even
Retry(Times)	0
Timeout Time(Sec)	3
Host Address	1
Delay Time(ms)	10
Format	1

Item	Description	Range
Transmission Speed	Set this item when change the transmission speed used for communication with the connected equipment. (Default: 9600bps)	9600bps, 19200bps, 38400bps, 57600bps, 115200bps
Data Bit	Set this item when change the data length used for communication with the connected equipment. (Default: 8bits)	7bits/8bits
Stop Bit	Specify the stop bit length for communications. (Default: 1bit)	1bit/2bits
Parity	Specify whether or not to perform a parity check, and how it is performed during communication. (Default: Even)	None Even Odd
Retry	Set the number of retries to be performed when a communication error occurs. (Default: 0time)	0 to 5times
Timeout Time	Set the time period for a communication to time out. (Default: 3sec)	1 to 30sec
Host Address*3*4	Specify the host address (station No. of the GOT to which the temperature controller is connected) in the connected network. (Default: 1)	1 to 15
Delay Time	Set this item to adjust the transmission timing of the communication request from the GOT.*1 (Default: 1ms)	0 to 300ms
Format ^{*2}	Select the communication format. (Default: 1) format 1: only continuous access format 2: continuous and random access	1/2

- Do not specify "0".
- Format is ignored when connecting to DMC50.
- Host Address is ignored when connecting to DMC10 or SDC. Host Address is valid when connecting to DMC50. Devices to be the target of Host Address setting differ depending on the system configuration.
 - <When connecting to the temperature controller via COM module>
 - Specify the station No. of the COM module.
 - <When connecting to the temperature controller directly> Specify the station No. of the temperature controller.




Format setting

The compatible format of control equipment differs depending on model.

Model name	Compatible format
SDC20/21, SDC30/31, SDC40A/40B/40G, CMS, CMF, CML, MQV, MPC, MVF, PBC201-VN2, RX	Format 1 only
DMC10, SDC15, SDC25/26, SDC35/36, SDC45/46, AUR350C, AUR450C, CMC10B	Format 1 or Format 2
DMC50, AHC2001	The format setting is invalid.

For the continuous access and random access of the control equipment, refer to the following manual.

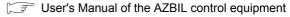



- (1) Communication interface setting by the Utility The communication interface setting can be changed on the Utility's [Communication setting] after writing [Communication Settings] of project
 - For details on the Utility, refer to the following
- GOT2000 Series User's Manual (Utility)
- (2) Precedence in communication settings When settings are made by GT Designer3 or the Utility, the latest setting is effective.

3.5 Control Equipment Side Setting



AZBIL control equipment

For details of AZBIL control equipment, refer to the following manual.

User's Manual of the AZBIL control equipment

	Model name	Refer to
	DMC10	3.5.1
	SDC15, SDC25/26, SDC35/36	3.5.3
	SDC20/21	3.5.4
	SDC30/31	3.5.4
	SDC40A/40B/40G	3.5.2
	DMC50	3.5.6
	SDC45/46	3.5.7
	CMS, CMF015	3.5.8
Control	CML, CMF050	3.5.9
equipment	MQV	3.5.10
	MPC	3.5.11
	PBC201-VN2	3.5.12
	MVF	3.5.13
	AUR350C, AUR450C	3.5.14
	RX	3.5.15
	CMC10B	3.5.16
	AHC2001 CPU	3.5.17
	AHC2001 SCU	3.5.18
Interface converter	CMC10L	3.5.5

3.5.1 Connecting to DMC10

Communication settings


Make the communication settings by operating the Smart Loader Package (SLP-D10) of the temperature controller.

Item	Set value
Transmission speed*1	9600bps, 19200bps
Communication mode*2	CPL
Data bit	8bits
Parity bit*1	Even, none
Stop bit	2bits
Communication minimum response time	1ms, 10ms, 100ms, 200ms
Station address*3*4	0 to F

- *1 Adjust the settings with GOT settings.
- *2 Set to CPL.
- *3 Do not set to "0".
- *4 Select the station address without overlapping with that of other units.

Station address setting

Set the station address using the rotary switch for the station address.

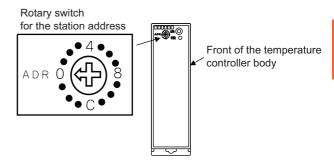

3.5.2 Connecting to SDC40A/40B/ 40G

Communication settings

Make the communication settings by operating the key of the temperature controller.

Item	Set value
Transmission speed*1	9600bps
Data Bit	8bits
Parity bit*1	Even, none
Stop bit	1bit, 2bits
Station address*2*3	0 to 127

- *1 The transmission speed setting must be consistent with that of the GOT side.
- *2 Do not set to "0".
- *3 Select the station address without overlapping with that of other units.

3.5.3 Connecting to SDC15, SDC25/26 or SDC35/36

Communication settings

Make the communication settings by operating the key or Smart Loader Package (SLP-C35) of the temperature controller.

Item	Set value
Transmission speed*1	9600bps, 19200bps
Communication mode*2	CPL
Data bit*1	7bits, 8bits
Parity bit*1	Odd, even, none
Stop bit*1	1bit, 2bits
Communication minimum response time	1 to 250ms
Station address*3*4	0 to 127

- *1 The transmission speed setting must be consistent with that of the GOT side.
- *2 Set to CPL.
- *3 Do not set to "0".
- *4 Select the station address without overlapping with that of other units.

3.5.4 Connecting to SDC20/21, SDC30/31

Communication settings

Make the communication settings by operating the key of the temperature controller.

Item	Set value
Transmission speed*1	9600bps
Data bit	8bits
Parity bit	Disable
Stop bit	2bits
Station address*2*3	0 to 127

- *1 The transmission speed setting must be consistent with that of the GOT side
- *2 Do not set to "0".
- *3 Select the station address without overlapping with that of other units.

3.5.5 Connecting to CMC10L


Communication settings

Make the communication settings by operating the DIP switch of the Interface converter

Item	Set value
Transmission speed*1	9600bps, 19200bps, 38400bps
Frame length*2	9 to 15bits

- *1 The transmission speed setting must be consistent with that of the GOT side.
- *2 The sum of data length, parity bit and stop bit

Settings by switch

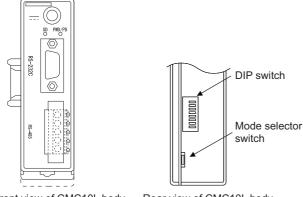


Front view of CMC10L body Rear view of CMC10L body

(1) Setting DIP switches


(a) Transmission speed settings

Transmission	Switch No.			
speed (bps)	1	2	3	
9600	ON	OFF	ON	:
19200	OFF	ON	ON	
38400	ON	ON	ON	

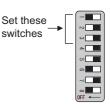


(b) Frame length settings

Frame length	S	witch N	0.
Trame length	4	5	6
8bits	OFF	OFF	OFF
9bits	ON	OFF	OFF
10bits	OFF	ON	OFF
11bits	ON	ON	OFF
12bits	OFF	OFF	ON
13bits	ON	OFF	ON
14bits	OFF	ON	ON
15bits	ON	ON	ON

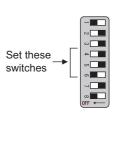


(c) Connecting terminating resistors

Terminating	Switch No.	
resistor	8	
Enable	ON	
Disable	OFF	5

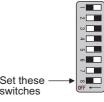

(2) Mode selector switch settings Set the switch to "TERMINAL".

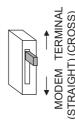

3.5.6 Connecting to DMC50

Communication settings


Make the communication settings by operating the Smart Loader Package (SLP-D50/SLP-H21)of the temperature controller.

Item	Set value
Transmission speed*1	9600bps, 19200bps, 38400bps
Communication mode	CPL
Data bit	8bits (fixed)
Parity bit	Even (fixed)
Stop bit	1bit (fixed)
Module address*2*3*4	0 to F

- *1 *2 Adjust the settings with GOT settings.
- Set the module address using the rotary switch for module address.
- *3 *4 Do not set to "0"
- Select the module address without overlapping with that of other units

Module address setting

Set the module address using the rotary switch for module address.

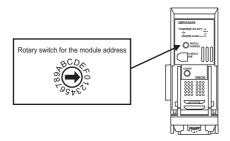

Connecting to SDC45/46 3.5.7

Communication settings

Make the communication settings by operating the Smart Loader Package (SLP-C45) of the temperature controller.

Item	Set value
Transmission speed*1	9600bps, 19200bps, 38400bps
Communication mode*2	CPL
Data bit	7bits, 8bits
Parity bit*1	Odd, even, none
Stop bit	1bit, 2bits
Communication minimum response time*5	1 to 250ms
Station address*3*4	0 to 120

- Adjust the settings with GOT settings.
- *2 Set to CPL
- Do not set to "0"
- *3 *4 Select the station address without overlapping with that of other units.
- When using the interface converter CMC10L, set the communication minimum response time to 3ms or more.

3.5.8 Connecting to CMS, CMF015

Communication settings

Make the communication settings by operating the key of the control equipment.

Item	Set value
Transmission speed*1	9600bps
Communication condition	0: 8-bit data length, Even parity, Stop bit 1
selection	1: 8-bit data length, Non parity, Stop bit 2
Station address*2*3	0 to 99

- Adjust the settings with GOT settings.
- Do not set to "0"
- *2 *3 Select the station address without overlapping with that of other units

3.5.9 Connecting to CML, CMF050

Communication settings

Make the communication settings by operating the key of the control equipment.

Item	Set value
Transmission speed*1	9600bps
Communication condition	00: 8-bit data length, Even parity, Stop bit 1
selection*1	01: 8-bit data length, Non parity, Stop bit 2
Station address*2*3	0 to 7F

- Adjust the settings with GOT settings.
- Do not set to "0"
- *3 Select the station address without overlapping with that of

Connecting to MQV

Communication settings

Make the communication settings by operating the key of the control equipment.

Item	Set value
Transmission speed*1	9600bps, 19200bps, 38400bps
Communication condition	00: 8-bit data length, Even parity, Stop bit 1
selection*1	01: 8-bit data length, Non parity, Stop bit 2
Station address*2*3	0 to 127

- Adjust the settings with GOT settings.
- Do not set to "0"
- Select the station address without overlapping with that of other units.

3.5.11 Connecting to MPC

Communication settings

Make the communication settings by operating the key of the control equipment.

Item	Set value
Transmission speed*1	9600bps, 19200bps, 38400bps
Communication condition	0: 8-bit data length, Even parity, Stop bit 1
selection*1	1: 8-bit data length, Non parity, Stop bit 2
Station address*2*3	0 to 127

- *1 Adjust the settings with GOT settings
- *2 Do not set to "0"
- *3 Select the station address without overlapping with that of other units

3.5.12 Connecting to PBC201-VN2

■ Communication settings

Make the communication settings by operating the key of the control equipment.

Item	Set value
Communication protocol	CPL
Transmission speed*1	9600bps, 19200bps, 38400bps, 115200bps
Communication condition	0:Even parity, Stop bit 1
selection*1	1:Odd parity, Stop bit 1
(Fixed 8-bit data length)	2:Non parity, Stop bit 2
Station address*2*3	0 to 126

- *1 Adjust the settings with GOT settings.
- *2 Do not set to "0".
- *3 Select the station address without overlapping with that of other units.

3.5.13 Connecting to MVF


Communication settings

Make the communication settings by operating the switch of the control equipment.

Item	Set value
Transmission speed*1	9600bps, 19200bps
Communication condition	8-bit data length, Even parity, Stop bit 1
selection*1	8-bit data length, Non parity, Stop bit 2
Station address*2*3	0 to F

- *1 Adjust the settings with GOT settings.
- *2 Do not set to "0"
- 3 Select the station address without overlapping with that of other units.

Settings by switch

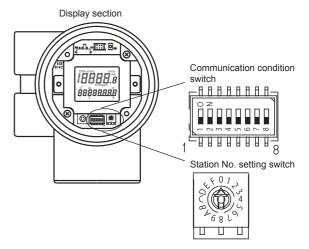

(1) Transmission speed settings
Set the communication condition switch.

Transmission	S	witch No	Ο.
speed (bps)	1	2	3
9600	ON	ON	OFF
19200	ON	OFF	OFF



(2) Communication condition selection Set the communication condition switch.

Communication condition	Switch No.
Communication condition	4
8-bit data length, Even parity, Stop bit 1	OFF
8-bit data length, Non parity, Stop bit 2	ON

(3) Station address setting Set the station address switch.

Station No. setting switch



3.5.14 Connecting to AUR350C, AUR450C

Communication settings

Make the communication settings by operating the Smart Loader Package (SLP-A35, SLP-A45) of the control equipment.


Item	Set value
Transmission speed*1	9600bps, 19200bps
Communication condition	8-bit data length, Even parity, Stop bit 1
selection*1	8-bit data length, Non parity, Stop bit 2
Station address*2*3	0 to F

- Adjust the settings with GOT settings.
- Do not set to "0"
- *2 *3 Select the station address without overlapping with that of other units.


Station address setting

Set the station address switch.

(1) For AUR350C

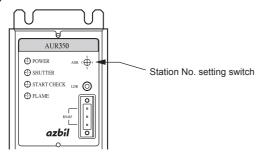

(2) For AUR450C

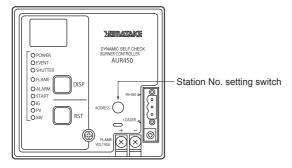

3.5.15 Connecting to RX

Communication settings

Make the communication settings by operating the Smart Loader Package (SLP-RX) of the control equipment.

Item	Set value
Transmission speed*1	9600bps, 19200bps ,38400bps
Communication condition selection*1	Even parity stop 1 (8-bit data length, Even parity, Stop bit 1)
	Even parity stop 2 (8-bit data length, Even parity, Stop bit 2)
	Odd parity stop 1 (8-bit data length, Odd parity, Stop bit 1)
	Odd parity stop 2 (8-bit data length, Odd parity, Stop bit 2)
Station address*2*3	1 to 32

- Adjust the settings with GOT settings.
- Do not set to "0"
- *2 *3 Select the station address without overlapping with that of other units.

3.5.16 Connecting to CMC10B

Communication settings


Make the communication settings by operating the Smart Loader Package (SLP-CM1) of the control equipment.

Item	Set value
Transmission speed*1	9600bps, 19200bps
Communication format*1	0:8-bit data length, Even parity, Stop bit 1
	1:8-bit data length, Non parity, Stop bit 2
Station address*2*3	0 to 99

- Adjust the settings with GOT settings.
- Do not set to "0"
- Select the station address without overlapping with that of

Station address setting

Set the station address switch.

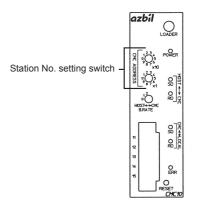

3.5.17 Connecting to AHC2001 CPU

Communication settings

Make the communication settings by operating the Smart Loader Package (SLP-D50/SLP-H21)of the temperature controller.

Item	Set value
Transmission speed*1	9600bps, 19200bps, 38400bps, 57600bps
Communication mode*2	0: MODBUS 1: CPL
Data bit	8bits (fixed)
Parity bit	Even (fixed)
Stop bit	1bit (fixed)
Station address*3	1 to 15*4

- Adjust the settings with GOT settings.
- Set this item to 1: CPL
- *2 *3 Select the station address without overlapping with that of other units
- The station address for AHC2001 ranges from 1 to 127. However, use station address from 1 to 15, which are the range for DMC50.

3.5.18 Connecting to AHC2001 SCU

Communication settings

Make the communication settings by operating the Smart Loader Package (SLP-D50/SLP-H21)of the temperature controller.


Item	Set value
Transmission speed*1	9600bps, 19200bps, 38400bps
Data bit*1	7bits, 8bits
Parity bit*1	0: None, 1:Even, 2: Odd
Stop bit*1	1bit, 2bits
Half duplex/Full duplex*2	0: Half duplex, 1: Full duplex
Space sending	0 (fixed)
Protocol setup*3	1 to 30

- Adjust the settings with GOT settings.
- Set this item to 0: Half duplex.
- Set this item to 2: CPL.

3.5.19 Station number setting

Set each station number so that no station number overlaps.

The station number can be set without regard to the cable connection order. There is no problem even if station numbers are not consecutive.

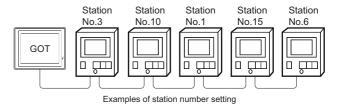

(1) Direct specification

When setting the device, specify the station number of the control equipment of which data is to be changed.

Model name	Specification range
SDC40A/40B/40G, SDC15, SDC25/26, SDC35/36, SDC20/21, SDC30/31 CML, CMF050, MQV, MPC	1 to 127
PBC201-VN2	1 to 126
SDC45/46	1 to 120
CMS, CMF015, CMC10B	1 to 99
RX	1 to 32
DMC10, DMC50, MVF, AUR350C, AUR450C, AHC2001*1	1 to 15

The station number for AHC2001 ranges from 1 to 127. However, use station numbers from 1 to 15, which are the range for DMC50.

(2) Indirect specification

When setting the device, indirectly specify the station number of the inverter of which data is to be changed using the 16-bit GOT internal data register (GD10 to GD25).

When specifying the station No. from the following table on GT Designer3, the value of GD10 to GD25 compatible to the station No. specification will be the station No. of the control equipment.

•	Specification station No.			
DMC50 AHC2001	Other than DMC50	Compatible device		Setting range
100	200	GD10		
101	201	GD11		
102	202	GD12	1 to 127:	For SDC40A/40B/40G,
103	203	GD13		SDC15, SDC25/26,
104	204	GD14		SDC35/36, SDC20/21, SDC30/31, CML, CMF050,
105	205	GD15		MQV, MPC
106	206	GD16	1 to 120: SDC45/46	
107	207	GD17		SDC45/46 CMS, CMF015, CMC10B
108	208	GD18	1 to 33:	RX
109	209	GD19	1 to 15:	DMC10, DMC50, MVF,
110	210	GD20		AUR350C, AUR450C,
111	211	GD21	For the setting other than the above	70200.
112	212	GD22		•
113	213	GD23	will occur.	5 /
114	214	GD24		
115	215	GD25		

^{*1} The station number for AHC2001 ranges from 1 to 127. However, use station numbers from 1 to 15, which are the range for DMC50.

3.6 Device Range that Can Be Set


The device ranges of controller that can be used for GOT are as follows.


Note that the device ranges in the following tables are the maximum values that can be set in GT Designer3.

The device specifications of controllers may differ depending on the models, even though belonging to the same series. Please make the setting according to the specifications of the controller actually used.

When a non-existent device or a device number outside the range is set, other objects with correct device settings may not be monitored.

Setting item

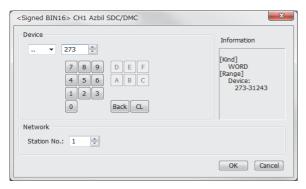

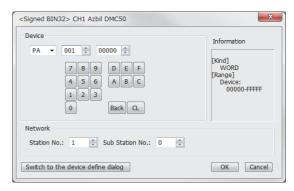

For Azbil SDC/DMC Series

For Azbil DMC50

Item	Description	
Device	Set the device name, device number, and bit number. The bit number can be set only when specifying the bit of word device.	
Information	Displays the device type and setting range which are selected in [Device].	
	Set the monitor to	arget of the set device.
Network	Station	To monitor the control equipment of the specified station No. • When Azbil SDC/DMC Series is used. 0 to 127 : To monitor the control equipment of the specified station No. 200 to 215 : To specify the station No. of the control equipment to be monitored by the value of GOT data register (GD).*1 • When Azbil DMC50 is used. 1 to 15: To specify the station No. of the COM module or control equipment to be monitored. 100 to 115: To specify the station No. of the COM module or control equipment to be monitored, and the Sub Station of the control equipment by the value of GOT data register (GD).*2
Sub Station		Specify the sub station number of the control equipment connected to the COM module specified in [Station] to monitor it. (0 to 15)If the specified [SubStation] is 0, the COM module/control equipment specified in [Station] is monitored. For AHC2001, the sub station number is ignored.
Switch to the device define dialog	Device definition can be checked.	

^{*1} The following shows the relation between station numbers of the control equipment and the GOT data register.

Station No.	GOT data register (GD)	Setting range
200	GD10	
201	GD11	0 to 127
:	:	(If setting a value outside the range above, a device
214	GD24	range error occurs.)
215	GD25	- , ,

*2 From the value of GD10 to 25, the upper 8bits are set for station No., and the lower 8bits for the Sub Station. In this case, the setting of [Sub Station] is invalid.

The following shows the relation between station numbers of the control equipment and the GOT data register.

Station No.	GOT data register (GD)	Setting range
100	GD10	
101	GD11	
:	:	0x0000 to 0xFFFF
114	GD24	
115	GD25	

Example: When [Station No.] is set to 100

When [Station No.] is set to 100, the monitoring target is set based on the GD10 value.

GD10 = 0x010A

(Upper 8bits) $0x01 \rightarrow Station No.: 1$ (Lower 8bits) $0x0A \rightarrow Sub Station: 10$



Station No. and Sub Station of AZBIL DMC50

The station No. and Sub Station set when using AZBIL DMC50 correspond to NW No. and Station number of MITSUBISHI PLC, respectively.

3.6.1 AZBIL SDC/DMC Series

	Device name	Setting range	Device No. representation
Bit device	The bit specification of the word device	Setting range of each word device	-
Word device	Data ()*1	273 to31243	Decimal

^{*1} Only 16-bit (1-word) designation is allowed.

3.6.2 AZBIL DMC50/AHC2001

	Device name	Setting range	Device No. representation
device	Network Addresses (NA)*1	0000 to FFFF	Hexadecimal
Double word	Parameter Addresses (PA)*1	00000 to FFFFF	Hexadecimal

^{*1} Only 32-bit (2-word) designation is allowed.

(a) Network Addresses (NA)

The following shows the network address settings and definitions.

Network Addresses	Definition
0000	Network Addresses

(b) Parameter Address (PA)

The following shows the parameter address settings and definitions.

Parameter Address	Definition
001	H/W Information
002	Date and Time Setup
021	Al Setup (High resolution type:standard inputs)
022	Al Setup (Special type)
023	Al Setup (High resolution type:option inputs)
041	AUX-IN Setup
045	AO Setup
061	DO Setup
071	TP Setup
0A1	MR20X Communication Setup
0A2	- MK20A Communication Setup
0A3	Front Port Communication Setup
0C1	System Status
0C5	Al Alarm Log
0C3	Date and Time Display
0C4	System Alarm Log
0C6	AUX-IN Alarm Log

(Continued to next page)

Parameter Address	Definition
0E1	Al Status
0E2	AUX-IN Status
0E3	AO Status
0E5	DI Status
0E6	DO Status
0E7	TP Status
0E8	Zener Barrier Adjustment Counts
0F1	Present MR20X Communication Setup
0F2	Fresent WiN20A Communication Setup
0F3	Front Port Active Communication Setup
103	Memory Usage Monitor
201	PID_A Options Control Action
202	PID_A Constants Proportional Band
203	PID_A Monitor SP
211	PID_CAS Options Control Action
212	PID_CAS Constants (master) Proportional Band
213	PID_CAS Constants (slave) Proportional Band
214	PID_CAS Monitor M_SP
234	Ra_PID Options Ra-PID Mode
235	Ra_PID Constants Proportional Band
236	Ra_PID Monitor SP
241	UP_PID Options Control Action
242	UP_PID Constants Proportional Band
243	UP_PID Monitor U_SP(Use SP)
301	TBL/TBR Setup Contact Point X1
C00	Pattern Setup
C01 to C63	Segment Setup
CF1	Pattern FB Monitor
801 to 9FF	Type label defined by the user

3.7 Precautions

Station number setting of the temperature controller system

• When connecting to DMC10 or SDC

Make sure to establish temperature controller system with No.1 station.

• When connecting to DMC50 or AHC2001

A COM module or temperature controller with the station number set with the host address must be included.

3.4.2 Communication detail settings

■ GOT clock control

Since the control equipment does not have a clock function, the settings of "time adjusting" or "time broad cast" by GOT clock control will be disabled.

Disconnecting some of multiple connected equipment

The GOT can disconnect some of multiple connected equipment by setting GOT internal device. For example, the faulty station where a communication timeout error occurs can be disconnected from connected equipment. For details of GOT internal device setting, refer to the following manual.

GT Designer3 (GOT2000) Screen Design Manual

■ When DMC50/AHC2001 and DMC10/SDC are mixed

GOT does not support connections with DMC50/AHC2001 and DMC10/SDC mixed.

■ Station number range for AHC2001

The station number for AHC2001 ranges from 1 to 127. However, use station numbers from 1 to 15, which are the range for DMC50.

Device range for AHC2001

The GOT only supports some devices for the AHC2001. Use the devices within the device range for the DMC50.



CONNECTION TO OMRON PLC

4.1	Connectable Model List	. 4 - 2
4.2	Serial Connection	. 4 - 4
4.3	Ethernet Connection	4 - 41
4.4	Device Range that Can Be Set	4 - 47

4. CONNECTION TO OMRON PLC

4.1 Connectable Model List

The following table shows the connectable models.

Series	Model name	Clock	Communication Type	Connectable GOT	Refer to
	CPM1	×			
0)/0144.0.0014	CPM1A	×	DO 000	GT GT GT GO	
SYSMAC CPM	CPM2A	0	RS-232	27 25 23 21 GS	4.2.1
	CPM2C	O*3			
SYSMAC CQM1	CQM1*1	O*4	RS-232	ет ет ет ет ет 27 25 23 21 GS	[] 4.2.1
SYSMAC CQM1H	CQM1H	O*4*5	RS-232 RS-422	ет ет ет ет 27 ет ет 27 ет ет	4.2.2
	CJ1H		DO 000		
SYSMAC CJ1	CJ1G	0	RS-232 RS-422	27 25 23 21 GS	₹ 4.2.3
	CJ1M		_		
SYSMAC CJ2	CJ2H		RS-232	ет е	4.2.3
010111110002	CJ2M*9		RS-422	27 25 23 21 65	4.2.3
	CP1H				
SYSMAC CP1	CP1L		RS-232	GT GT GT GT GS 21 GS	4.2.4
	CP1E		RS-422	27 25 23 21 66	7.2.7
	(N type) ^{*8}				
SYSMAC C200HS	C200HS	0	RS-232	GT GT GT GT GS 21 GS	4.2.5
SYSMAC C200H	C200H	O*6	RS-422	27 25 23 21 00	4.2.0
	C200HX		DO 000		
SYSMAC $lpha$	C200HG	Ŭ	RS-232 RS-422	27 25 23 21 GS	4.2.5
	C200HE*2	O*7			
	CS1H		D0.000		
SYSMAC CS1	CS1G	0	RS-232 RS-422	27 25 23 21 GS	4.2.6
	CS1D	1			
SYSMAC C1000H	C1000H	.,	RS-232	GT GT GT CC	P
SYSMAC C2000H	C2000H	×	RS-422	27 25 23 21 GS	4.2.7
	CV500*10				
0.401410	CV1000*10	0	RS-232 RS-422	GT GT GT	
SYSMAC CVM1/CV	CV2000*10			27 25 23 21 GS	4.2.8
	CVM1*10	O*3	1		

(Continued to next page)

- *1 The CQM1-CPU11 is unable to communicate with GOT since the CQM1-CPU11 has no RS-232C interface.
- *2 The C200HE-CPU11 does not support communication board. Use a host Link unit.
- *3 Some models do not have a clock function.
- *4 The memory cassette equipped with a clock is required.
- *5 The EM device of the CQM-CPU61 cannot be monitored.
- *6 To use the C200H-CPU21/CPU22/CPU23, the memory cassette equipped with a clock is required. The C200H-CPU01/CPU02/CPU03 does not support the clock function.
- *7 The C200HE-CPU11 does not support the clock function.
- *8 For CP1E (N type) CPU modules with 20 or less I/O points, only the direct CPU connection is available.
- *9 The direct CPU connection is available for CJ2M-CPU1 only.
- *10 Use the CPU module Ver. V1 or later.


Series	Model name	Clock	Communication Type	Connectable GOT	Refer to
	CJ1H				
SYSMAC CJ1	CJ1G	0	Ethernet		
	CJ1M				
SYSMAC CJ2	CJ2H			27 25 23 CT GS	
STSWIAC CJ2	CJ2M			1	4.3.1
	CS1H				
SYSMAC CS1	CS1G				
	CS1D				

^{*1} Not compatible with the redundant Ethernet.

4.2 Serial Connection

4.2.1 System Configuration for connecting to CPM1, CPM1A, CPM2A, CPM2C or CQM1

■ When connecting to PLC or RS-232C

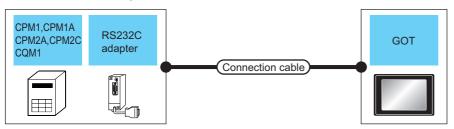




	PLC		Connection cable		GOT	-			
Model name	RS-232C adapter ^{*1}	Commun ication Type	Cable model Connection diagram number	Max. distance	Option device	Model	Number of connectable equipment		
	- R					- (Built into GOT)	GT 25 GT 25 GT 23 GS		
CPM2A CQM1		RS-232	GT09-C30R20101-9P(3m) or User) RS-232 connection diagram 1)	15m	GT15-RS2-9P	ет ет 27 25	1 GOT for 1 PLC		
		10-202			GT10-C02H- 6PT9P ^{*2}	GT _{033P} GT _{033P} 210aP R4 R2	1 1 3 3 1 1 1 2 3		
								User RS-232 connection diagram 4)	15m
				15m	- (Built into GOT)	GT 25 27 25 GT 27000 GS			
CPM1 CPM1A	CPM1-CIF01	RS-232	GT09-C30R20101-9P(3m) or User RS-232 connection diagram 1)		GT15-RS2-9P	ет ет 27 25	1 GOT for 1 RS-232C		
CPM2A CPM2C	CFWIT-OII 01	WIT-CIPUT RO-232			GT10-C02H- 6PT9P ^{*2}	GT _{03P} GT _{03P} 210aP 210aP R4 R2	adapter		
			User RS-232 connection diagram 4)	15m	- (Built into GOT)	6T 04R CT 03P 2104P R2			

	PLC		Connection cable		GOT			
Model name	RS-232C adapter*1	Commun ication Type	Cable model Connection diagram number	Max. distance	Option device	Model	Number of connectable equipment	
	CPM2C-CIF01-V1 RS	D0 000	GT09-C30R20101-9P(3m) or (User) RS-232 connection diagram 1)		- (Built into GOT)	GT 27 25 GT 23 GT 950 GS		
CPM2C				15m	GT15-RS2-9P	ет ет 27 25	1 GOT for 1 RS-232C adapter	
OF WIZO		110 202			GT10-C02H- 6PT9P ^{*2}	GT _{03P} GT _{03P} 210aP 210aP R4 R2		
			(User) RS-232 connection diagram 4)	15m	- (Built into GOT)	6T _{04R} 6T _{03P} 21 ^{04R} 21 _{04P} R2		

Product manufactured by OMRON Corporation. For details on the product, contact OMRON Corporation.

^{*1} *2 When a GT10-C02H-6PT9P unit of the sub version A or B is used, do not ground the case of the D-sub (9-pin) connector.

■ When connecting to OMRON connection cable

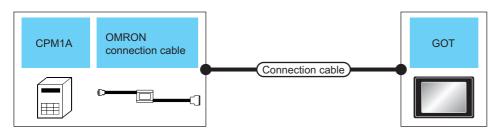




	PLC		Connection cable		GOT			
Model name	OMRON connection cable ^{*1}	Commun ication Type	Cable model Connection diagram number	Max. distance	Option device	Model	Number of connectable equipment	
	CQM1-CIF01 RS-2					- (Built into GOT)	GT 25 GT 25 GT 23 GT GS	
CPM1A		RS-232	GT09-C30R20102-25S(3m) or User RS-232 connection diagram 2)	15m	GT15-RS2-9P	er er 27 25	1 GOT for 1 PLC	
OI MIDA		110 202	3-202		GT10-C02H- 6PT9P ^{*2}	GT _{03P} 2104P R4 R2 R2	1 1 661 161 11 26	
			(User)RS-232 connection diagram 5)	15m	- (Built into GOT)	GT_04P 21 ^{04P} R2		
				15m	- (Built into GOT)	GT 27 25 GT 23 27050 GS		
CPM2C	CPM2C-CN111	RS-232	GT09-C30R20101-9P(3m) or User (Property) RS-232 connection diagram 1)		GT15-RS2-9P	gt gt 27 25	1 GOT for 1 PLC	
GPM2C	GI M2G-GNTTI	7-CN111 N-3-2-32			GT10-C02H- 6PT9P ^{*2}	GT _{03P} 210aP 210aP R4 R2		
			User RS-232 connection diagram 4)	15m	- (Built into GOT)	GT_04R GT_032P 21 ^{04R} R2 ^{04P}		

^{*1} Product manufactured by OMRON Corporation. For details on the product, contact OMRON Corporation.

^{*2} When a GT10-C02H-6PT9P unit of the sub version A or B is used, do not ground the case of the D-sub (9-pin) connector.

4.2.2 System Configuration for connecting to CQM1H

■ When connecting to PLC or serial communication board

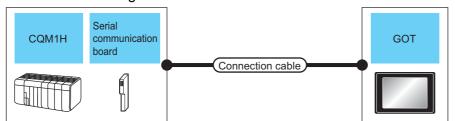




	PLC		Connection cable		G	ОТ	
Model name	Serial communication board*1	Commu nication Type	Cable model Connection diagram number	Max. distance	Option device	Model	Number of connectable equipment
	- R				- (Built into GOT)	GT GT GT 25 GT 27 GT 27 GT	
		RS-232	GT09-C30R20101-9P(3m) or User RS-232 connection diagram 1)	15m	GT15-RS2-9P	ет ет 27 25	
		R0-232	52		GT10-C02H- 6PT9P ^{*2}	GT carr GT car 2 Ivan Z Ivan R4 R2	
CQM 1H			User RS-232 connection diagram 4)	15m	- (Built into GOT)	GT out GT oas 21 Out GT oas 21 Out GT oas	1 GOT for 1 PLC
og		-SCB41 RS-232	GT09-C30R20101-9P(3m) or (User)RS-232 connection diagram 1)	15m	- (Built into GOT)	GT G	
	CQM1-SCB41				GT15-RS2-9P	ет ет 27 25	
	CQWI-SCB41				GT10-C02H- 6PT9P ^{*2}	G1,03P G1,03P 2164P Z164P R4 R2	
			User RS-232 connection diagram 4)	15m	- (Built into GOT)	GT out GT cap 21 21 21 64P R2	

	PLC		Connection cable		G	ОТ	
Model name	Serial communication board*1	Commu nication Type	Cable model Connection diagram number	Max. distance	Option device	Model	Number of connectable equipment
CQM 1H	CQM1-SCB41 RS-		GT09-C30R40101-9P(3m) GT09-C100R40101-9P(10m) GT09-C200R40101-9P(20m) GT09-C300R40101-9P(30m) or User RS-422 connection diagram 3)		- (Built into GOT)	27 25 GT 27 23 27 60 GS GT 27 60	
				200m	GT15-RS4-9S	ет ет 27 25	1 GOT for 1 serial communication board
		110 422			GT10-C02H-9SC	GT _o un GT ₀ 03P 2104P Rd	
			User RS-422 connection diagram 7)		- (Built into GOT)	21 or Gross 22 floar ETRK Gross 2 floar Rd	

Product manufactured by OMRON Corporation. For details on the product, contact OMRON Corporation.

When a GT10-C02H-6PT9P unit of the sub version A or B is used, do not ground the case of the D-sub (9-pin) connector.

■ When connecting to OMRON connection cable

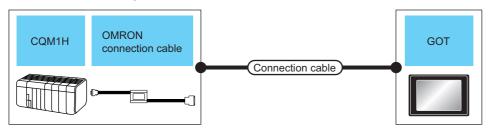




	PLC		Connection cable		GOT	-	Number of
Model name	OMRON connection cable*1	Commun ication Type	Cable model Connection diagram number	Max. distance	Option device	Model	connectable equipment
	CQM1-CIF02 RS-23:	50.000	GT09-C30R20101-9P(3m) or User RS-232 connection diagram 1)	15m	- (Built into GOT)	27 25 27 25 6T 27 27 27 27 27 27 27 27 27 27 27 27 27	- 1 GOT for 1 PLC
CQM 1H					GT15-RS2-9P	ет ет 27 25	
OQW III		10-202			GT10-C02H-6PT9P*2	GT 03P 2104P 2104P R4 R2	
			(User) RS-232 connection diagram 4)	15m	- (Built into GOT)	GT 04R GT 03P 2104P R2	

Product manufactured by OMRON Corporation. For details on the product, contact OMRON Corporation. When a GT10-C02H-6PT9P unit of the sub version A or B is used, do not ground the case of the D-sub (9-pin) connector. *1 *2

4.2.3 System Configuration for connecting to CJ1H, CJ1G, CJ1M, CJ2H, or CJ2M

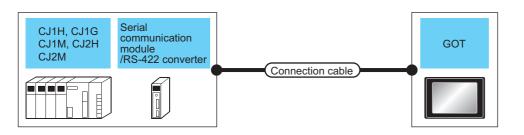



	PLC		Connection cable		GOT		
Model name	Serial communication module/RS-422A converter*1	Commu nication Type	Cable model Connection diagram number	Max. distance	Option device	Model	Number of connectable equipment
	- RS-232			- (Built into GOT)	GS GS GT		
		RS-232	GT09-C30R20101-9P(3m) or User RS-232 connection diagram 1)	15m	GT15-RS2-9P	ет ет 27 25	
					GT10-C02H- 6PT9P ^{*2}	GT,03P 2104P R4 R2	
CJ1H CJ1G			User RS-232 connection diagram 4)	15m	- (Built into GOT)	GT oar 27 oap 21 oap 22 oap 22 oap	1 GOT for 1 PLC
CJ1M CJ2H			GT09-C30R20101-9P(3m) or User)RS-232 connection diagram 1)		- (Built into GOT)	27 25 GT 27 27 GS	
	CJ1W-SCU21-V1	RS-232		15m	GT15-RS2-9P	ет ет 27 25	
	CJ1W-SCU41-V1	202			GT10-C02H- 6PT9P ^{*2}	G7,03P 2104P R4 R2	
			User RS-232 connection diagram 4)	15m	- (Built into GOT)	GT OAR 2 COAP 2 COAP 2 COAP R2	

	PLC		Connection cable		GOT		
Model name	Serial communication module/RS-422A converter*1	Commu nication Type	Cable model Connection diagram number	Max. distance	Option device	Model	Number of connectable equipment
			GT09-C30R40101-9P(3m)		- (Built into GOT)	GT CT 27 25 GT 27 27 27 GT GS	
	CJ1W-SCU31-V1	RS-422	GT09-C100R40101-9P(10m) GT09-C200R40101-9P(20m) GT09-C300R40101-9P(30m) or	200m	GT15-RS4-9S	ет ет 27 25	1 GOT for 1 PLC
	CJ1W-SCU41-V1	10 422	diagram 3)		GT10-C02H-9SC	GT _{04R} (GT _{03P} 2104P R4	- I GOT IOI I PLO
CJ1H CJ1G			User RS-422 connection diagram 7)	200m	- (Built into GOT)	GT_OSP 21-OSP 21-OSP ETRA GT_OSP 21-OSP R1-OSP	
CJ1M CJ2H	CJ1W-CIF11 F		GT09-C30R40103-5T(3m) GT09-C100R40103-5T(10m) GT09-C200R40103-5T(20m) GT09-C300R40103-5T(30m) or User RS-422 connection		- (Built into GOT)	GT 27 25 GT 23 27 ST	
		G' G'		50m	GT15-RS4-9S	ет ет 27 25	1 GOT for 1 RS-422A converter
			diagram 4)		GT10-C02H-9SC	GT_cars (2T_cars) 21 (2T_cars) 21 (2T_cars) R4	
			User RS-422 connection diagram 8)	50m	- (Built into GOT)	GT_car GT_csp 21 oar EirR4 GT_csp 20 oar R4 oar R4 oar	
					- (Built into GOT)	et et 25 25 et 27 25 et 23 et 27 et 25 e	
CJ1H CJ1G	CJ1W-SCU21	RS-232	GT09-C30R20101-9P(3m) or User RS-232 connection diagram 1)	15m	GT15-RS2-9P	ет ет 27 25	1 GOT for each port of a serial communication module
CJ1M	CJ1W-SCU41	W-SCU41			GT10-C02H- 6PT9P ^{*2}	GT _{03P} GT _{03P} 2104P 2104P R4 R2	
			User RS-422 connection diagram 4)	15m	- (Built into GOT)	GT oar 21 oar 21 oar R2	

	PLC		Connection cable		GOT		
Model name	Serial communication module/RS-422A converter*1	Commu nication Type	Cable model Connection diagram number	Max. distance	Option device	Model	Number of connectable equipment
			GT09-C30R40101-9P(3m)		- (Built into GOT)	er 27 25 27 25 61 27 27 27 27 27 27 27 27 27 27 27 27 27	
CJ1H CJ1G	CJ1W-SCU41	RS-422	GT09-C100R40101-9P(10m) GT09-C200R40101-9P(20m) GT09-C300R40101-9P(30m) or User RS-422 connection	200m	GT15-RS4-9S	et 27 25	1 GOT for each port of a serial communication
CJ1M	C31W-3C041	NO-422	diagram 3)		GT10-C02H-9SC	GT озгр 21 ^{одг} <mark>21</mark> озг Rd	module
			User RS-422 connection diagram 7)	200m	- (Built into GOT)	GT 04R 21 04P 21	
	-			- (Built into GOT)	GT 25 25 27 25 25 25 25 25 25 25 25 25 25 25 25 25		
		RS-232	GT09-C30R20101-9P(3m) or (User) RS-232 connection diagram 1)	15m	GT15-RS2-9P	ет ет 27 25	1 GOT for 1 PLC
					GT10-C02H-6PT9P*2	GT 03P 2104P R4 R2 R4 R2	
CJ2M-				15m	- (Built into GOT)	GT 04R GT 03P 2104P R2	
CPU1□			GT09-C30R40103-5T(3m)		- (Built into GOT)	GS GT GT 25	
	C.I1W-CIF11	CJ1W-CIF11 RS-422	GT09-C100R40103-5T(10m) GT09-C200R40103-5T(20m) GT09-C300R40103-5T(30m) or	50m	GT15-RS4-9S	ет 27 25	1 GOT for 1 RS-422A
	GOTW GILLT		diagram 4)		GT10-C02H-9SC	GT 03P 2104R 2104P R4	converter
			User RS-422 connection diagram 8)	50m	- (Built into GOT)	GT 048 GT 03P 2104P 2104P ETR4 GT 05P 2104P	

PLC			Connection cable		GOT		
Model name	Serial communication module/RS-422A converter*1	Commu nication Type	Cable model Connection diagram number	Max. distance	Option device	Model	Number of connectable equipment
CJ2M- CPU1□ CJ2M- CPU3□	CJ1W-SCU21-V1 CJ1W-SCU41-V1	RS-232	GT09-C30R20101-9P(3m) or USSPT RS-232 connection diagram 1)	15m	- (Built into GOT)	27 25 GS 27 27 GS 27 27 27 27 27 27 27 27 27 27 27 27 27	1 GOT for each port of a serial communication module
					GT15-RS2-9P	27 25	
					GT10-C02H-6PT9P*2	GT_03P 2103P 2104P R4 R4 R2	
			User RS-232 connection diagram 4)	15m	- (Built into GOT)	GT_OHR GT_OSP 21 OHR ZT_OSP ZT_OSP	
CJ2M- CPU1□ CJ2M- CPU3□	CJ1W-SCU31-V1 CJ1W-SCU41-V1	RS-422	GT09-C30R40101-9P(3m) GT09-C100R40101-9P(10m) GT09-C200R40101-9P(20m) GT09-C300R40101-9P(30m) or (User) (Preser) (User) (User) (User) (User) (User) (User) (State) (User)	200m	- (Built into GOT)	GT 25 27 25 GT 23 27 65 GS	1 GOT for each port of a serial communication module
					GT15-RS4-9S	et et 25 25	
					GT10-C02H-9SC	GT _{OHR} GT _{OSP} 21 oHR ZT _{OSP} Rd	
			User RS-422 connection diagram 7)	200m	- (Built into GOT)	GT_OHR GT_OSP 21 OHP EFIR4 GT_OSP 21 OHP R4	
CJ2M- CPU3□	CP1W-CIF01	RS-232	GT09-C30R20101-9P(3m) or (User) RS-232 connection diagram 1)	15m	- (Built into GOT)	27 25 GT 25 23 27 60 GS	1 GOT for 1 RS-232C option board
					GT15-RS2-9P	et et 27 25	
					GT10-C02H- 6PT9P* ²	GT _{GOSP} GT _{GOSP} 20est 216est Ré ^{ses} R2	
			User RS-232 connection diagram 4)	15m	- (Built into GOT)	GT GT GSP 21 OHP 21 OHP RV GSP	


PLC			Connection cable		GOT		
Model name	Serial communication module/RS-422A converter*1	Commu nication Type	Cable model Connection diagram number	Max. distance	Option device	Model	Number of connectable equipment
CJ2M- CPU3□	CP1W-CIF11	RS-422	GT09-C30R40103-5T(3m) GT09-C100R40103-5T(10m) GT09-C200R40103-5T(20m) GT09-C300R40103-5T(30m) or User RS-422 connection diagram 4)	50m	- (Built into GOT)	27 25 GT 27 23 27 GS	1 GOT for 1 RS-422A/ 485 option board
					GT15-RS4-9S	ет ет 27 25	
					GT10-C02H-9SC	GT 04R GT 03P 2104R R404P	
			User RS-422 connection diagram 8)	50m	- (Built into GOT)	GT osp 210stp 210stp ET R4 GT osp 210stp R4	
CJ2M- CPU3⊟	CP1W-CIF12	RS-422	GT09-C30R40103-5T(3m) GT09-C100R40103-5T(10m) GT09-C200R40103-5T(20m) GT09-C300R40103-5T(30m) or User: WHOTE RS-422 connection diagram 4)	200m	- (Built into GOT)	GS GT GT 27 25 GT 23 27 60 GS	1 GOT for 1 RS-422A/ 485 option board
					GT15-RS4-9S	ет ет 27 25	
					GT10-C02H-9SC	GT 04R GT 03P 2104P R4	
			User RS-422 connection diagram 8)	200m	- (Built into GOT)	GT OAP 21 OAP 21 OAP EIRK GT OAP 21 OAP RN	

^{*1} Product manufactured by OMRON Corporation. For details on the product, contact OMRON Corporation.

^{*2} When a GT10-C02H-6PT9P unit of the sub version A or B is used, do not ground the case of the D-sub (9-pin) connector.

4.2.4 System Configuration for connecting to CP1H, CP1L, or CP1E

■ When connecting a PLC or option board

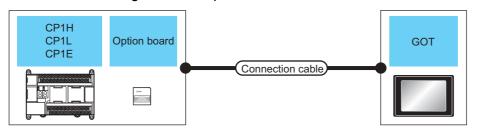




	PLC		Connection cable		GOT		
Model name	Option board ^{*1}	Commun ication Type	Cable model Connection diagram number	Max. distance	Option device	Model	Number of connectable equipment
					- (Built into GOT)	GT 25 GT 25 GT 23 GT GS	
CP1E	:P1E - RS-232	GT09-C30R20101-9P(3m) or User RS-232 connection diagram 1)	15m	GT15-RS2-9P	27 25	1 GOT for 1 PLC	
5					GT10-C02H-6PT9P ^{*2}	GT ₀ 3P 2104P 2104P R4 R2	
			(User RS-232 connection diagram 4)	15m	- (Built into GOT)	GT _{03P} 21 ^{04P} 21 _{04P} R2	
					- (Built into GOT)	GT 25 GT 25 GT 23 GT	
CP1H CP1L	User (regard)	GT09-C30R20101-9P(3m) or User RS-232 connection diagram 1)	15m	GT15-RS2-9P	er er 27 25	1 GOT for 1 RS-232C option	
CP1E	CP1W-CIF01	CIF01 RS-232		GT10-C02H-6PT9P*2	GT _{03P} 2104P R4 R2 R2	board	
			(User) (RS-232 connection diagram 4)	15m	- (Built into GOT)	GT_04R GT_03.P 21 ^{04R} R2	

	PLC	Connection cable GOT					
Model name	Option board ^{*1}	Commun ication Type	Cable model Connection diagram number	Max. distance	Option device	Model	Number of connectable equipment
	CP1H GT09 GT09 GT09 GT09 GT09 GT09 GT09 GT09		GT09-C30R40103-5T(3m) GT09-C100R40103-5T(10m) GT09-C200R40103-5T(20m GT09-C300R40103-5T(30m) or		- (Built into GOT)	GT 27 25 GT 23 GT 23 GS	
		RS-422		50m	GT15-RS4-9S	er er 27 25	1 GOT for 1 RS-422A/485
		diagram 4)		GT10-C02H-9SC	GT _{04R} GT _{03P} 21 ^{04P} R4	option board	
CP1H CP1L		User RS-422 connection diagram 8)	50m	- (Built into GOT)	GT _{OAFR} GT _{O3P} 2104P 2104P ET/R4 GT _{O3P} 2104P R4		
CP1E			GT09-C30R40103-5T(3m)	200m	- (Built into GOT)	GT 25 GT 25 GT 23 GS	
	CP1W-CIF12 R	RS-422	GT09-C100R40103-5T(10m) GT09-C200R40103-5T(20m) GT09-C300R40103-5T(30m) or User RS-422 connection		GT15-RS4-9S	ет ет 27 25	1 GOT for 1 RS-422A/485
		1.0 1.22	diagram 4)		GT10-C02H-9SC	GT _{04IR} GT _{03P} 21 ^{04P} 21 _{04P} R4	option board
			User RS-422 connection diagram 8)	200m	- (Built into GOT)	GT _{0-4R} GT _{0-52P} 210-4P 210-4P GT _{0-3P} 210-4P R4	

Product manufactured by OMRON Corporation. For details on the product, contact OMRON Corporation.
 When a GT10-C02H-6PT9P unit of the sub version A or B is used, do not ground the case of the D-sub (9-pin) connector.

■ When connecting to serial communication module

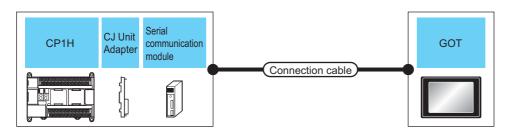




		PLC		Connection cable		GOT		Number of
Model name	CJ unit adapter*1	Serial communication module ^{*1}	Commu nication Type	Cable model Connection diagram number	Max. distance	Option device	Model	connectable equipment
			RS-232			- (Built into GOT)	GT 25 GT 25 GT 23 GT GS	
	CP1H CP1W-EXT01	CJ1W-SCU21 CJ1W-SCU41 CJ1W-SCU21-V1 CJ1W-SCU41-V1		GT09-C30R20101-9P(3m) or (User) (RS-232 connection diagram 1)	15m	GT15-RS2-9P	er er 27 25	
						GT10-C02H- 6PT9P ^{*2}	GT _{03P} GT _{03P} 210aP 210aP R4 R2 R2	
CP1H				(User) (record) (Juggram 4)	15m	- (Built into GOT)	GT _{04R} GT _{03P} 21 ^{04P} R2	1 GOT for each port of a serial
OI III	GI IW-LATOT	CJ1W-SCU41	RS-422	GT09-C30R40101-9P(3m) GT09-C100R40101-9P(10m) GT09-C200R40101-9P(20m) GT09-C300R40101-9P(30m) or (User) (Inspiring) RS-422 connection diagram 3)		- (Built into GOT)	GS GT GT 25 GT 25 GT 23 GT	communicatio n module
					200m	GT15-RS4-9S	er er 27 25	
		CJ1W-SCU31-V1 CJ1W-SCU41-V1				GT10-C02H-9SC	GT _{04R} GT _{03P} 21 ^{04P} R4	
				(User property) RS-422 connection diagram 7)	200m	- (Built into GOT)	GT _{04R} GT _{03P} 21 ^{04R} 21 _{04P} ETIRA GT _{03P} 21 _{04P} R4	

Product manufactured by OMRON Corporation. For details on the product, contact OMRON Corporation.

^{*2} When a GT10-C02H-6PT9P unit of the sub version A or B is used, do not ground the case of the D-sub (9-pin) connector.

4.2.5 System Configuration for connecting to C200HS, C200H, C200HX, C200HG, or C200HE

■ When connecting to PLC or rack type host link unit

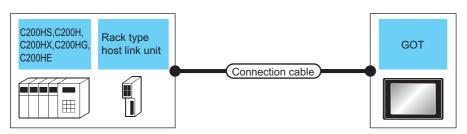




	PLC		Connection cable		GOT		Number of
Model name	Rack type host link unit ^{*1}	Commu nication Type	Cable model Connection diagram number	Max. distance	Option device	Model	connectable equipment
	C200HX				- (Built into GOT)	GT 25 GT 25 GS 27,000	
C200HX C200HG		RS-232	GT09-C30R20101-9P(3m) or User)RS-232 connection diagram 1)	15m	GT15-RS2-9P	ет ет 27 25	1 GOT for 1 PLC
C200HE		10 252			GT10-C02H- 6PT9P ^{*2}	GT _{03P} GT _{03P} 2104P 2104P R4 R2	1 7 3 3 1 1 1 1 2 3
			(User) RS-232 connection diagram 4)	15m	- (Built into GOT)	GT_04R GT_03P 2104P R2	
					- (Built into GOT)	GT 27 25 GT 23 27 05 GS	
C200HS C200H	200H 200HX C200H-LK201-V1 F		GT09-C30R20103-25P(3m) or User RS-232 connection diagram 3)	15m	GT15-RS2-9P	er er 27 25	1 GOT for 1 rack type host link
C200HG C200HE		RS-232			GT10-C02H- 6PT9P ^{*2}	GT _{03P} GT _{03P} 2104P Z104P R4 R2	unit
			(User) RS-232 connection diagram 6)	15m	- (Built into GOT)	GT_04R 21 ^{04R} 21 ^{04P} R2 ^{04P}	

	PLC		Connection cable		GOT		Number of
Model name	Rack type host link unit ^{*1}	Commu nication Type	Cable model Connection diagram number	Max. distance	Option device	Model	connectable equipment
			GT09-C30R40102-9P(3m)		- (Built into GOT)	GT 25 GT 25 GT 23 GT 65 GS	
C200HS C200H C200HX C200H-LK202-V1 F	RS-422	GT09-C100R40102-9P(10m) GT09-C200R40102-9P(20m) GT09-C300R40102-9P(30m) or User)RS-422 connection diagram)) or 200m	GT15-RS4-9S	er er 27 25	1 GOT for 1 rack type host link	
C200HG C200HE	G20011-EN202-V 1	NO-422	2)		GT10-C02H-9SC	GT 04R GT 03P 21 04P R4 04P	unit
			(User) RS-422 connection diagram 6)	200m	- (Built into GOT)	GT OAR 21 OAP 21 OAP EIRE	

¹ Product manufactured by OMRON Corporation. For details on the product, contact OMRON Corporation.

^{*2} When a GT10-C02H-6PT9P unit of the sub version A or B is used, do not ground the case of the D-sub (9-pin) connector.

■ When connecting to a communication board

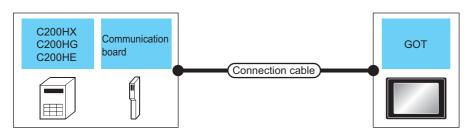



	PLC		Connection cable		GOT		Number of
Model name	Communication board ^{*1}	Commun ication Type	Cable model Connection diagram number	Max. distance	Option device	Model	connectable equipment
		RS-232	GT09-C30R20101-9P(3m) or User)RS-232 connection diagram 1)		- (Built into GOT)	GT 25 27 25 GT 21 GS	
	C200HW-COM02 C200HW-COM05			15m	GT15-RS2-9P	ет ет 27 25	
	C200HW-COM06	110 202			GT10-C02H-6PT9P*3	GT ₀ 3P 210aP 210aP R4 R2	
C200HX C200HG			(User) RS-232 connection diagram 4)		- (Built into GOT)	GT ₀ 4R 2104P 2104P R2	1 GOT for each port of a communication
C200HE*2		RS-422	GT09-C30R40101-9P(3m)		- (Built into GOT)	GT 25 GT 25 GT 270500 GS	board
	C200HW-COM03		GT09-C100R40101-9P(10m) GT09-C200R40101-9P(20m) GT09-C300R40101-9P(30m) or User RS-422 connection	200m	GT15-RS4-9S	et et 25 25	
	C200HW-COM06		diagram 3)		GT10-C02H-9SC	GT 04R 27 03P 2104P R4	
			User RS-422 connection diagram 7)	200m	- (Built into GOT)	GT _{04R} 2104P 2104P ETIRM GT _{03P} 2104P R4	


^{*1} Product manufactured by OMRON Corporation. For details on the product, contact OMRON Corporation.

^{*2} The communication board cannot be mounted to the C2000HE-CPU11. Use a host Link unit.

^{*3} When a GT10-C02H-6PT9P unit of the sub version A or B is used, do not ground the case of the D-sub (9-pin) connector.

4.2.6 System Configuration for connecting to CS1H, CS1G, or CS1D

■ When connecting to a PLC or a serial communication module

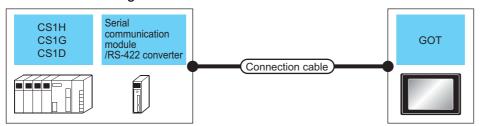




	PLC		Connection cable		GOT		
Model name	Serial communication module*1 /RS-422A converter	Commu nication Type	Cable model Connection diagram number	Max. distance	Option device	Model	Number of connectable equipment
		- RS-232			- (Built into GOT)	GS GT 27 CT 25 GT 23 CT 25 GT 27 CT 25 CT 27 CT	
			GT09-C30R20101-9P(3m) or User RS-232 connection diagram 1)	15m	GT15-RS2-9P	ет ет 27 25	1 GOT for 1 PLC
					GT10-C02H- 6PT9P ^{*2}	GT _{03P} GT _{03P} 2104P R4 R2 R2	1 1 001 101 11 20
CS1H CS1G			(User) RS-232 connection diagram 4)	15m	- (Built into GOT)	GT _{04R} GT _{03P} 2104P R2	
CS1D			GT09-C30R20101-9P(3m) or User RS-232 connection diagram 1)		(Built into GOT)	GS GT 25 GT 25 GT 23 GT 65 GS	
	CS1W-SCU21 CS1W-SCU21-V1			15m	GT15-RS2-9P	er er 27 25	1 GOT for 1 serial
		110-202	232		GT10-C02H- 6PT9P ^{*2}	GT _{03P} GT _{03P} 210aP 210aP R4 R2	communication module
			(User) RS-232 connection diagram 4)	15m	- (Built into GOT)	GT _{OAR} GT _{O3P} 21 ^{04P} R2 ^{04P}	

	PLC		Connection cable		GO1		
Model name	Serial communication module*1 /RS-422A converter	Commu nication Type	Cable model Connection diagram number	Max. distance	Option device	Model	Number of connectable equipment
			GT09-C30R40103-5T(3m)		- (Built into GOT)	GT 25 GT 25 GS 21,000	
CS1H CS1G	CJ1W-CIF11	RS-422	GT09-C100R40103-5T(10m) GT09-C200R40103-5T(20m) GT09-C300R40103-5T(30m) or User RS-422 connection diagram 4)	50m	GT15-RS4-9S	ет ет 27 25	1 GOT for 1 RS-422A
CS1D	CSTW-CHI TI	110-422				GT10-C02H-9SC	GT _{04R} GT _{03P} 2104P R4
			(User) RS-422 connection diagram 8)	50m	- (Built into GOT)	GT _{0-4R} GT _{0-3P} 2104P 2104P ETIR4 GT _{0-3P} 2104P R4	

^{*1} Product manufactured by OMRON Corporation. For details on the product, contact OMRON Corporation.

^{*2} When a GT10-C02H-6PT9P unit of the sub version A or B is used, do not ground the case of the D-sub (9-pin) connector.

■ When connecting to a serial communication board

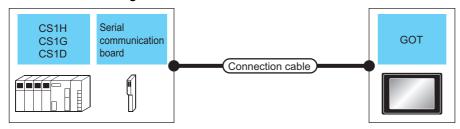




	PLC		Connection cable		GOT		
Model name	Serial communication board ^{*1}	Commu nication Type	Cable model Connection diagram number	Max. distance	Option device	Model	Number of connectable equipment
	CS1W-SCB21 CS1W-SCB41				- (Built into GOT)	27 25 61 25 23 21/25 GS	
		RS-232	GT09-C30R20101-9P(3m) or User (User) RS-232 connection diagram 1)	15m	GT15-RS2-9P	^{ет} 27 25	
	CS1W-SCB21-V1 CS1W-SCB41-V1	10-202			GT10-C02H-6PT9P*2	GT _{03P} GT _{03P} 2104P R4 R2	
CS1H CS1G		User RS-232 connection diagram 4)	15m	- (Built into GOT)	GT _{03P} 21 ^{04R} 21 _{04P} R ₂	GOT for each port of a serial communication	
CS1D		GT09-C30R40101-9P(3m) GT09-C100R40101-9P(10m) GT09-C200R40101-9P(20m) GT09-C300R40101-9P(30m) or CS1W-SCB41 CS1W-SCB41-V1 RS-422 RS-422 GT09-C30R40101-9P(3m) GT09-C300R40101-9P(30m) or Glober RS-422 connection diagram 3)	GT09-C30R40101-9P(3m)		- (Built into GOT)	27 25 στ 25 στ 23 στ 21 ⁹⁵⁰ GS	board
			200m	GT15-RS4-9S	ет ет 27 25		
	CS1W-SCB41-V1		diagram 3)		GT10-C02H-9SC	GT 04R GT 03P 2104P R4	
			User RS-422 connection diagram 7)	200m	- (Built into GOT)	GT 0.3P 2104P 2104P ETIR4 GT 0.3P 2104P R4	

Product manufactured by OMRON Corporation. For details on the product, contact OMRON Corporation. When a GT10-C02H-6PT9P unit of the sub version A or B is used, do not ground the case of the D-sub (9-pin) connector.

4.2.7 System Configuration for connecting to C1000H or C2000H

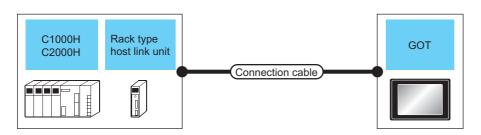




	PLC		Connection cable		GOT		Number of
Model name	Rack type host link unit ^{*1}	Commu nication Type	Cable model Connection diagram number	Max. distance	Option device	Model	connectable equipment
					- (Built into GOT)	GT 25 GT 25 GS GS	
		RS-232	GT09-C30R20103-25P(3m) or (User) RS-232 connection diagram 3)	15m	GT15-RS2-9P	27 25	
		10-202			GT10-C02H-6PT9P*2	GT _{03P} GT _{03P} 2104P 2104P R4 R2	
C1000H	1000H C500-LK201-V1 —		(User) RS-232 connection diagram 6)	15m	- (Built into GOT)	GT_03IP 21 ^{04IP} 21 ^{04IP} R2	1 GOT for 1 rack type
C2000H	C300-ER201-V1		(User) RS-422 connection diagram 2)	200m	- (Built into GOT)	et 27 25 27 25 33 27 25	host link unit
		RS-422			GT15-RS4-9S	et et 27 25	
		RS-422			GT10-C02H-9SC	GT _{04R} GT _{03P} 21 ^{04R} R ₈	
			(User) RS-422 connection diagram 6)	200m	- (Built into GOT)	GT_04R 2104P 2104P ETIR4 GT_03P 2104P R4	

^{*1} Product manufactured by OMRON Corporation. For details on the product, contact OMRON Corporation.

When a GT10-C02H-6PT9P unit of the sub version A or B is used, do not ground the case of the D-sub (9-pin) connector.

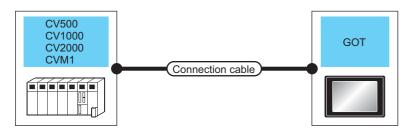



Р	LC	Connection cable		GOT		Number of connectable
Model name	Communica tion Type	Cable model Connection diagram number	Max. distance	Option device	Model	Number of connectable equipment
				- (Built into GOT)	GT 25 GT 25 GT 23 GT 27 GT	
	RS-232 CV500 CV1000	GT09-C30R20101-9P(3m) or User)RS-232 connection diagram 1)	15m	GT15-RS2-9P	er er 27 25	
				GT10-C02H-6PT9P*1	GT ₀ 3P 2104P 2104P R4 R2	
CV1000		(User) RS-232 connection diagram 4)	15m	- (Built into GOT)	GT _{04R} 2T _{03P} 2104P R2	1 GOT for 1 PLC
CV2000 CVM1		GT09-C30R40101-9P(3m)	200m	- (Built into GOT)	GT 25 25 27 25 27 25 27 25 25 25 25 25 25 25 25 25 25 25 25 25	1 331 101 11
	RS-422	GT09-C100R40101-9P(10m) GT09-C200R40101-9P(20m) GT09-C300R40101-9P(30m) or User RS-422 connection diagram		GT15-RS4-9S	ет ет 27 25	
		1)		GT10-C02H-9SC	GT ₀ 4R 2104P 2104P R4	
		User RS-422 connection diagram 5)	200m	- (Built into GOT)	GT_04R	

^{*1} When a GT10-C02H-6PT9P unit of the sub version A or B is used, do not ground the case of the D-sub (9-pin) connector.


4.2.9 Connection Diagram

The following diagram shows the connection between the GOT and the PLC.


■ RS-232 cable

(1) Connection diagram


(a) RS-232 connection diagram 1)

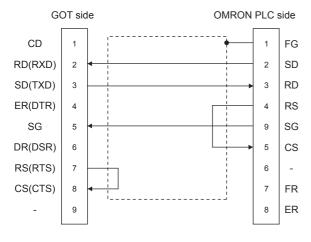


(b) RS-232 connection diagram 2)

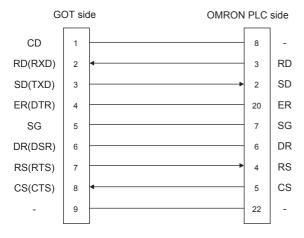


(c) RS-232 connection diagram 3)

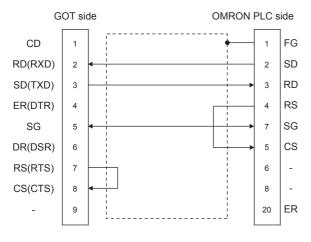


(d) RS-232 connection diagram 4)

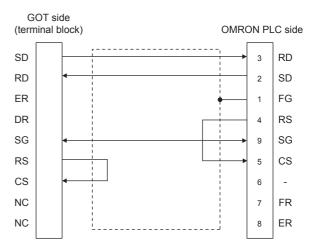

(e) RS-232 connection diagram 5)

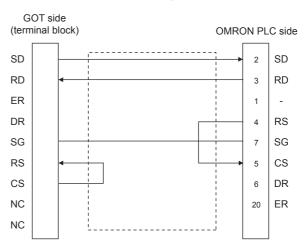

(f) RS-232 connection diagram 6)

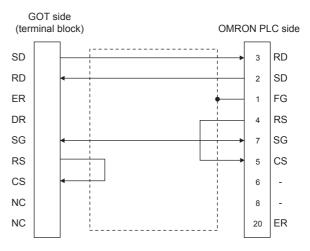

(2) Precautions when preparing a cable

(a) Cable length

The length of the RS-232 cable must be 15m or less.

(b) GOT side connector

For the GOT side connector, refer to the following.

1.4.1 GOT connector specifications

(c) OMRON PLC side connector

Use the connector compatible with the OMRON PLC.

For details, refer to the OMRON PLC user's manual.

■ RS-422 cable




Differences in polarity between GOT and OMRON PLCs

The polarity of poles A and B in signal names is reversed between GOT and OMRON PLCs.


■ Connect a cable according to the following connection diagrams.

(1) Connection diagram


(a) RS-422 connection diagram 1)

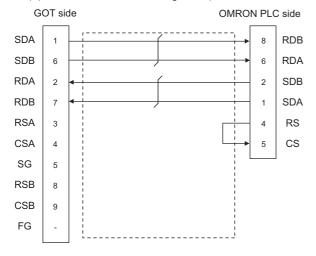


(b) RS-422 connection diagram 2)

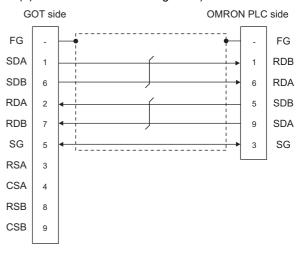


(c) RS-422 connection diagram 3)

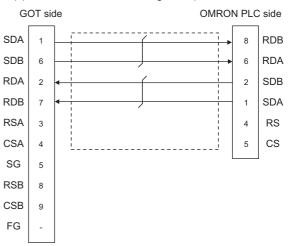


(d) RS-422 connection diagram 4)

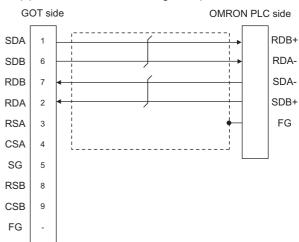


(e) RS-422 connection diagram 5)

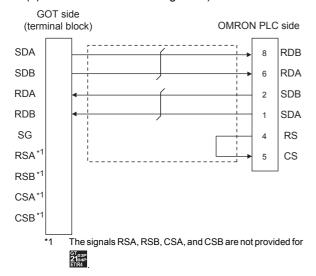


(f) RS-422 connection diagram 6)

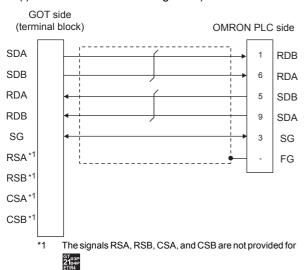

(g) RS-422 connection diagram 7)

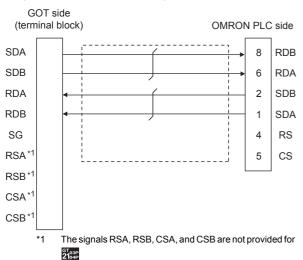

(h) RS-422 connection diagram 8)

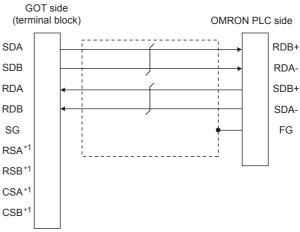

*1 The signals RSA, RSB, CSA, and CSB are not provided for

(2) Precautions when preparing a cable

(a) Cable length

The distance between the GOT and the PLC of connection diagram 1), 2) and 3) must be 200 m or less.

The length of the RS-422 connection diagram 4) must be 50m or less.

(b) GOT side connector

For the GOT side connector, refer to the following.

1.4.1 GOT connector specifications

(c) OMRON PLC side connector

Use the connector compatible with the OMRON PLC.

For details, refer to the OMRON PLC user's manual.

(3) Setting terminating resistors

- (a) GOT side
 - For GT27, GT25, GT23
 Set the terminating resistor setting switch of the GOT main unit to "Disable".
 - For GT21 Set the terminating resistor selector to "330 Ω ".

For details of terminating resistor settings, refer to the following.

1.4.3 Terminating resistors of GOT

(b) OMRON PLC side


When connecting an OMRON PLC to a GOT, a terminating resistor must be set to the OMRON PLC.

OMRON PLC user's Manual

4.2.10 GOT Side Settings

Setting communication interface (Communication settings)

Set the channel of the equipment to be connected to the GOT.

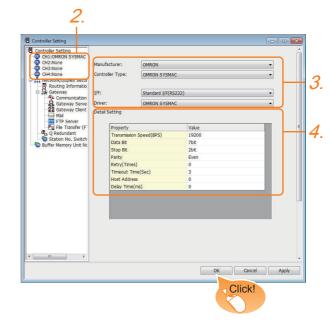

- Select [Common] → [Controller Setting] from the menu.
- 2. The Controller Setting window is displayed. Select the channel to be used from the list menu.
- Set the following items.
 - · Manufacturer: OMRON
 - Controller Type: Set the option according to the Controller Type to be connected.
 - OMRON SYSMAC
 - OMRON SYSMAC CS/CJ
 - I/F: Interface to be used
 - · Driver: OMRON SYSMAC
- The detailed setting is displayed after Manufacturer, Controller Type, I/F, and Driver are set. Make the settings according to the usage environment.

Click the [OK] button when settings are completed.



The settings of connecting equipment can be confirmed in [I/F Communication Setting]. For details, refer to the following.

1.1.2 I/F communication setting

■ Communication detail settings

Make the settings according to the usage environment.

Property	Value			
Transmission Speed(BPS)	19200			
Data Bit	7 bit			
Stop Bit	2 bit			
Parity	Even			
Retry(Times)	0			
Timeout Time(Sec)	3			
Host Address	0			
Delay Time(ms)	0			

Item	Description	Range
Transmission Speed	Set this item when change the transmission speed used for communication with the connected equipment. (Default: 19200bps)	4800bps, 9600bps, 19200bps, 38400bps, 57600bps, 115200bps
Data Bit	Set this item when change the data length used for communication with the connected equipment. (Default: 7bits)	7bit (fixed)
Stop Bit	Specify the stop bit length for communications. (Default: 2bits)	2bit (fixed)
Parity	Specify whether or not to perform a parity check, and how it is performed during communication. (Default: Even)	Even (fixed)
Retry	Set the number of retries to be performed when a communication error occurs. (Default: 0time)	0 to 5times
Timeout Time	Set the time period for a communication to time out. (Default: 3sec)	1 to 30sec
Host Address	Specify the host address (station No. of the PLC to which the GOT is connected) in the network of the GOT. (Default: 0)	0 to 31
Delay Time	Set this item to adjust the transmission timing of the communication request from the GOT. (Default: 0ms)	0 to 300 (ms)

POINT.

(1) Communication interface setting by the Utility
The communication interface setting can be
changed on the Utility's [Communication Settings]
after writing [Communication Settings] of project
data.

For details on the Utility, refer to the following manual.

GOT2000 Series User's Manual (Utility)

(2) Precedence in communication settings
When settings are made by GT Designer3 or the
Utility, the latest setting is effective.

4.2.11 PLC Side Setting



OMRON PLC

For details of OMRON PLCs, refer to the following manuals.

MRON PLC user's Manual

Model name		Refer to	
	CPM2A	4.2.12	
	CQM1, CQM1H		
	CS1, CJ1, CJ2	4.2.13	
PLC CPU	CP1H, CP1L, CP1E	4.2.13	
	C200Hα	4.2.12	
	CV500, CV1000, CV2000, CVM1	4.2.14	
RS-232C adapter	CPM1-CIF01, CPM2C- CIF01-V1	4.2.12	
	CQM1-CIF01		
Connection cable	CQM1-CIF02	4.2.15	
	CPM2C-CN111		
	C200H-LK201-V1	4.2.16	
Rack type host link unit	C200H-LK202-V1	4.2.16	
	C500-LK201-V1	4.2.16	
	CJ1W-SCU21		
	CJ1W-SCU41		
	CJ1W-SCU21-V1	4.2.17	
Serial communication module	CJ1W-SCU31-V1		
	CJ1W-SCU41-V1		
	CS1W-SCU21		
	CS1W-SCU21-V1		
	C200HW-COM02		
Communication board	C200HW-COM03	4 2 10	
Communication board	C200HW-COM05	4.2.18	
	C200HW-COM06		
	CQM1-SCB41	4.2.18	
Serial communication board	CS1W-SCB21 CS1W-SCB21-V1	4 2 10	
	CS1W-SCB41 CS1W-SCB41-V1	4.2.19	
DS 422A/49E Option board	CP1W-CIF11	4 2 20	
RS-422A/485 Option board	CP1W-CIF12	4.2.20	
RS-422A converter	CJ1W-CIF11	4.2.21	

4.2.12 Connecting to CPM2A, CQM1, CQM1H, C200H α or RS-232C adapter

Device settings

Write the following set values to devices of each PLC CPU and initialize each port using a peripheral tool or DM monitor.

Device name	Set value		
DM6645	0001н(fixed)		
DM6646	b15 to b8 b7 to b0 2) 1) 1) RS-232C port transmission speed setting *1*2 02H: 4800bps 03H: 9600bps 04H: 19200bps 2) RS-232C port communication frame format 03H (fixed): The settings are: Start bit : 1 bit Data length: 7 bits Stop bit : 2 bits Parity : Even bits		
DM6647	0000 (fixed)		
DM6648*3	0000 to 0031		
DM6649	0000 (fixed)		

- Only transmission speeds available on the GOT side are
- *2 Set the same transmission speed of the RS-232C port as that of the GOT side.
- Set the RS-232C port host link station No. according to the Host Address on the GOT side.



Precautions for changing device values

Before changing the device values, make sure that the switch settings have been changed as follows: CPM2A:


The communication condition switch to "individual" Other PLC CPU:

Front panel DIP switch SW5 to "OFF"

4.2.13 Connecting to CJ1, CJ2, CS1, CP1H, CP1L, or CP1E

Setting DIP switches Set the DIP switches.


(1) Setting on the CJ1, CJ2

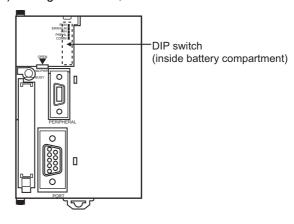




Switch	Description	Settings
SW1	Enable/disable write to user memory (UM)	OFF
SW2	Enable/disable automatic transfer of user program at power ON	OFF
SW3	Free	OFF
SW4	CJ1: Peripheral port communication condition CJ2: Free	OFF
SW5	RS-232C communication condition	OFF
SW6	User customized DIP switch	OFF
SW7	Type specification for simplified backup	OFF
SW8	-	OFF


(2) Setting on the CS1

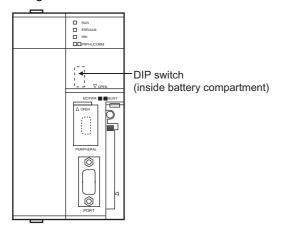


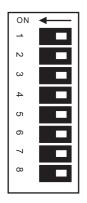

Switch	Description	Settings
SW1	Enable/disable write to user memory (UM)	
SW2	Enable/disable automatic transfer of user program at power ON	OFF
SW3	Programming console message display language (Japanese/English)	OFF
SW4	Peripheral port communication condition	OFF
SW5	RS-232C communication condition	OFF
SW6	User customized DIP switch	OFF
SW7	Type specification for simplified backup	OFF
SW8	-	OFF

(3) Setting on the CP1H, CP1L

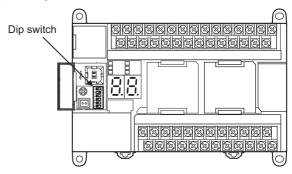

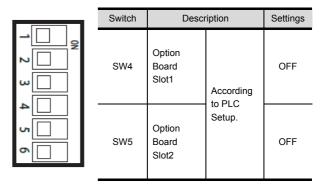

(4) Setting on the CP1E Settings by DIP switch are not required.

Setting PLC system settings

(1) CJ1, CJ2, CS1 Make the PLC system settings.

Channel	Bit	Item	Set value
	15	Arbitrary settings ON/ OFF	1н: Arbitrary settings (fixed)
160	8 to 11	Serial communication mode	0н: Upper link (fixed)
	3	Data bit	0н: 7bits (fixed)
	2	Stop bit	0н: 2bits (fixed)
	0 to 1	Parity	0н: Even (fixed)
161	0 to 7	Port transmission speed*1*2	00н: 9600bps 05н: 4800bps 06н: 9600bps 07н: 19200bps 08н: 38400bps 09н: 57600bps 0Ан: 115200bps
163	0 to 7	Host link station No.*3	0н to 1Fн : No.00 to 31

- *1 Only transmission speeds available on the GOT side are shown.
- *2 Set the same port transmission speed as that of the GOT side.
- *3 Set the host link station No. according to the Host Address on the GOT side.



Precautions for changing the PLC system settings Before changing the PLC system settings, make sure that the switch settings have been changed as follows: CJ1, CJ2, CS1: Front panel DIP switch SW5 to "OFF"

(2) CP1H, CP1L, CP1E Set the PLC system settings of the option slot connected to the GOT.

Item	Set value	
Mode	Host link	
Parameter	7, 2, E	
Baud rate*1*2	4800bps,9600bps,19200bps, 38400bps,57600bps,115200bps	
Unit number*3	00 to 31	

- Only transmission speeds available on the GOT side are shown.
- *2 Set the same port transmission speed as that of the GOT
- *3 Set the host link station No. according to the Host Address on the GOT side.




Precautions for changing the PLC system settings Before changing the PLC system settings, check the setting of the front DIP switch corresponding to the option slot used at the time of communication with GOT.

(3)Setting on the CP1H, CP1L

4.2.14 Connecting to CV500/CV1000/ CV2000 or CVM1

Setting DIP switches

Set the DIP switches.

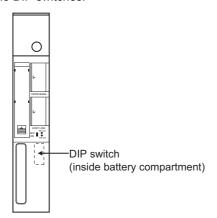

(1) Host link RS-422/232 switch

RS-232
U
RS-422

Settings	
For RS-232 For RS-422 communication communication	
RS-232 (up)	RS-422 (down)

(2) DIP switches



Switch	Settings	
No.	For RS-232 communication	For RS-422 communication
6	OFF (no terminating resistor)	ON (terminating resistor attached)
5	OFF	
4	OFF	
3	OFF	
2	OFF	
1	OI	F

Setting PLC system settings

Make the PLC system settings.

Item	Set value	
Transmission speed*1*2	4800bps/9600bps/19200bps	
Stop bit	2 stop bits (fixed)	
Parity	Even (fixed)	
Data bit	7bits (fixed)	
Unit number*3	00 to 31	

- *1 Only transmission speeds available on the GOT side are shown.
- *2 Set the same transmission speed of the GOT.
- *3 Set the station No. according to the Host Address on the GOT side.

4.2.15 Connecting to connection cable

Device settings

Write the following set values to devices of each PLC CPU and initialize each port using a peripheral tool or DM monitor.

Device name	Set value		
DM6650	0001н(fixed)		
DM6651	b15 to b8 b7 to b0 2) 1) 1) RS-232C port transmission speed setting*1*2 02H: 4800bps 03H: 9600bps 04H: 19200bps 2) RS-232C port communication frame format 03H (fixed): The settings are: Start bit : 1 bit Data length: 7 bits Stop bit : 2 bits Parity : Even bits		
DM6652	0000 (fixed)		
DM6653*3	0000 to 0031		

- Only transmission speeds available on the GOT side are shown.
- *2 Set the same transmission speed of the peripheral port as that of the GOT side.
- *3 Set the peripheral port host link station No. according to the Host Address on the GOT side.



Precautions for changing device values


Before changing the device values, make sure that the switch settings have been changed as follows:

CPM2A: The communication condition switch to "individual"

CPM2C: The communication port function switch to "OFF"

4.2.16 Connecting to rack type host link unit

Switch setting on C200H-LK201-V1 Set the switches accordingly.

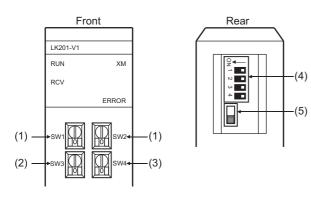

(1) Setting Machine No. (SW1, SW2) Set the Machine No. within the range of 00 to 31. Set the station No. according to the Host Address on the GOT side.

SW1 0 SW2	Rotary switch	Description	Settings
	SW1	Machine No. upper digit (×10 ¹)	0 to 3
	SW2	Machine No. lower digit (×10 ⁰)	0 to 9

(2) Setting transmission speed (SW3)
Set the same transmission speed of the GOT.



Setting*1	Settings
4	4800bps
5	9600bps
6	19200bps

^{*1} Only transmission speeds available on the GOT side are shown.

(3) Setting command level/parity/transmission code (SW4)



		Setting detai		ls	
Setti	Settings	Comman d level	Parity	Transmissi on code	
2 (fixe		Levels 1, 2 and 3 enabled	Even	ASCII 7 bits 2 stop bits	

(4) Setting DIP switches




Switch No.	Set value
1	OFF
2	OFF
3	ON (1:N procedure)
4	OFF (no 5V power supply)

(5) Setting the CTS switch




Settings	
0V	

Switch setting on C200H-LK202-V1 Set the switches accordingly.

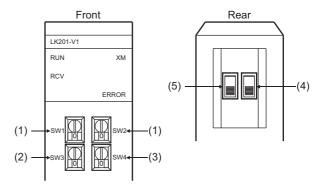

(1) Setting Machine No. (SW1, SW2) Set the Machine No. within the range of 00 to 31. Set the station No. according to the Host Address on the GOT side.

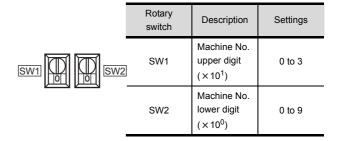

(2) Setting transmission speed (SW3) Set the same transmission speed of the GOT.



Setting*1	Settings	
4	4800bps	
5	9600bps	
6	19200bps	

^{*1} Only transmission speeds available on the GOT side are shown.

(3) Setting command level/parity/transmission code (SW4)



	Setting details		ls	
Settings	Command level	Parity	Transmissi on code	
2 (fixed)	Levels 1, 2 and 3 enabled	Even	ASCII 7 bits 2 stop bits	

(4) Setting the 1:1/1:N procedure switch




Settings	
OFF (1:N procedure)	


(5) Setting the terminating resistor connection switch



Settings	
ON (terminating resistor attached)	

Switch setting on C500-LK201-V1 Set the switches accordingly.

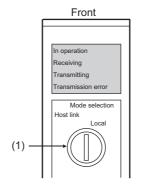

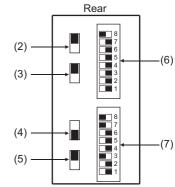

(1) Setting host link/local



Settings
Host link

(2) RS-232C/RS-422 switch

1	1
L	l
	l

Settings	
For RS-232 communication	For RS-422 communication
RS-232 (down)	RS-422 (up)

(3) Internal/external clock switch



Settings	
Internal (up)	

(4) Terminating resistor connection switch



Settings	
Attached (down)	

(5) CTS switch



Set	tings
0V	(up)

(6) Setting SW1 (Station No., Run/Stop)



Switch No.	Settings	Description		
8	ON	Run		
7	OFF	-		
6	OFF	=		
5	Set the station No. within the range of 00 to 31.			
4				
3	For details, refer to the following manual.			
2	OMRON PLC user's			
1	Manu	al		

(7) Setting SW2 (Transmission speed, Procedure, Level)



Switch No.	Settings	Description
8	ON	Levels 1, 2
7	ON	and 3 enabled
6	OFF	1:N procedure
5	OFF	-
4	*1	
3		Transmission
2		speed
1		

Only transmission speeds available on the GOT side are shown.

Transmission	Switch No.			
speed	SW1	SW2	SW3	SW4
4800bps	OFF	ON	ON	OFF
9600bps	ON	OFF	ON	OFF
19200bps	OFF	OFF	ON	OFF

4.2.17 Connecting to serial communication unit

Device settings

Write the following set values to devices of each PLC CPU and initialize each port using a peripheral tool or DM monitor.

Device	name	Set value	
Port 1	Port 2		Set value
DM (m)	DM (m+10)	8000H(fixed): The settings are: Port setting: Arbitrary setting Serial communication mode: Host link Start bit: 1bit Data bit: 7bits Stop bit: 2bits Parity: Even	
DM (m+1)	DM (m+11)	b15 to b8 b7 to b0 Он 1) 1) Transmission speed*1*2 ООН: 9600bps ОВН: 38400bps ОБН: 4800bps О9Н: 57600bps О6Н: 9600bps ОАН: 115200b О7Н: 19200bps	
DM (m+2)	DM (m+12)	8000н(fixed)	
DM (m+3) *3	DM (m+13) *3	8000н to 801Fн	

- m = 30000 + (100 \times unit No.) *1 Only transmission speeds available on the GOT side are
- Set the same transmission speed of the GOT.
- Set the host link station No. according to the Host Address on the GOT side.

4.2.18 Connecting to communication board, serial communication board (CQM1-SCB41)

Device settings


Write the following set values to devices of each PLC CPU and initialize each port using a peripheral tool or DM monitor.


Device	name	Set value	
Port B	Port A	Set value	
DM6550	DM6555	0001н(fixed)	
DM6551	DM6556	b15 to b8 b7 to b0 2) 1) 1) Transmission speed*1*2 02H:4800bps 03H:9600bps 04H:19200bps 2) Frame format setting 03H (fixed): The settings are: Start bit :1 bit Data length:7 bits Stop bit :2 bits Parity :Even bits	
DM6552	DM6557	0000 (fixed)	
DM6553 *3	DM6558 *3	0000 to 0031	

- *1 Only transmission speeds available on the GOT side are shown.
- *2 Set the same transmission speed as that of the GOT side.
- *3 Set the host link station No. according to the Host Address on the GOT side.

■ Setting DIP switches (C200HW-COM3 and C200HW-COM6 only)

Set the DIP switches when performing the RS-422 communications on the C200HW-COM3 and C200HW-COM6.

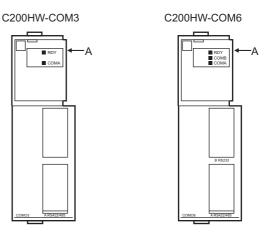

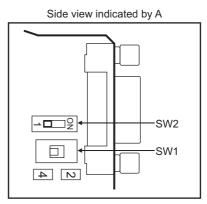

DIP switch		Set value	
No.	Item	Set value	
SW1	RS-422/485 cable (2-wire/4-wire type) switching	4 (4-wire type)	
SW2	Terminator ON/OFF	1 (no terminating resistor attached)	

4.2.19 Connecting to serial communication board (CS1W-SCB21(-V1), CS1W-SCB41(-V1))

Device settings

Write the following set values to devices of each PLC CPU and initialize each port using a peripheral tool or DM monitor.


Device name		Set value	
Port 1	Port 2	Set value	
D32000	D32010	8000H(fixed): The settings are: Port setting: Arbitrary setting Serial communication mode: Host link Start bit: 1bit Data bit: 7bits Stop bit: 2bits Parity: Even	
D32001	D32011	b15 to b8 b7 to b0 OH 1) 1) Transmission speed 12 00H: 9600bps 08H: 38400bps 05H: 4800bps 09H: 57600bps 06H: 9600bps 0AH: 115200bps 07H: 19200bps	
D32002	D32012	8000н(fixed)	
D32003 *3	D32013 *3	0000н to 0001Fн	

^{*1} Only transmission speeds available on the GOT side are shown.

*2 Set the same transmission speed of the GOT.

Setting the DIP switches (CS1W-SCB41(-V1) only)

Set the DIP switches when performing the RS-422 communications on the CS1W-SCB41(-V1).

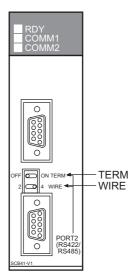

DIP switch		Set value
Name	Description	Set value
WIRE	Setting(2-wire/4-wire) Switch	4 (4-wire type)
TERM	Terminator ON/OFF switch	OFF (no terminating resistor)



Precautions for changing the DM area


Before changing the DM area, make sure that the switch setting has been changed as follows.

CS1: Front panel DIP switch SW5 to "OFF"

^{*3} Set the host link station No. according to the Host Address on the GOT side.

4.2.20 Connecting to RS-422A/485 Option board

■ Setting DIP switches Set the DIP switches.

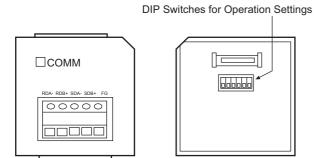


Switch No.	Settings	Description	
1	ON	Enable	Terminating resistance selection
2	OFF	4-wire type	2-wire or 4- wire selection
3	OFF	4-wire type	2-wire or 4- wire selection
5	ON	RS control enabled	RS control selection for RD
6	ON	RS control enabled	RS control selection for SD



4.2.21 Connecting to RS-422A converter

■ Setting DIP switches

Set the DIP switches.

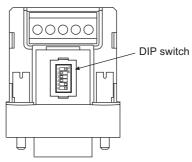




Switch No.	Settings	Description		
1	ON	Enable	Terminating resistance selection	
2	OFF	4-wire type	2-wire or 4- wire selection	
3	OFF	4-wire type	2-wire or 4- wire selection	
5	ON	RS control enabled	RS control selection for RD	
6	ON	RS control enabled	RS control selection for SD	

4.3 Ethernet Connection

4.3.1 System configuration

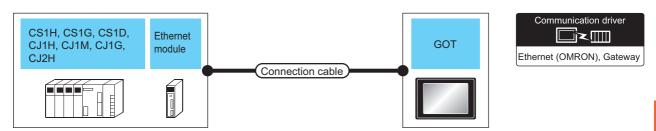

F	PLC	Connection cable		GOT		Number of connectable	
Series	Ethernet module ^{*3}	Cable model	Maximum segment length*2	Option device	Model	Number of connectable equipment	
CS1H CS1G CS1D	CS1W- ETN21 CS1W-EIP21 CS1D-					Miles Di O COTTI NI 4	
CS1D CJ1H CJ1M CJ1G	ETN21D CJ1W- ETN21 CS1W-EIP21	Twisted pair cable*1 • 10BASE-T Shielded twisted pair cable (STP) or unshielded twisted pair cable (UTP): Category 3, 4, and 5 • 100BASE-TX Shielded twisted pair cable (STP): Category 5 and 5e			ет ет 27 25	When PLC:GOT is N:1 The following shows the number of PLCs for 1 GOT TCP: 128 or less UDP: 128 or less	
CJ2H- CPU6□- EIP CJ2M- CPU3□	CJ1W- ETN21 CS1W-EIP21		100m	- (Built into GOT)	GT 27 27 144R 23 GT 144R GT 145R GT 145R GS	When PLC:GOT is 1:N The following shows the number of GOTs for 1 PLC TCP: 16 or less*4	
CJ2H- CPU6□- CJ2M- CPU1□	CJ1W- ETN21 CS1W-EIP21					UDP: No limit number*5	

- The destination connected with the twisted pair cable varies with the configuration of the applicable Ethernet network system. Connect to the Ethernet module, hub, transceiver or other system equipment corresponding to the applicable Ethernet network system.
- *2 A length between a hub and a node.

The maximum distance differs depending on the Ethernet device to be used.

The following shows the number of the connectable nodes when a repeater hub is used.

- 10BASE-T: Max. 4 nodes for a cascade connection (500m)
- 100BASE-TX: Max. 2 nodes for a cascade connection (205m)

When switching hubs are used, the cascade connection between the switching hubs has no logical limit for the number of cascades

- For the limit, contact the switching hub manufacturer.
- *3 Product manufactured by OMRON Corporation. For details of the product, contact OMRON Corporation.
- *4 If it is connected to devices other than the GOT using the connection, the number of connectable GOTs decreases. For details, refer to the OMRON PLC user's manual.
- *5 There is no restriction for the number of GOTs. However, if the number of GOTs increases, the communication becomes high-loaded, and it may affect the communication performance.

4.3.2 GOT side settings

 Setting communication interface (Communication settings)
 Set the channel of the connected equipment.

Controller Setting

Controller Setting
Controller Setting
Controller Setting
Controller Setting
Controller Setting
Controller Setting
Controller Stripe
Controller SynAc
Controller Type:
Controller Type:
Controller Type:
Controller Type:
Controller Type:
Controller Type:
Controller Setting
Controller Type:
Controller Type:
Controller Setting
Controller Type:
Controller Type:
Controller Type:
Controller Setting

- Select [Common] → [Controller Setting] from the menu.
- The Controller Setting window is displayed. Select the channel to be used from the list menu.
- Set the following items.
 - · Manufacturer: OMRON
 - Controller Type: OMRON SYSMAC
 - I/F: Standard I/F (Ethernet): multi-channel connection
 - Driver: Ethernet (OMRON), Gateway
- The detailed setting is displayed after Manufacturer, Controller Type, I/F, and Driver are set. Make the settings according to the usage environment.
 - 4.3.2 Communication detail settings

Click the [OK] button when settings are completed.



The settings of connecting equipment can be confirmed in [I/F Communication Setting]. For details, refer to the following.

1.1.2 I/F communication setting

Communication detail settings

Make the settings according to the usage environment.

Property	Value	
GOT Net No.	1	
GOT Station	1	
GOT Standard Ethernet Setting	192.168.3.18	
GOT Communication Port No.	5001	
Retry(Times)	3	
Startup Time(Sec)	3	
Timeout Time(Sec)	3	
Delay Time(ms)	0	

Item	Description	Range
GOT Net No.	Set the network No. of the GOT. (Default: 1)	1 to 127
GOT Station*2	Set the station No. of the GOT. (Default: 1)	1 to 254
GOT Standard Ethernet Setting	Set the GOT IP address, subnet mask, default gateway, peripheral S/W communication port No., transparent port No.	GOT Standard Ethernet Setting
GOT Communication Port No.*1	Set the GOT port No. for the connection with the Ethernet module. (Default: 5018)	1024 to 5010, 5014 to 65534 (Except for 5011, 5012, 5013 and 49153)
Retry	Set the number of retries to be performed when a communication timeout occurs. When receiving no response after retries, the communication times out. (Default: 3times)	0 to 5times
Startup Time	Specify the time period from the GOT startup until GOT starts the communication with the PLC CPU. (Default: 3sec)	3 to 255sec
Timeout Time	Set the time period for a communication to time out. (Default: 3sec)	1 to 90sec
Delay Time	Set the delay time for reducing the load of the network/ destination PLC. (Default: 0ms)	0 to 10000 (×10ms)


By setting of the OMRON PLC, set the same [GOT Communication Port No.] setting as that of [FINS UDP Port] of CX-Programmer.

■ Ethernet setting

^{*2} Each of [GOT Station] set in the communication detail setting and [Station] set in the Ethernet setting must be set to different station numbers.

GOT Standard Ethernet Setting


Make the settings according to the usage environment.

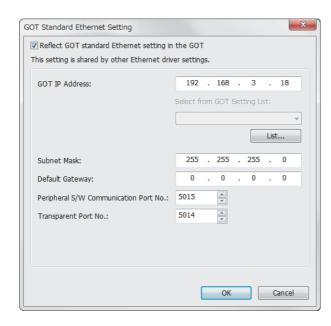

Item	Description	Range
GOT IP Address	Set the IP address of the GOT. (Default: 192.168.3.18)	0.0.0.0 to 255.255.255. 255
Subnet Mask	Set the subnet mask for the sub network. (Only for connection via router) If the sub network is not used, the default value is set. (Default: 255.255.255.0)	0.0.0.0 to 255.255.255. 255
Default Gateway	Set the router address of the default gateway where the GOT is connected. (Only for connection via router) (Default: 0.0.0.0)	0.0.0.0 to 255.255.255. 255
Peripheral S/W Communication Port No.	Set the GOT port No. for the S/W communication. (Default: 5015)	1024 to 5010, 5014 to 65534 (Except for 5011, 5012, 5013 and 49153)
Transparent Port No.	Set the GOT port No. for the transparent function. (Default: 5014)	1024 to 65534 (Except for 5011 to 5013 and 49153 to 49170)

^{*1} By setting of the OMRON PLC, set the same [GOT Communication Port No.] setting as that of [FINS UDP Port] of CX-Programmer.

Ethernet setting

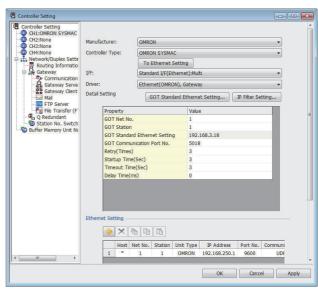

Item	Description	Set value
Host	The host is displayed. (The host is indicated with an asterisk (*).)	-
N/W No.	Set the network No. of the connected Ethernet module. (Default: blank)	1 to 127
Station*1	Set the station No. of the connected Ethernet module. (Default: blank)	1 to 254
Туре	OMRON (fixed)	OMRON (fixed)
IP Address	Set the IP address of the connected Ethernet module. (Default: blank)	PLC side IP address
Port No.	Set the port No. of the connected Ethernet module. (Default: 9600)	256 to 65534
Communication format	Select a communication protocol. (Default: UDP)	UDP, TCP

*1 Each of [GOT Station] set in the communication detail setting and [Station] set in the Ethernet setting must be set to different station numbers.





(1) Communication interface setting by the Utility
The communication interface setting can be
changed on the Utility's [Communication setting]
after writing [Communication Settings] of project
data.

For details on the Utility, refer to the following manual.

GOT2000 Series User's Manual (Utility)

(2) Precedence in communication settings
When settings are made by GT Designer3 or the
Utility, the latest setting is effective.

■ IP Filter Setting



For details on the IP Filter Setting, refer to the following manual.

GT Designer3 (GOT2000) Screen Design Manual



OMRON PLC

For the communication between OMRON PLC and GOT, use the FINS communication.

For the FINS communication, the node must be specified according to the realm of FINS. However, for the Ethernet network, the data transfer according to the IP address is required.

- Automatic conversion method (dynamic)
- · Automatic conversion method (static)
- · IP address table conversion method
- · Combined method

The following four methods are available for converting the FINS node address to the IP address.

For details of OMRON PLCs, refer to the following manual.

MRON PLC user's Manual

Communication settings

For the PLC communication setting, set with a software for programming apparatus (CX-Programmer Ver.3.20 or later).

(1) CX-Programmer setting

		Setting range				
Item		Automatic conversion method (dynamic)*4 Automatic conversion method (static)*4*5		IP address table method*4*6	Combined method*4*6	
	Global	All 1 (Default)	All 1 (Default)	All 1 (Default)	All 1 (Default)	
	IP address*1	[192]. [168]. [0]. [1] ^{*3}	[192]. [168]. [0]. [1] ^{*3}	[192]. [168]. [0]. [1]	[192]. [168]. [0]. [1]	
	Subnet Mask	[255]. [255]. [255]. [0]	[255]. [255]. [255]. [0]	[255]. [255]. [255]. [0]	[255]. [255]. [255]. [0]	
Ethernet module CPU highly- functional module	FINS UDP port*1	9600	9600	9600	9600	
	IP address conversion	Automatic conversion method (dynamic)	Automatic conversion method (static)	IP address table method	Combined method	
	IP address table	-	-	10 [192]. [168]. [0]. [1] 11 [192]. [168]. [0]. [18]	10 [192]. [168]. [0]. [1]	
	Transmission speed	Automatic detection (Default)	Automatic detection (Default)	Automatic detection (Default)	Automatic detection (Default)	
	Node IP Address dynamically change*2	Change dynamically (Default)	Change dynamically (Default)	Change dynamically (Default)	Change dynamically (Default)	

- *1 Set the same [IP address] and [FINS UDP Port] settings as that of [IP address] and [Port No.] of the GT Designer3 Ethernet setting
- *2 The Node IP Address dynamically change function is available only when the Ethernet module to be used is Ver.1.3 or later. For the setting, set in the module setting of CX-ProgrammerVer.5.0 or later or in the WEB function. For details of Node IP Address dynamically change, refer to the following manual.

OMRON PLC user's Manual

- *3 Set the same lowermost bit of the [IP address] setting as that of the node setting switch of the module.
- *4 Set the same [GOT Port No. (Communication)] In Communication detail settings as that of [Port No.] of the Ethernet setting.
- *5 Set the same lowermost bit of the [GOT IP address] in Communication detail settings as that of [GOT PLC No.].
- *6 Set the same lowermost bit of the [GOT IP address] and [GOT PLC No.] in Communication detail settings of GT Designer3 as that of [IP address table].

4.3.4 Precautions

■ When connecting to multiple GOTs

(1) Setting PLC No.

When connecting two or more GOTs in the Ethernet network, set each [PLC No.] to the GOT.

3 4.3.2 ■ Ethernet setting

(2) Setting IP address

Do not use the IP address "192.168.0.18" when using multiple GOTs with the GOT 1000 series mixed. A communication error may occur on the GOT with the IP address.

■ When setting IP address

Do not use "0" and "255" at the end of an IP address. (Numbers of *.*.*.0 and *.*.*.255 are used by the system.)

The GOT may not monitor the controller correctly with the above numbers.

Consult with the administrator of the network before setting an IP address to the GOT and controller.

■ When connecting to the multiple network equipment (including GOT) in a segment

By increasing the network load, the transmission speed between the GOT and PLC may be reduced.

The following actions may improve the communication performance.

- · Using a switching hub
- More high speed by 100BASE-TX (100Mbps)
- Reduction of the monitoring points on GOT

4.4 Device Range that Can Be Set

The device ranges of controller that can be used for GOT are as follows.


Note that the device ranges in the following tables are the maximum values that can be set in GT Designer3.

The device specifications of controllers may differ depending on the models, even though belonging to the same series

Please make the setting according to the specifications of the controller actually used.

When a non-existent device or a device number outside the range is set, other objects with correct device settings may not be monitored.

Setting item

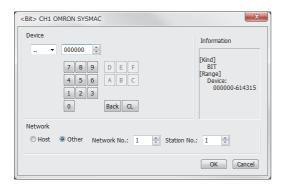

Item	Description	
Device	Set the device name, device number, and bit number. The bit number can be set only when specifying the bit of word device.	
Information	Displays the device type and setting range which are selected in [Device].	

4.4.1 OMRON PLC

	Device name	Setting range	Device No. representation	
	I/O relay/internal auxiliary relay ()	000000 to614315		
	Data link relay (LR)	LR00000 to LR19915]	
	Auxiliary memory relay (AR)	AR000000 to AR147115 AR1000000 to AR1153515	Decimal + Hexadecimal	
	Holding relay (HR)	HR00000 to HR51115	Tiexadecimai	
	Internal auxiliary relay/Work relay (WR)	WR00000 to WR51115		
vice	Timer contact (TIM)	TIM0000 to TIM4095		
Bit device	Counter contact (CNT)	CNT0000 to CNT4095	Decimal	
	The bit specification of the word device*1*4 (except data link relay, auxiliary memory relay, holding relay and internal auxiliary relay.)	Setting range of each word device	-	
	I/O relay/internal auxiliary relay ()	0000 to6143		
	Data link relay (LR)	LR000 to LR199		
	Auxiliary memory	AR0000 to AR1471	7	
	relay (AR)	AR10000 to AR11535		
	Holding relay (HR)	HR000 to HR511	1	
æ	Internal auxiliary relay/Work relay (WR)	WR000 to WR511		
levic	Data memory (DM)	DM00000 to DM32767	B. Maria	
Word device	Timer (current value) (TIM)*3*5	TIM0000 to TIM4095	Decimal	
	Counter (current value) (CNT)*3*5	CNT0000 to CNT4095		
	Extension data memory (EM current bank)*2	EM00000 to EM32767		
	Extension data memory (E0 to EC:	E000000 to E032767		
	13banks)*2	E1800000 to E1832767		

- When executing the touch switch function set during the bit specification of the word device, do not write any data to the word device through the sequence program.
- Writing or reading the extension data memory using multiple banks is not allowed.
- *3 Timer (current value) and counter (current value) are valid within the range of 0 to 9999.

 (This applies to the 16 bit/32 bit device data.)
- This is not supported by GT10.
- 5 "Timer (current value)" and "Counter (current value)" are handled as BCD values by the PLC. If the connection form between the PLC and the GOT is serial, however, they are handled as unsigned binary 16-bit data by the GOT. Set the data type of "Monitor object" in the GOT to "Unsigned BIN16".



CONNECTION TO OMRON TEMPERATURE CONTROLLER

5.1	Connectable Model List	. 5 - 2
5.2	System Configuration	. 5 - 3
5.3	Connection Diagram	. 5 - 8
5.4	GOT Side Settings	5 - 14
5.5	Temperature Controller Side Setting	5 - 16
5.6	Device Range that Can Be Set	5 - 18
5 7	Precautions	5 - 19

5. CONNECTION TO OMRON TEMPERATURE CONTROLLER

5.1 Connectable Model List


The following table shows the connectable models.

Series	Model name	Communication Type	Connectable GOT	Refer to
THERMAC NEO	E5AN E5EN E5CN E5GN	RS-232 RS-422	ет е	5.2.1
INPANEL NEO	E5ZN	RS-232 RS-422	от о	□ 5.2.2

5.2 System Configuration

5.2.1 Connecting to the THERMAC NEO series

■ When connecting to one temperature controller

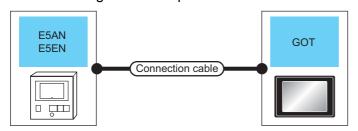




Temperature contr	Temperature controller		Connection cable		GOT	
Model name	Commun ication Type	Cable model Connection diagram number	Max. distance	Option device	Model	Number of connectable equipment
				- (Built into GOT)	et et 25 25 GS	
E5AN	RS-232	User RS-232 connection diagram 1)	15m	GT15-RS2-9P	er er 27 25	1 temperature controller for 1
E5EN	I RS-232	32		GT10-C02H-6PT9P* ¹	GT pape 21 oate 21 oate R4 R2	бот
		(User) RS-232 connection diagram 3)	15m	- (Built into GOT)	GT_04R GT_03P 21 2103P R2	

^{*1} When a GT10-C02H-6PT9P unit of the sub version A or B is used, do not ground the case of the D-sub (9-pin) connector.

■ When connecting to multiple temperature controllers (via an interface converter)

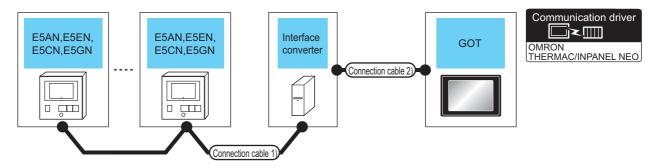


Temperature controller	Connection cable	: 1)	Interface converter*1		Connection cable 2)		GOT		Number of
Model name	Cable model Connection diagram number	Max. distance	Model name	Commu nication Type	Cable model Connection diagram number	Max. distance	Option device	Model	connectable equipment
							- (Built into GOT)	27 25 GS	
E5AN E5EN E5CN conr E5GN	User RS-485 connection diagram 1)	300111	K3SC-10 R:	RS-232	User RS-232 connection diagram 2)	15m	GT15-RS2-9P	ет ет 27 25	32 temperature
							GT10-C02H- 6PT9P*2	GT03P 2104P R4 R4	GOT
					(Jae) RS-232 connection diagram 4)	15m	- (Built into GOT)	GT 04R 2104P R2	

^{*1} The interface converter is a product manufactured by OMRON Corporation. For details on the product, contact OMRON Corporation.

^{*2} When a GT10-C02H-6PT9P unit of the sub version A or B is used, do not ground the case of the D-sub (9-pin) connector.

■ When connecting to multiple temperature controllers

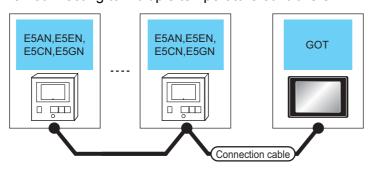




Temperatur	e controller	Connection cable		GOT			
Model name	Communication Type	Cable model Connection diagram number	Max. distance	Option device	Model	Number of connectable equipment	
			(User) (Pepping) RS-485 connection diagram 2)	500m	FA-LTBGT2R4CBL05 (0.5m) FA-LTBGT2R4CBL10 (1m) FA-LTBGT2R4CBL20 (2m)	er er 27 25 er 23	
		(User) (meeting) RS-485 connection diagram 3)	500m	GT15-RS4-TE	ет ет 27 25		
E5AN E5EN E5CN E5GN	RS-485	RS-485 User RS-485 connection diagram 4)		- (Built into GOT)	27 25 GT 23	31 temperature controllers for 1 GOT	
	,		500m	GT10-C02H-9SC	GT.04R GT.03P 2104P R4		
		(User) RS-485 connection diagram 5)		- (Built into GOT)	GT04R GT03P 2104P ET/R4 GT03P 2104P R4		

5.2.2 Connecting to the INPANEL NEO

■ When connecting to multiple temperature controllers (via interface converter)

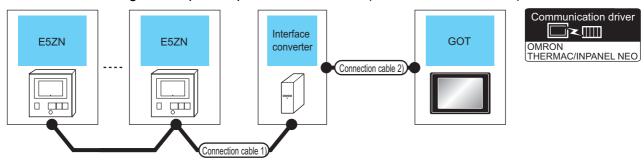


Temperature controller	Connection cable	1)	Interface converter*1		Connection cable 2)		GOT		Number of	
Model name	Cable model Connection diagram number	Max. distance	Model name	Commu nication Type	Cable model Connection diagram number	Max. distance	Option device	Model	connectable equipment	
E5ZN (User) RS-485 connection diagram 1)						- (Built into GOT)	27 25 GS			
	(<u>User)</u> RS-485	300111	n K3SC-10 RS-2	RS-232	User)RS-232 connection diagram 2)	15m	GT15-RS2-9P	ет ет 27 25	16 temperature controllers for 1	
	connection diagram 1)				110-202			GT10-C02H- 6PT09P*2	GT 03P GT 03P 2104P 2104P R4 R2	GOT
					User RS-232 connection diagram 4)	15m	- (Built into GOT)	GT _{04R} GT _{03P} 2104P R2		

^{*1} The interface converter is a product manufactured by OMRON Corporation. For details of the product, contact OMRON Corporation.

^{*2} When a GT10-C02H-6PT9P unit of the sub version A or B is used, do not ground the case of the D-sub (9-pin) connector.

■ When connecting to multiple temperature controllers

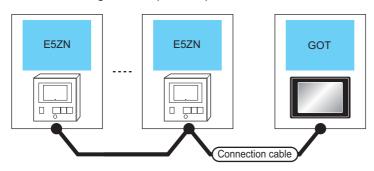



Temperature controller		Connection cable		GOT		
Model name	Communicati on Type	Cable model Connection diagram number	Max. distance	Option device	Model	Number of connectable equipment
	User RS-485 connection diagram 2)	500m	FA-LTBGT2R4CBL05 (0.5m) FA-LTBGT2R4CBL10 (1m) FA-LTBGT2R4CBL20 (2m)	27 25 GT 23		
		User RS-485 connection diagram 3)	500m	GT15-RS4-TE	ет ет 27 25	
E5ZN RS-485	RS-485	(User) RS-485 connection diagram 4)		- (Built into GOT)	27 25 GT 23	15 temperature controllers for 1 GOT
			500m	GT10-C02H-9SC	GT04R 2104P R4	
		User RS-485 connection diagram 5)		- (Built into GOT)	GT 04R 2104P 2104P ET/R4 GT 03P R4	

^{*1} Connect it to the RS-232 interface (built into GOT).


5.3 Connection Diagram

The following diagram shows the connection between the GOT and the PLC.


5.3.1 RS-232 cable

■ Connection diagram


RS-232 connection diagram 1)

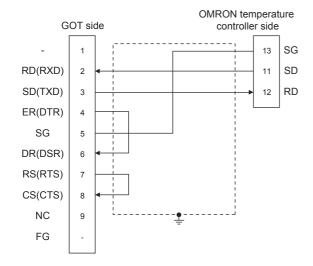


RS-232 connection diagram 2)

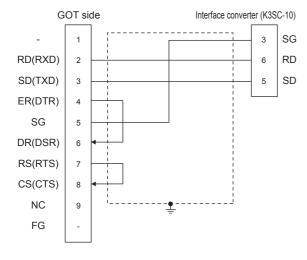

RS-232 connection diagram 3)

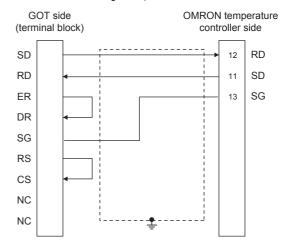

RS-232 connection diagram 4)

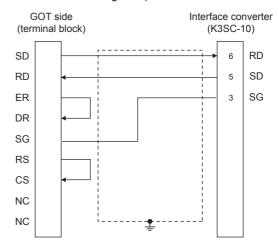


■ Precautions when preparing a cable

- (1) Cable length
 The length of the RS-232 cable must be 15m or less
- (2) GOT side connectorFor the GOT side connector, refer to the following.1.4.1 GOT connector specifications
- (3) OMRON temperature controller side connector Use the connector compatible with the OMRON temperature controller. For details, refer to the user's manual of the OMRON temperature controller.

5.3.2 RS-485 cable

■ Connection diagram


(1) RS-485 connection diagram 1)

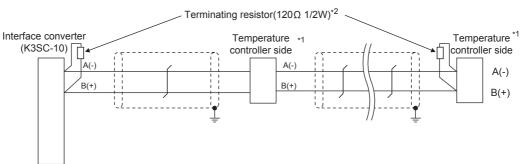

- Pin No. of temperature controller differs depending on the model.Refer to the following.
- *2 Terminating resistor should be provided for a temperature controller and an interface converter which will be terminating resistors.

	Model	Interface			
Signal name	E5AN E5EN E5GN E5CN		E5ZN	converter (K3SC-10)	
	Pin No.	Pin No.	Pin No.	Pin No.	
A(-)	12	6	24	8	
B(+)	11	5	23	11	

(2) RS-485 connection diagram 2)

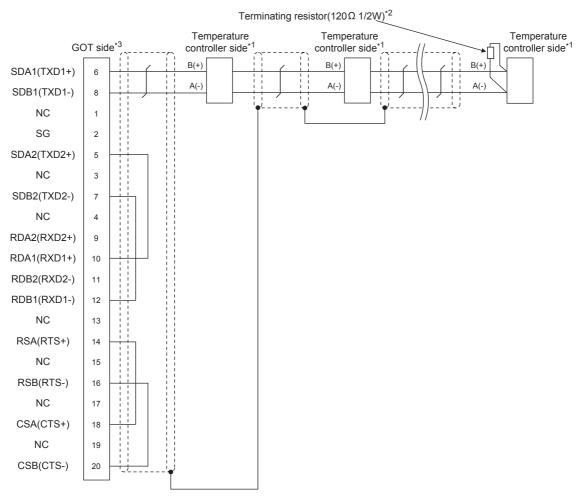


- *1 Pin No. of temperature controller differs depending on the model.Refer to the following.
- *2 Terminating resistor should be provided for a temperature controller and an interface converter which will be terminating resistors.
- *3 Set the terminating resistor of GOT side, which will be a terminal, to "Enable".

1.4.3 Terminating resistors of GOT

	Model of temperature controller				
Signal name	E5AN E5EN E5CN	E5GN	E5ZN		
	Pin No.	Pin No.	Pin No.		
A(-)	12	6	24		
B(+)	11	5	23		

(3) RS-485 connection diagram 3)

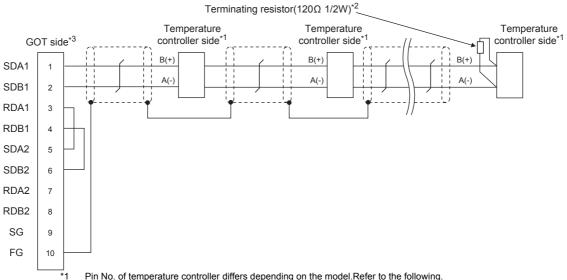


- Pin No. of temperature controller differs depending on the model.Refer to the following.
- *2 Terminating resistor should be provided for a temperature controller and an interface converter which will be terminating resistors.
- Set the terminating resistor of GOT side, which will be a terminal, to "Enable".

1.4.3 Terminating resistors of GOT

	Model of temperature controller				
Signal name	E5AN E5EN E5CN	E5GN	E5ZN		
	Pin No.	Pin No.	Pin No.		
A(-)	12	6	24		
B(+)	11	5	23		

(4) RS-485 connection diagram 4)

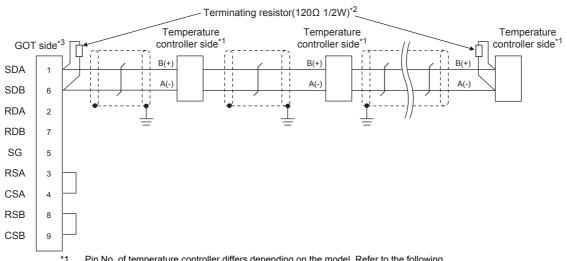


- Pin No. of temperature controller differs depending on the model. Refer to the following.
- *2 Terminating resistor should be provided for a temperature controller and an interface converter which will be terminating resistors.
- Set the terminating resistor of GOT side, which will be a terminal, to " 110Ω ".

1.4.3 Terminating resistors of GOT

Model of temperature controller				
E5AN E5EN E5CN	E5GN	E5ZN		
Pin No.	Pin No.	Pin No.		
12	6	24		
11	5	23		
	E5AN E5EN E5CN Pin No.	E5AN E5EN E5GN E5CN Pin No. Pin No.		

(5) RS-485 connection diagram 5)

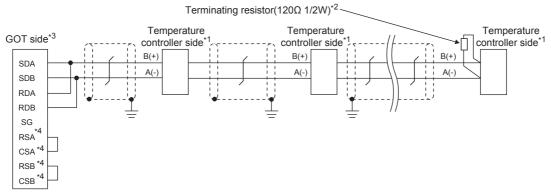

- *1 Pin No. of temperature controller differs depending on the model. Refer to the following.
- *2 Terminating resistor should be provided for a temperature controller and an interface converter which will be terminating resistors.
- *3 Set the terminating resistor of GOT side, which will be a terminal, to " 110Ω ".

1.4.3 Terminating resistors of GOT

	Model of temperature controller				
Signal name	E5AN E5EN E5CN	E5GN	E5ZN		
	Pin No.	Pin No.	Pin No.		
A(-)	12	6	24		
B(+)	11	5	23		

*4 The signals RSA, RSB, CSA, and CSB are not provided for Return connection is not required.

Precautions when preparing a cable

(1) Cable length

The length of the RS-485 cable must be 500m or less.

(2) GOT side connector

For the GOT side connector, refer to the following.

1.4.1 GOT connector specifications

(3) OMRON temperature controller side connector Use the connector compatible with the OMRON temperature controller.

For details, refer to the user's manual of the OMRON temperature controller.

Setting terminating resistors

(1) GOT side

Set the terminating resistor setting switch of the GOT main unit to "100 OHM".

For details of terminating resistor settings, refer to the following.

1.4.3 Terminating resistors of GOT

(2) OMRON temperature controller side


When connecting a OMRON temperature controller to the GOT, the terminating resistor must be connected to the OMRON temperature controller.

User's Manual of the OMRON temperature controller

5.4 GOT Side Settings

5.4.1 Setting communication interface (Communication settings)

Set the channel of the equipment to be connected to the GOT.

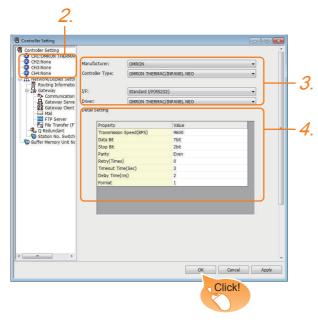

- Select [Common] → [Controller Setting] from the menu.
- The Controller Setting window is displayed. Select the channel to be used from the list menu.
- Set the following items.
 - · Manufacturer: OMRON
 - Controller Type: OMRON THERMAC/INPANEL NEO
 - · I/F: Interface to be used
 - Driver: OMRON THERMAC/INPANEL NEO
- 4. The detailed setting is displayed after Manufacturer, Controller Type, I/F, and Driver are set. Make the settings according to the usage environment.

5.4.2 Communication detail settings Click the [OK] button when settings are completed.



The settings of connecting equipment can be confirmed in [I/F Communication Setting]. For details, refer to the following.

1.1.2 I/F communication setting

5.4.2 Communication detail settings

Make the settings according to the usage environment.

Property	Value
Transmission Speed(BPS)	9600
Data Bit	7 bit
Stop Bit	2 bit
Parity	Even
Retry(Times)	0
Timeout Time(Sec)	3
Delay Time(ms)	2
Format	1

Item	Description	Range
Transmission Speed	Set this item when change the transmission speed used for communication with the connected equipment. (Default: 9600bps)	9600bps, 19200bps, 38400bps, 57600bps, 115200bps
Data Bit	Set this item when change the data length used for communication with the connected equipment. (Default: 7bits)	7bits/8bits
Stop Bit	Specify the stop bit length for communications. (Default: 2bits)	1bit/2bits
Parity	Specify whether or not to perform a parity check, and how it is performed during communication. (Default: Even)	None Even Odd
Retry	Set the number of retries to be performed when a communication error occurs. (Default: 0time)	0 to 5times
Timeout Time	Set the time period for a communication to time out. (Default: 3sec)	3 to 30sec
Delay Time	Set this item to adjust the transmission timing of the communication request from the GOT. (Default: 2ms)	0 to 300 (ms)
Format	Select the communication format. (Default: 1) format 1: only continuous access format 2: continuous and random access	1/2



- (1) Delay Time
 - When connecting to the temperature controller E5ZN, set the delay time to 5ms or more.
- (2) Format setting

The compatible format of temperature controller differs depending on models.

Model	Compatible format		
E5AN, E5CN, E5EN, E5GN	Format 1 only		
E5ZN	Format 1 or Format 2		

For the continuous access and random access of the temperature controller, refer to the following manual.

- User's Manual of the OMRON temperature controller
- (3) Communication interface setting by the Utility The communication interface setting can be changed on the Utility's [Communication Settings] after writing [Communication Settings] of project data

For details on the Utility, refer to the following manual.

- GOT2000 Series User's Manual (Utility)
- (4) Precedence in communication settings
 When settings are made by GT Designer3 or the
 Utility, the latest setting is effective.

5.5 Temperature Controller Side Setting



OMRON temperature controller

For details of OMRON temperature controller, refer to the following manual.

User's Manual of the OMRON temperature controller

Model name Refer to					
Mod	Refer to				
Temperature controller	E5AN, E5EN, E5CN, E5GN	5.5.1			
	E5ZN	5.5.2			
Interface converter	K3SC-10	5.5.3			

5.5.1 Connecting E5AN, E5EN, E5CN, E5GN

Set the communication data by operating the key of the temperature controller.

Item	Set value
Protocol	CompoWay/F (Sysway)
Transmission speed*1	9600bps, 19200bps
Data bit*1	8 bits, 7 bits
Parity bit*1	Odd, Even, None
Stop bit*1	1bit, 2bits
Communication unit No.*2	0 to 99
CMWT (Communications writing) *3	ON

- *1 Adjust the settings with GOT settings.
- *2 Select the communication unit No. without overlapping with that of other units.
- *3 When changing the device values of the temperature controller from the GOT, turn ON CMWT (Communications writing) in advance.

5.5.2 Connecting E5ZN

Set the communication data by operating the key of the temperature controller.

Item	Set value
Transmission speed*1	9600bps, 38400bps
Data bit ^{*1}	8 bits, 7 bits
Parity bit*1	Odd, Even, None
Stop bit*1	1bit, 2bits
Communication unit No.*2	0 to 15
CMWT (Communications writing) *3	ON

- *1 Adjust the settings with GOT settings.
- *2 Select the communication unit No. without overlapping with that of other units.
- *3 When changing the device values of the temperature controller from the GOT, turn ON CMWT (Communications writing) in advance.

5.5.3 Connection to interface converter (K3SC-10)


Communication settings

Make the communication settings by operating the DIP switch of the temperature controller.


Item	Set value
Transmission speed*1	19200bps, 38400bps
Data bit ^{*1}	7 bits, 8 bits
Parity bit*1	Odd, Even, None
Stop bit*1	1bit, 2bits
Communication Type	RS-232←→RS485
Echo back*2	With, Without

- *1 Adjust the settings with GOT settings.
- '2 Set to "Without".

■ Settings by DIP switch

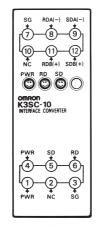




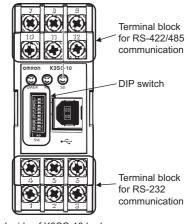


Inside of K3SC-10 body (When removing the front cover)

(1) Transmission speed settings

Transmission	Switch No.			
speed (bps)	1	2	3	
1200	ON	OFF	OFF	
2400	OFF	ON	OFF	
4800	ON	ON	OFF	
9600	OFF	OFF	OFF	
19200	ON	OFF	ON	
38400	OFF	ON	ON	

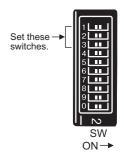

(2) Settings of data length, parity bit, stop bit, master/ slave device and echoback

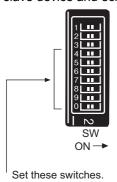


Setting	Set value		Switch No.					
item	Set value	4	5	6	7	8	9	0
Data bit	7bits	OFF						
Data bit	8bits	ON						
Cton hit	2bits		OFF					
Stop bit	1bit		ON					
	Even			OFF	OFF			
Parity	Odd			ON	OFF			
	None			OFF	ON			
Commun	RS232←+RS422					OFF	ON	
ication Type	RS-232←+RS485					OFF	OFF	
Echo	Without							OFF
back	With				•	ON		

5.5.4 Station No. settings

Set each station number so that no station number overlaps.

The station number can be set without regard to the cable connection order. There is no problem even if station numbers are not consecutive.

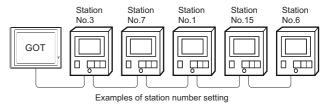

(1) Direct specification

When setting the device, specify the station number of the temperature controller of which data is to be changed.

Model name	Specification range
E5AN, E5EN, E5CN, E5GN	0 to 99
E5ZN	0 to 15

(2) Indirect specification

When setting the device, indirectly specify the station number of the temperature controller of which data is to be changed using the 16-bit GOT internal data register (GD10 to GD25).

When specifying the station No. from 100 to 115 on GT Designer3, the value of GD10 to GD25 compatible to the station No. specification will be the station No. of the temperature controller.

Specification station NO.	Compatible device	Setting range
100	GD10	
101	GD11	
102	GD12	
103	GD13	
104	GD14	
105	GD15	
106	GD16	0 to 99: For E5AN, E5EN, E5CN or E5GN
107	GD17	0 to 15: For E5ZN For the setting other than the above, error
108	GD18	(dedicated device is out of range) will
109	GD19	occur.
110	GD20	
111	GD21	
112	GD22	
113	GD23	
114	GD24	
115	GD25	

(3) All station specification

Target station differs depending on write-in operation or read-out operation.

- For write-in operation, all station will be a target.
- For read-out operation, only one station will be a target.

Device Range that Can Be Set 5.6

The device ranges of controller that can be used for GOT


Note that the device ranges in the following tables are the maximum values that can be set in GT Designer3.

The device specifications of controllers may differ depending on the models, even though belonging to the

Please make the setting according to the specifications of the controller actually used.

When a non-existent device or a device number outside the range is set, other objects with correct device settings may not be monitored.

Setting item

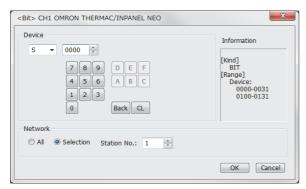

Item	Description				
	Set the	e device name, device number, and bit number.			
Device	The bit number can be set only when specifying the bit of				
	word de	word device.			
Information	Displays	s the device ty	pe and setting range which are		
	selected	in [Device].			
	Set the	monitor target	t of the set device.		
		Select this it	em when writing data to all		
		temperature	connected.		
		During moni	toring, the temperature controller of		
		station No.0	is monitored.		
	All	(When writin	g the data in numerical input, the		
		data is writte	en to all connected temperature		
		controllers d	uring input, and the temperature		
		controller of	station No. 0 is monitored during		
		other than in	iput (displaying).)		
Network		Select this it	em when monitoring the temperature		
		controller of	the specified station No.		
		After selecting	ng, set the station No. in the following		
		range.			
	Station	0 to 99:	To monitor the temperature		
	No		controller of the specified station		
	INO.		No.		
		100 to 115:	To specify the station No. of the		
			temperature controller to be		
			monitored by the value of GOT		
			data register (GD).*1		


The following table shows the relation between station numbers of the PLC and the GOT data register.

Station No.	GOT data register (GD)	Setting range
100	GD10	0 to 99
101	GD11	(If setting a value outside
:	:	the range above, a
114	GD24	device range error
115	GD25	occurs.)




Device settings of OMRON temperature controller

(1) When setting the (S) Make settings for status by a channel number and a bit position.

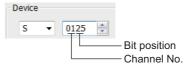

(2) When setting variable area (0), variable area (1) and variable area (2) Make setting for variable areas by a channel number and address.

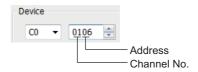

5.6.1 OMRON temperature controller (OMRON THERMAC/INPANEL NEO)

	Device name	Setting range	Device No. representation
Bit device	Status (S)*1	S0000 to S0031 S0100 to S0131	Decimal
Double word device Word device	Operation command (A)*2	A0000 to A000C	Hexadecimal
levice	Variable area 0 (C0)*1*3	C00000 to C00006 C00100 to C00106	
e word o	Variable area 1 (C1)*3	C10000 to C1001C C10100 to C1011C	Decimal + Hexadecimal
Double	Variable area 3 (C3)*3	C30000 to C3003E C30100 to C3013E	

- Only reading is possible.
- Only writing is possible. Numerical input cannot be used. When writing, use [Word Set] of a data set switch. Only 32-bit (2-word) designation is allowed.

5.7 Precautions

Station number setting of the temperature controller system

Make sure to establish temperature controller system with No.1 station.

GOT clock control

Since the temperature controller does not have a clock function, the settings of [time adjusting] or [Broadcast] by GOT clock control will be disabled.

Disconnecting some of multiple connected equipment

The GOT can disconnect some of multiple connected equipment by setting GOT internal device. For example, the faulty station where a communication timeout error occurs can be disconnected from connected equipment.

For details of GOT internal device setting, refer to the following manual.

GT Designer3 (GOT2000) Screen Design Manual



	_
	_
	_

6

CONNECTION TO KEYENCE PLC

6.1	Connectable Model List	. 6 - 2
6.2	Serial Connection	. 6 - 3
6.3	Ethernet Connection	6 - 21
6.4	Device Range that Can Be Set	6 - 25

6. CONNECTION TO KEYENCE PLC


6.1 Connectable Model List

The following table shows the connectable models.

Model name	Clock	Communication Type	Connectable GOT	Refer to	
		RS-232	GT GT GT CS		
		RS-422	27 25 23 21 GS	6.2.1	
KV-5500 KV-5000	0	RS-485	er er er er 27 25 23 21	0.2.1	
		Ethernet	27 et et et 23 et es	6.3.1	
		RS-232	ет е		
		RS-422	27 25 23 21 GS	€ ₹ 6.2.2	
KV-3000	0	RS-485	et et et et 27 25 23 21	6.2.2	
		Ethernet	er er er 25 23 21 GS	6.3.1	
			RS-232	ет е	
		RS-422	27 25 23 21 ^{GS}	6.2.3	
KV-1000	0	RS-485	er er er er 27 25 23 21	6.2.3	
		Ethernet	27 25 23 CT GS	6.3.1	
		RS-232	ет е		
		RS-422	27 25 23 21 ^{GS}	6.2.4	
KV-700	0	RS-485	er er er er 27 25 23 21	0.2.4 €ا	
		Ethernet	er er er er 25 23 21 GS	6.3.1	

6.2 Serial Connection

6.2.1 Connecting to KV-5500, KV-5000

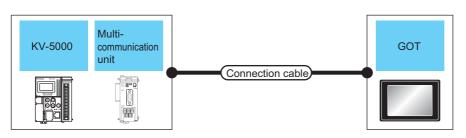



	PLC		Connection cable		GOT		
Model name	Multi- communication unit ^{*1}	Commun ication Type	Cable model Max. Connection diagram number distance		Option device	Model	Number of connectable equipment
KV-5500					- (Built into GOT)	GT 25 GT 25 GS 270000	
	KV-L20V (port 1)	RS-232	GT09-C30R21102-9S(3m) or USEP)RS-232 connection diagram 2)	15m	GT15-RS2-9P	er er 27 25	
		110-232			GT10-C02H- 6PT9P ^{*2}	GT 03P 2104P R4 R2 R2	
			(User) RS-232 connection diagram 5)	15m	- (Built into GOT)	GT ₀ 4R 2104P 2104P R2	1 GOT for 1 multi-
KV-5000	KV-L20V (port 2)	RS-232	GT09-C30R21103-3T(3m) or User RS-232 connection diagram 3)		- (Built into GOT)	GT 27 25 25 21 25 21 25 25 25 25 25 25 25 25 25 25 25 25 25	communication unit
				15m	GT15-RS2-9P	et et 27 25	
					GT10-C02H- 6PT9P ^{*2}	GT _{03P} GT _{03P} 210aP R4 R2 R2	
			(User) (prepring) RS-232 connection diagram 6)	15m	- (Built into GOT)	GT _{04R} GT _{03P} 21 ^{04P} R2	

	PLC		Connection cable		GOT		Northwest	
Model name	Multi- communication unit*1	Commun ication Type	Cable model Connection diagram number	Max. distance	Option device	Model	Number of connectable equipment	
		RS-422 KV-L20V	GT09-C30R41101-5T(3m) GT09-C100R41101-5T(10m) GT09-C200R41101-5T(20m) GT09-C300R41101-5T(30m) or User RS-422 connection diagram 1)			- (Built into GOT)	GT 25 GT 25 GT 21 GS	
				500m	GT15-RS4-9S	ет ет 27 25		
	KV-L20V (port 2)				GT10-C02H-9SC	GT04R 27,03P 21,04P R4		
KV-5500			(User) RS-422 connection diagram 2)	500m	- (Built into GOT)	GT 03P 2104P 2104P ET/R4 GT 03P 2104P R4	1 GOT for 1 multi-	
KV-5000		RS-485	User RS-485 connection diagram 1)		- (Built into GOT)	et et 27 25 et 23 et 23	communication unit	
				500m	GT15-RS4-9S	ет ет 27 25		
					GT10-C02H-9SC	GT _{04R} GT _{03P} 2104P R4		
			User RS-485 connect diagram 2)	User) RS-485 connection diagram 2)	500m	- (Built into GOT)	GT _{0-4R} GT _{0-3P} 2104P ETIR4 GT _{0-3P} 2104P R4	

The multi-communication unit is a product manufactured by KEYENCE CORPORATION.


For details of the product, contact KEYENCE CORPORATION.

When a GT10-C02H-6PT9P unit of the sub version A or B is used, do not ground the case of the D-sub (9-pin) connector.

Connecting to KV-3000

6.2.2

■ When connecting to a PLC

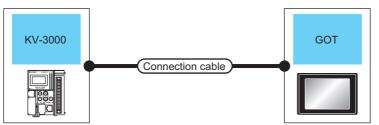




PLC		Connection ca	able		GC	T	NI selection for a second district
Model name	Communic ation Type	Cable model Connection diagram number	Conversion connector*1	Max. distance	Option device	Model	Number of connectable equipment
					- (Built into GOT)	GT 27 25 GT 27 27 27 GS	
		GT09-C30R21101-6P or User)RS-232 connection diagram 1)	-	15m	GT15-RS2-9P	ет ет 27 25	
					GT10-C02H- 6PT9P ^{*2}	GT _p rare 21 0are 21 0are R4 2 2	
KV-3000	RS-232	(User) RS-232 connection diagram 4)	-	15m	- (Built into GOT)	GT OAR 2104P 2104P R2	1 GOT for 1 PLC
					- (Built into GOT)	GS GS GT	
		OP-26487*1	OP-26486	2.5m	GT15-RS2-9P	ет ет 27 25	
					GT10-C02H- 6PT9P* ²	GT 03P GT 03P 2104P 2104P R4 R2	

The cable and conversion connector are products manufactured by KEYENCE CORPORATION. For details of the product, contact KEYENCE CORPORATION.

When a GT10-C02H-6PT9P unit of the sub version A or B is used, do not ground the case of the D-sub (9-pin) connector.

■ When connecting to multi-communication unit

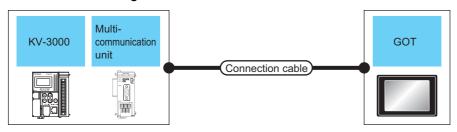



PLC		Connection cable		GOT			
Model name	Multi- communication unit ^{*1}	Commun ication Type	Cable model Connection diagram number	Max. distance	Option device	Model	Number of connectable equipment
					- (Built into GOT)	GT 27 25 21 21 21 21 21 21 21 21 21 21 21 21 21	
	KV-L20V (port 1)		GT09-C30R21102-9S(3m) or USer) RS-232 connection diagram 2)	15m	GT15-RS2-9P	^{ет} 27 25	
		RS-232			GT10-C02H- 6PT9P* ²	GT _{03P} GT _{03P} 2104P R4 R2 R2	
			User) RS-232 connection diagram 5)	15m	- (Built into GOT)	21 ^{04R} 27 _{03P} 21 ^{04P} R ²	1 GOT for 1 multi-
KV-3000		RS-232	GT09-C30R21103-3T(3m) or User)RS-232 connection diagram 3)	15m	- (Built into GOT)	GT 27 25 GT 23 21 21 SGS	communication unit
	KV-L20V				GT15-RS2-9P	ет ет 27 25	
	(port 2)				GT10-C02H- 6PT9P ^{*2}	GT ₀ 3P GT ₀ 3P 2104P 2104P R4 R2	
			User RS-232 connection diagram 6)	15m	- (Built into GOT)	GT _{OAR} GT _{OAP} 21 OAP R2 OAP	

	PLC		Connection cable		GOT		
Model name	Multi- communication unit*1	Commun ication Type	Cable model Connection diagram number	Max. distance	Option device	Model	Number of connectable equipment
			GT09-C30R41101-5T(3m) GT09-C100R41101-5T(10m) GT09-C200R41101-5T(20m) GT09-C300R41101-5T(30m) or User RS-422 connection diagram 1)		- (Built into GOT)	GT 25 GT 25 GT 23 GT 65 GS	
	KV-L20V	RS-422		500m	GT15-RS4-9S	ет ет 27 25	1 GOT for 1 multi-
	(port 2)	(port 2)			GT10-C02H-9SC	GT _{04IR} 21 _{04IP} 21 _{04IP} 21 _{04IP} R4	communication unit
			User RS-422 connection diagram 2)	500m	- (Built into GOT)	GT_04R GT_03P 2104P ETIRA GT_03P 2104P Rd	
IX 0000		RS-485	User RS-485 connection diagram 1)		- (Built into GOT)	27 25 GT 25 GT 27 GS	
	KV-L20V			500m	GT15-RS4-9S	ет ет 27 25	1 GOT for 1 multi-
	(port 2)				GT10-C02H-9SC	GT _{03P} 21 ^{oar} 21 _{0aP} Ru	communication unit
			User RS-485 connection diagram 2)	500m	- (Built into GOT)	GT_OSP 21 OSP 21 OSP ETR4 GT_OSP 24 OSP R4	


The multi-communication unit is a product manufactured by KEYENCE CORPORATION.

For details of the product, contact KEYENCE CORPORATION.

When a GT10-C02H-6PT9P unit of the sub version A or B is used, do not ground the case of the D-sub (9-pin) connector.

6.2.3 Connecting to KV-1000

■ When connecting to PLC

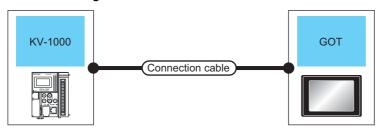




PI	PLC Connection cable			GOT		Number of connectable	
Model name	Communic ation Type	Cable model Connection diagram number	Conversion connector*1	Max. distance	Option device	Model	equipment
					- (Built into GOT)	GT 27 25 GT 23 21°50 GS	
		GT09-C30R21101-6P or User)RS-232 connection diagram 1)	-	15m	GT15-RS2-9P	ет ет 27 25	
					GT10-C02H- 6PT9P*2	GT ₀₃₂ GT ₀₃₂ 20 are 20 are Re Re Ro	
KV-1000	RS-232	(User) RS-232 connection diagram 4)	1	15m	- (Built into GOT)	GT 03P 21 04P 21 04P R2	1 GOT for 1 PLC
					- (Built into GOT)	GT 27 25 GT 23 27 ΘΤ GS	
		OP-26487* ¹	OP-26486	2.5m	GT15-RS2-9P	ет ет 27 25	
					GT10-C02H- 6PT9P* ²	GT 03# GT 03# 2104# 2104# R4 R2 R2	

The cable and conversion connector are products manufactured by KEYENCE CORPORATION. For details of the product, contact KEYENCE CORPORATION.

^{*2} When a GT10-C02H-6PT9P unit of the sub version A or B is used, do not ground the case of the D-sub (9-pin) connector.

■ When connecting to multi-communication unit

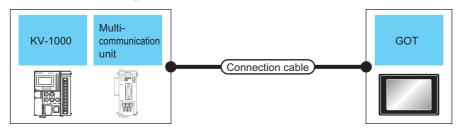



	PLC		Connection cable		GOT	GOT		
Model name	Multi- communication unit ^{*2}	Commun ication Type	Cable model Connection diagram number	Max. distance	Option device	Model	Number of connectable equipment	
KV-L20R, KV-L20V (port 1)						- (Built into GOT)	GT 25 GT 25 GT 23 GT 65 GS	
	· ·	RS-232	GT09-C30R21102-9S(3m) or User)RS-232 connection diagram 2)	15m	GT15-RS2-9P	er er 27 25		
		NO-202			GT10-C02H- 6PT9P*2	GT _{OSP} GT _{OSP} 2104P Z104P R4 R2		
			(User) RS-232 connection diagram 5)	15m	- (Built into GOT)	GT _{04R} GT _{03P} 21 ^{04R} 21 ^{04P} R2	1 GOT for 1 multi-	
KV-1000			GT09-C30R21103-3T(3m) or User RS-232 connection diagram 3)		- (Built into GOT)	GT GT 25 GT 23 GT	communication unit	
	KV-L20R, KV-L20V	RS-232		15m	GT15-RS2-9P	er er 27 25		
	(port 2)	KS-232			GT10-C02H- 6PT9P*2	GT cash 210-sh 210-sh R4 R2 R2		
			(User) RS-232 connection diagram 6)	15m	- (Built into GOT)	GT_04R 21 ^{04R} 21 ^{04P} R2 ^{04P}		

PLC			Connection cable		GOT		N
Model name	Multi- communication unit*2	Commun ication Type	Cable model Connection diagram number	Max. distance	Option device	Model	Number of connectable equipment
			GT09-C30R41101-5T(3m)		- (Built into GOT)	GT 25 GT 25 GS 27 GS	
	RS-422	GT09-C100R41101-5T(10m) GT09-C200R41101-5T(20m) GT09-C300R41101-5T(30m) or User RS-422 connection diagram	500m	GT15-RS4-9S	ет ет 27 25		
		110-422	1)		GT10-C02H-9SC	GT03P 2104R 2104P R4	
KV-1000	KV-L20R, KV-L20V		(User) RS-422 connection diagram 2)	500m	- (Built into GOT)	GT 034P 2104P 2104P ET/R4 GT 034P 2104P R4	1 GOT for 1 multi-
KV 1000	(port 2)	RS-485	User RS-485 connection diagram 1)		- (Built into GOT)	GS GT GT 25 GT 23 GT GS	communication unit
				500m	GT15-RS4-9S	et et 27 25	
					GT10-C02H-9SC	GT 04P 21 04P R 0 04P	
			(User) RS-485 connection diagram 2)	500m	- (Built into GOT)	GT 04R 27 04P 27 04P EVR4 GT 03P 2104P R4	


The multi-communication unit is a product manufactured by KEYENCE CORPORATION.

For details of the product, contact KEYENCE CORPORATION.

When a GT10-C02H-6PT9P unit of the sub version A or B is used, do not ground the case of the D-sub (9-pin) connector.

6.2.4 Connecting to KV-700

■ When connecting to PLC

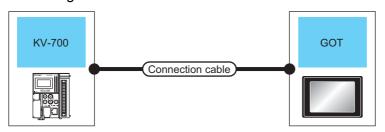




Pl	LC	Connection ca	able		GC	T	Number of connectable
Model name	Communic ation Type	Cable model Connection diagram number	Conversion connector*1	Max. distance	Option device	Model	equipment
					- (Built into GOT)	GS GT GT 25 GT 23 GT GS	
		GT09-C30R21101-6P or (User) RS-232 connection diagram 1)	-	15m	GT15-RS2-9P	er er 27 25	
					GT10-C02H- 6PT9P*2	GT cuar 2 10442 2 10442 R4 R2	
KV-700	RS-232	User) RS-232 connection diagram 4)	-	15m	- (Built into GOT)	GT 03P 2104P 2104P R2	1 GOT for 1 PLC
					- (Built into GOT)	GS GT CT	
		OP-26487 ^{*1}	OP-26486	2.5m	GT15-RS2-9P	ет ет 27 25	
					GT10-C02H- 6PT9P* ²	GT ₀ sap GT ₀ sap 210sap Z10sap R4 R2	

¹ The cable, conversion connector, and multi-communication unit are products manufactured by KEYENCE CORPORATION. For details of the product, contact KEYENCE CORPORATION.

^{*2} When a GT10-C02H-6PT9P unit of the sub version A or B is used, do not ground the case of the D-sub (9-pin) connector.

■ When connecting to multi-communication unit

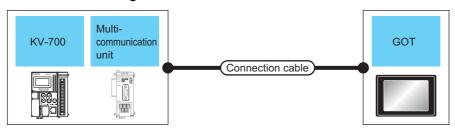



PLC		Connection cable		GOT		Number of	
Model name	Multi- communication unit ^{*2}	Commun ication Type	Cable model Connection diagram number	Max. distance	Option device	Model	connectable equipment
KV-700	KV-L20R, KV-L20, KV-L20V (port 1)	RS-232	GT09-C30R21102-9S(3m) or User) RS-232 connection diagram 2)	15m	- (Built into GOT)	GT 25 GT 27 GS 27 GS	1 GOT for 1 multi- communication unit
					GT15-RS2-9P	ет ет 27 25	
					GT10-C02H- 6PT9P ^{*2}	GT _{03P} GT _{03P} 2104P R4 R2 R2	
			(User) RS-232 connection diagram 5)	15m	- (Built into GOT)	GT _{04R} GT _{03P} 21 ^{04P} R2	
	KV-L20R, KV-L20, KV-L20V (port 2)	RS-232	GT09-C30R21103-3T(3m) or (User) RS-232 connection diagram 3)	15m	- (Built into GOT)	GT 27 25 GT 23 21 21 21 21 21 21 21 21 21 21 21 21 21	
					GT15-RS2-9P	ет ет 27 25	
					GT10-C02H- 6PT9P ^{*2}	GT ₀ 3P 210aP 210aP R4 R2 R2	
			User) RS-232 connection diagram 6)	15m	- (Built into GOT)	9T04R 2T03P 2104P R2	

PLC			Connection cable		GOT		
Model name	Multi- communication unit ^{*2}	Commun ication Type	Cable model Connection diagram number	Max. distance	Option device	Model	Number of connectable equipment
KV-700	KV-L20R, KV-L20, KV-L20V (port 2)	RS-422	GT09-C30R41101-5T(3m) GT09-C100R41101-5T(10m) GT09-C200R41101-5T(20m) GT09-C300R41101-5T(30m) or User) RS-422 connection diagram 1)	500m	- (Built into GOT)	GT 25 GT 25 GT 27 GS GT 27 GS	
					GT15-RS4-9S	ет ет 27 25	
					GT10-C02H-9SC	GT _{04IR} 21 _{04IP} 21 _{04IP} R4	
			(User) RS-422 connection diagram 2)	500m	- (Built into GOT)	GT_OSP 2104P 2104P ETIR4 GT_OSP 2104P R4	1 GOT for 1 multi-
	KV-L20R, KV-L20, KV-L20V (port 2)	RS-485	(User) RS-485 connection diagram 1)	500m	- (Built into GOT)	GT 25 GT 25 GS 27,050 GS	communication unit
					GT15-RS4-9S	er er 27 25	
					GT10-C02H-9SC	GT ₀ 4R 2T ₀ 3P 2T ₀ 4P R4	
			(User) RS-485 connection diagram 2)	500m	- (Built into GOT)	GT OAR GT OAP 210AP 210AP ETIR4 GT OAP 210AP R4	

The conversion connector and multi-communication unit are products manufactured by KEYENCE CORPORATION. For details of the product, contact KEYENCE CORPORATION.

When a GT10-C02H-6PT9P unit of the sub version A or B is used, do not ground the case of the D-sub (9-pin) connector.


6.2.5 Connection Diagram

The following diagram shows the connection between the GOT and the PLC.


■ RS-232 cable

(1) Connection diagram


(a) RS-232 connection diagram 1)

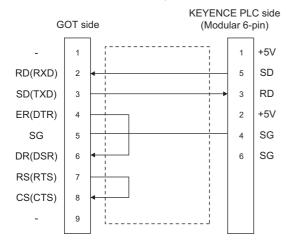


(b) RS-232 connection diagram 2)

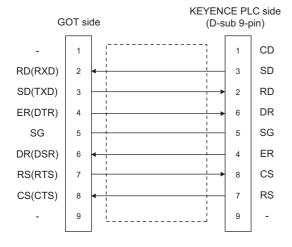


(c) RS-232 connection diagram 3)

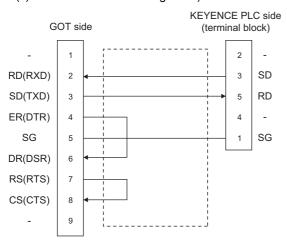


(d) RS-232 connection diagram 4)

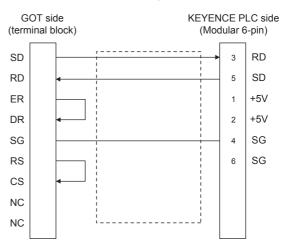

(e) RS-232 connection diagram 5)

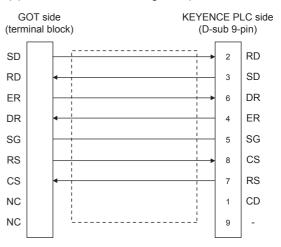

(f) RS-232 connection diagram 6)

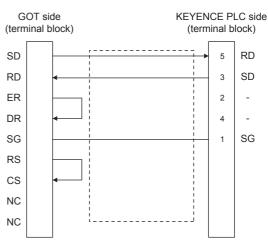

(2) Precaution when preparing a cable


- (a) Cable length

 The length of the RS-232 cable must be within 15m.
- (b) GOT side connectorFor the GOT side connector, refer to the following.1.4.1 GOT connector specifications
- (c) KEYENCE PLC side connector Use the connector compatible with the KEYENCE PLC side module. For details, refer to the KEYENCE PLC user's manual.


■ RS-422 cable

(1) Connection diagram

(a) RS-422 connection diagram 1)

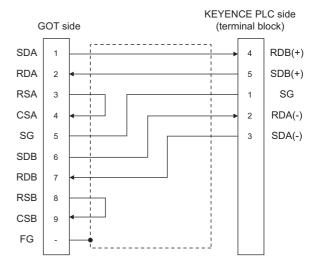

(b) RS-422 connection diagram 2)

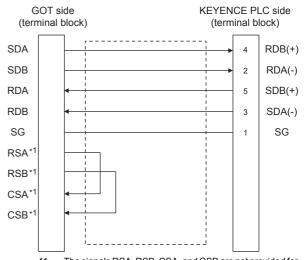

*1 The signals RSA, RSB, CSA, and CSB are not provided for

Return connection is not required.

(2) Precautions when preparing a cable

- (a) Cable length
 - The length of the RS-422 cable must be 500m or less
- (b) GOT side connectorFor the GOT side connector, refer to the following.1.4.1 GOT connector specifications
- (c) KEYENCE PLC side connector Use the connector compatible with the KEYENCE PLC side module. For details, refer to the KEYENCE PLC user's manual.

(3) Connecting terminating resistors

(a) GOT side

When connecting a KEYENCE PLC to the GOT, a terminating resistor must be connected to the GOT.

- For GT27, GT25, GT23 Set the terminating resistor setting switch of the GOT main unit to "Disable".
- For GT21 Set the terminating resistor selector to "330 Ω ".


For the procedure to set the terminating resistor, refer to the following.

1.4.3 Terminating resistors of GOT


■ RS-485 cable

(1) Connection diagram

(a) RS-485 connection diagram 1)

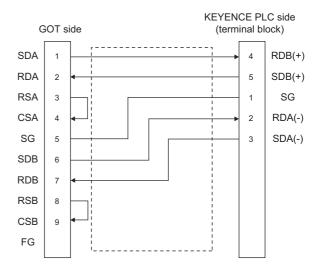

(b) RS-485 connection diagram 2)

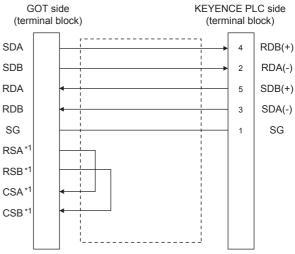

The signals RSA, RSB, CSA, and CSB are not provided for

Return connection is not required.

(2) Precautions when preparing a cable

(a) Cable length

The length of the RS-485 cable must be 500m or

(b) GOT side connector

For the GOT side connector, refer to the following. 1.4.1 GOT connector specifications

(c) KEYENCE PLC side connector

Use the connector compatible with the KEYENCE PLC side module.

For details, refer to the KEYENCE PLC user's manual.

(3) Connecting terminating resistors

(a) GOT

• For GT27, GT25, GT23 Set the terminating resistor setting switch of the GOT main unit to "Enable".

• For GT21

Set the terminating resistor selector to "330 Ω ". For the procedure to set the terminating resistor, refer to the following.

1.4.3 Terminating resistors of GOT

(b) KEYENCE PLC


Connect the terminating resistor on the KEYENCE PLC side when connecting a GOT to a KEYENCE PLC.

3 6.2.7 PLC Side Setting

6.2.6 GOT Side Settings

Setting communication interface (Communication settings)

Set the channel of the equipment to be connected to the GOT.

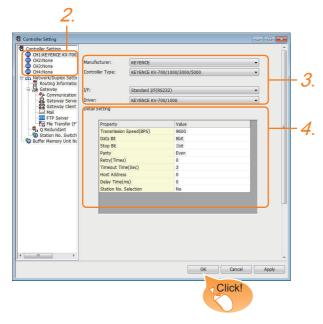

- Select [Common] → [Controller Setting] from the menu.
- The Controller Setting window is displayed. Select the channel to be used from the list menu.
- Set the following items.
 - Manufacturer: KEYENCE
 - Controller Type: KEYENCE KV-700/1000/3000/ 5000
 - · I/F: Interface to be used
 - Driver: KEYENCE KV-700/1000
- The detailed setting is displayed after Manufacturer, Controller Type, I/F, and Driver are set. Make the settings according to the usage environment.
 - □ Communication detail settings

Click the [OK] button when settings are completed.



The settings of connecting equipment can be confirmed in [I/F Communication Setting]. For details, refer to the following.

1.1.2 I/F communication setting

Communication detail settings

Make the settings according to the usage environment.

Property	Value
Transmission Speed(BPS)	9600
Data Bit	8 bit
Stop Bit	1 bit
Parity	Even
Retry(Times)	0
Timeout Time(Sec)	3
Host Address	0
Delay Time(ms)	0
Station No. Selection	No

Item	Contents	Range
Transmission Speed	Set this item when change the transmission speed used for communication with the connected equipment. (Default: 9600bps)	9600bps, 19200bps, 38400bps, 57600bps, 115200bps
Data Bit	Set this item when change the data length used for communication with the connected equipment. (Default: 8bits)	7bits/8bits
Stop Bit	Specify the stop bit length for communications. (Default: 1bit)	1bit/2bits
Parity	Specify whether or not to perform a parity check, and how it is performed during communication. (Default: Even)	None Even Odd
Retry	Set the number of retries to be performed when a communication error occurs. (Default: 0time)	0 to 5times
Timeout Time	Set the time period for a communication to time out. (Default: 3sec)	1 to 30sec
Host Address	Specify the host address (station No. of the PLC to which the GOT is connected) in the network of the GOT. (Default: 0)	0 to 9
Delay Time	Set this item to adjust the transmission timing of the communication request from the GOT. (Default: 0ms)	0 to 300ms
Station No. Selection	Specify whether to use the station No. during communication. (Default: None)	Yes or No



(1) Communication interface setting by the Utility
The communication interface setting can be
changed on the Utility's [Communication Settings]
after writing [Communication Settings] of project
data.

For details on the Utility, refer to the following manual.

GOT2000 Series User's Manual (Utility)

(2) Precedence in communication settings When settings are made by GT Designer3 or the Utility, the latest setting is effective.



KEYENCE PLC

For details of KEYENCE PLC, refer to the following manual

KEYENCE PLC user's Manual

Model name		Reference
	KV-3000	6 - 19
PLC CPU	KV-1000	6 - 19
	KV-700	6 - 19
	KV-L20R	
Multi-communication unit	KV-L20	6 - 19
	KV-L20V	

■ Connecting KV-3000,KV-1000

Setting items	Set value
Transmission Speed	9600 to 115200 bps*1
Data bit	8bits
Parity bit	Even
Stop bit	1bit

^{*1} There is no transmission speed setting on the PLC side. The transmission speed of the PLC side is automatically adjusted to that of the GOT side.

■ Connecting to KV-700

Setting items	Set value
Transmission Speed	9600bps
Data bit	8bits
Parity bit	Even
Stop bit	1bit

■ Connecting to KV-L20R, KV-L20, KV-L20V

(1) Communication settings

Setting items	Set value
Communication mode	KV mode (Upper link)
Transmission speed*1*2	4800bps, 9600bps, 19200bps, 38400bps, 57600bps, 115200bps
Data bit	8bits
Parity bit	Even
Stop bit	1bit
Station No.*3	0 to 9

- *1 Only transmission speeds available on the GOT side are shown.
- *2 The transmission speed setting must be consistent with that of the GOT side.

For the transmission speed setting on the GOT side, refer to the following.

₃ ■ Se

- Setting communication interface (Communication settings)
- *3 Set the station No. according to the host address on the GOT side.

For the Host Address setting on the GOT side, refer to the following.




■ Setting communication interface (Communication settings)


(2) Setting DIP switches Set the DIP switches.

Set the Dir Switches.

(a) When using KV-L20R or KV-L20

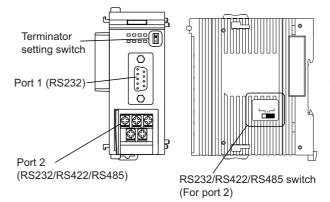

 RS232/RS422/RS485 switch (For port 2) (For KV-L20R)

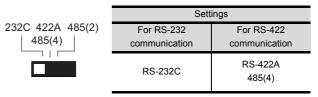

(For KV-L20)


	Settings		
232C 422A VT	For RS-232	For RS-422	
	communication	communication	
	RS-232C	RS-422A	

Terminator setting switch
 Set when carrying out RS-422 communication.



Settings		
When multi-	When multi-	
communication unit	communication unit	
is a terminal	is not a terminal	
ON	OFF	

(b) When using KV-L20

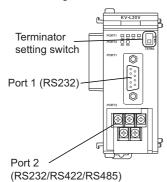


• Terminator setting switch Set when carrying out RS-422 communication.

ON
OFF

Settings		
When multi-	When multi-	
communication unit	communication unit	
is a terminal	is not a terminal	
ON	OFF	

6.3 Ethernet Connection

6.3.1 Connecting to KV-700/1000/3000/5000/5500

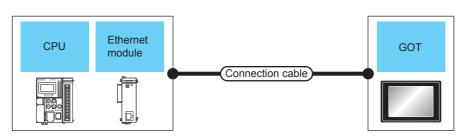



PI	LC	Connection cable		GOT		Number of connectable
Series	Ethernet module*3	Cable model	Maximum segment length*2	Option device	Model*3	- Number of connectable equipment
KV-700 KV-1000 KV-3000 KV-5000 KV-5500	KV-LE20V KV-LE21V	Twisted pair cable • 10BASE-T Shielded twisted pair cable (STP) or unshielded twisted pair cable (UTP): Category 3, 4, and 5 • 100BASE-TX Shielded twisted pair cable (STP): Category 5 and 5e	100m	- (Built into GOT)	GT 27 25 GT 27 045 23 2 165 GS	When PLC:GOT is N:1 The following shows the number of PLCs for 1 GOT <for gt25="" gt27,=""> TCP: 128 or less UDP: 128 or less <for gt21=""> TCP: 4 or less UDP: 4 or less When PLC:GOT is 1:N The following shows the number of GOTs for 1 PLC TCP: 15 or less UDP: 1 or less</for></for>

The destination connected with the twisted pair cable varies with the configuration of the applicable Ethernet network system.
Connect to the Ethernet module, hub, transceiver or other system equipment corresponding to the applicable Ethernet network system.

Use cables, connectors, and hubs that meet the IEEE802.3 10BASE-T/100BASE-TX standards.

*2 A length between a hub and a node.

The maximum distance differs depending on the Ethernet device to be used.

The following shows the number of the connectable nodes when a repeater hub is used.

- 10BASE-T: Max. 4 nodes for a cascade connection (500m)
- 100BASE-TX: Max. 2 nodes for a cascade connection (205m)

When switching hubs are used, the cascade connection between the switching hubs has no logical limit for the number of cascades.


For the limit, contact the switching hub manufacturer.

*3 Product manufactured by KEYENCE CORPORATION. For details of the product, contact KEYENCE CORPORATION.

6.3.2 GOT side settings

Setting communication interface (Communication settings)

Set the channel of the connected equipment.

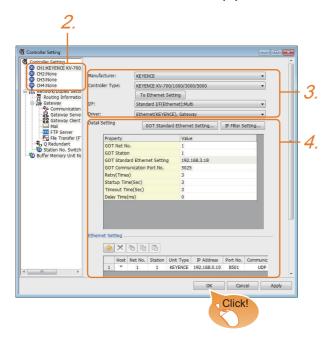

- Select [Common] → [Controller Setting] from the menu.
- 2. The Controller Setting window is displayed. Select the channel to be used from the list menu.
- Set the following items.
 - · Manufacturer: KEYENCE
 - Controller Type: KEYENCE KV-700/1000/3000/ 5000
 - I/F: Interface to be used
 - Driver: Ethernet(KEYENCE), Gateway
- The detailed setting is displayed after Manufacturer, Controller Type, I/F, and Driver are set. Make the settings according to the usage environment.

6.3.2 ■ Communication detail settings

Click the [OK] button when settings are completed.



The settings of connecting equipment can be confirmed in [I/F Communication Setting]. For details, refer to the following.

1.1.2 I/F communication setting

Communication detail settings


Make the settings according to the usage environment.

Property	Value	
GOT Net No.	1	
GOT Station	1	
GOT Standard Ethernet Setting	192.168.3.18	
GOT Communication Port No.	5025	
Retry(Times)	3	
Startup Time(Sec)	3	
Timeout Time(Sec)	3	
Delay Time(ms)	0	

Item	Description	Range
GOT Net No.	Set the network No. of the GOT. (Default: 1)	1 to 239
GOT Station*1	Set the station No. of the GOT. (Default: 1)	1 to 254
GOT Standard Ethernet Setting	Set the GOT IP address, subnet mask, default gateway, peripheral S/W communication port No., transparent port No.	Standard Ethernet Setting
GOT Communication Port No.	Set the GOT port No. for the connection with the Ethernet module. (Default: 5025)	1024 to 5010, 5014 to 65534 (Except for 5011, 5012, 5013, and 49153)
Retry	Set the number of retries to be performed when a communication timeout occurs. When receiving no response after retries, the communication times out. (Default: 3times)	0 to 5times
Startup Time	Specify the time period from the GOT startup until GOT starts the communication with the PLC CPU. (Default: 3sec)	3 to 255sec
Timeout Time	Set the time period for a communication to time out. (Default: 3sec)	1 to 90sec
Delay Time	Set the delay time for reducing the load of the network/destination PLC. (Default: 0ms)	0 to 10000 (×10ms)


^{*1} Each of [GOT Station] set in the communication detail setting and [Station] set in the Ethernet setting must be set to different station numbers.

■ GOT Standard Ethernet Setting

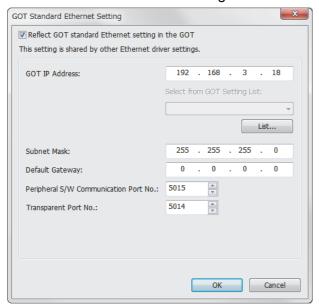

Item	Description	Range
GOT IP Address	Set the IP address of the GOT. (Default: 192.168.3.18)	0.0.0.0 to 255.255.255.255
Subnet Mask*1	Set the subnet mask for the sub network. (Only for connection via router) If the sub network is not used, the default value is set. (Default: 255.255.255.0)	0.0.0.0 to 255.255.255.255
Default Gateway	Set the router address of the default gateway where the GOT is connected. (Only for connection via router) (Default: 0.0.0.0)	0.0.0.0 to 255.255.255.255
Peripheral S/W Communication Port No.	Set the GOT port No. for the communication with the peripheral S/W. (Default: 5015)	1024 to 5010, 5014 to 65534 (Except for 5011, 5012, 5013 and 49153)
Transparent Port No.	Set the GOT port No. for the transparent function. (Default: 5014)	1024 to 65534 (Except for 5011 to 5013 and 49153 to 49170)

■ Ethernet setting

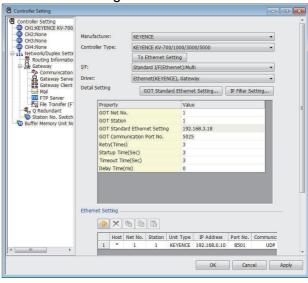

Item	Description	Set value
Host	The host is displayed. (The host is indicated with an asterisk (*).)	-
N/W No.	Set the network No. of the connected Ethernet module. (Default: blank)	1 to 239
Station*1	Set the station No. of the connected Ethernet module. (Default: blank)	1 to 254
Туре	KEYENCE (fixed)	KEYENCE (fixed)
IP Address	Set the IP address of the connected Ethernet module. (Default: 192.168.0.10)	PLC side IP address
Port No.	Set the port No. of the connected Ethernet module. (Default: 8501)	PLC side port No.
Communication	UDP, TCP (Default: UDP)	Adjust the settings with the PLC settings.

*1 Each of [GOT Station] set in the communication detail setting and [Station] set in the Ethernet setting must be set to different station numbers.



■ Communication detail settings



(1) Communication interface setting by the Utility The communication interface setting can be changed on the Utility's [Communication setting] after writing [Communication Settings] of project data.

For details on the Utility, refer to the following manual.


GOT2000 Series User's Manual (Utility)

(2) Precedence in communication settings
When settings are made by GT Designer3 or the
Utility, the latest setting is effective.




Ethernet setting for GT21 and GS

- (1) Effective range of the Ethernet setting Only [1] to [4] of the Ethernet setting can be used for the GT21 and the GS. Even though [5] or later of the Ethernet setting is written to the GT21 and the GS, the setting is disabled on the GT21 and the GS side.
- (2) Range of the host station setting Set a host station within the range of [1] to [4] of the Ethernet setting.

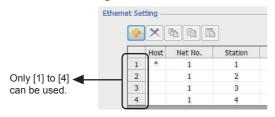

■ IP Filter Setting

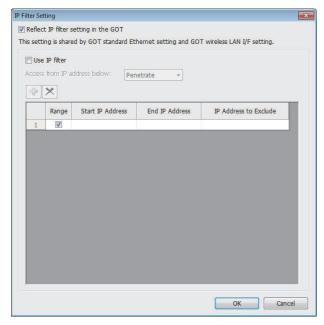

To improve security, the GOT 2000 series supports the IP Filter Setting.

For details on the IP Filter Setting, refer to the following manual.

GT Designer3 (GOT2000) Screen Design Manual

6.3.3 PLC side setting



KEYENCE PLC

For details of KEYENCE PLC, refer to the following manual.

KEYENCE PLC user's Manual

■ KV-LE21V/KV-LE21V setting

Set the IP address and port No. by the unit editor of KV STUDIO.

Item	Description	Range
Communication mode	Ethernet	-
IP address*1	Set the IP address.	0.0.0.0 to 255.255.255.255
Port No.*1 (Host link)	Set the port No.	256 to 65534

^{*1} Adjust the settings with the Ethernet settings of the GOT side.

■ Ethernet setting

Device Range that Can Be Set 6.4

The device ranges of controller that can be used for GOT


Note that the device ranges in the following tables are the maximum values that can be set in GT Designer3.

The device specifications of controllers may differ depending on the models, even though belonging to the same series.

Please make the setting according to the specifications of the controller actually used.

When a non-existent device or a device number outside the range is set, other objects with correct device settings may not be monitored.

Setting item

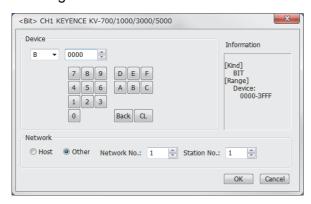

Item	Description						
	Set the	Set the device name, device number, and bit number.					
Device	The bit	number can be set only when specifying the bit of					
	word de	word device.					
Information	Displays the device type and its setting range selected in						
[Device].							
	Set the station number of the controller to be monitored.						
	Host	Select this item for monitoring the host controller.					
		Select this item for monitoring other controllers.					
Network		After selecting, set the station number of the					
	Other	controller to be monitored.					
		NWNo.: Set the network No.					
		Station No.: Set the station No.					



Device settings of KEYENCE PLC

(1) Setting setting procedure for relays (...), internal auxiliary relays (MR), latch relays (LR) and control relays(CR).

Make settings for status by a channel number and a bit position.



6.4.1 KV-700/1000/3000/5000

			D :
	Device name	Setting range	Device No. represen tation
	Relay ()	00000 to99915	,
	Internal auxiliary relay (MR)	MR00000 to MR99915	Decimal
	Latch relay (LR)	LR00000 to LR99915	Decimal
	Control relay (CR)	CR0000 to CR3915	
	Link relay (B)*2	B0000 to B3FFF	Hexadec
	Work relay (VB)*2	VB0000 to VB3FFF	imal
vice	Timer (Contact) (T)*1*2	T0000 to T3999	
3it device	Counter (Contact) (C)*1*2	C0000 to C3999	
ш	High-speed counter comparator (Contact) (CTC)*2*3*6	CTC0 to CTC3	Decimal
	The bit specification of the word device (except Control memory, Temporary data memory, Work memory, Index register)	Setting range of each word device	-
	Data memory (DM)	DM00000 to DM65534	
	Extension data memory (EM)	EM00000 to EM65534	Decimal
	Extension data memory 2 (FM)	FM00000 to FM32767	
	File register (ZF)	ZF000000 to ZF032767 ZF032768 to ZF065535 ZF065536 to ZF098303 ZF098304 to ZF131071	
Nord device	Link register (W)	W0000 to W3FFF	Hexadec imal
p p.	Control memory (CM)	CM00000 to CM11998	
Š	Temporary data memory (TM)	TM000 to TM511	
	Work memory (VM)	VM00000 to VM59999	Decimal
	Index register (Z)*7	Z1 to Z12	
	The word specification of the bit device (except Timer (Contact), Counter (Contact), High-speed counter comparator (Contact))	Setting range of each bit device	-
	Timer (Current value) (TC)*2*4	TC0000 to TC3999	
	Timer (Set value) (TS)*2*4	TS0000 to TS3999	
ice	Counter (Current value) (CC)*2*4	CC0000 to CC3999	
dev	Counter (Set value) (CS)*2*4	CS0000 to CS3999	
Double word device	High-speed counter (Current value) (CTH)*2*4	CTH0 to CTH1	-
	High-speed counter comparator (Set value) (CTC)*2*4	CTC0 to CTC3	
	Index register (DZ)	DZ01 to DZ12	
	Digital trimmer (TRM)*4*5	TRM0 to TRM7	

- Monitoring or writing is not possible in the continuous device designation mode
- Monitoring by GOT is possible only when a device is used in *2
- the sequence program.
 When writing, only the reset of the contact is possible.
 Only 32-bit (2-word) designation is allowed.

- Only reading is possible.

 Monitoring or writing to continuous devices is not possible.

 With KV-3000 and KV-5000, Z devices cannot be specified
- as 32-bit (2 words) data. Use DZ devices.



_

7

CONNECTION TO KOYO EI PLC

7.1	Connectable Model List
7.2	System Configuration
7.3	Connection Diagram
7.4	GOT Side Settings
7.5	PLC Side Setting
7.6	Device Range that Can Be Set
7.7	Precautions

7. CONNECTION TO KOYO EI PLC

7.1 Connectable Model List

The following table shows the connectable models.


Series	Model name	Clock*1	Communication Type	Connectable GOT	Refer to	
	SU-5E	×	RS232	ет ет ет 27 25 23	7.2.1	
KOSTAC SU Series	SU-6B	0	RS422	27 25 23		
KOSTAC SU Series	SU-5M	0	RS232	GT GT		
	SU-6M	0	RS422	ет ет ет 27 23	7.2.2	
	D0-05AA	×				
	D0-05AD	×				
	D0-05AR	×				
Directl COIC OF Conice	D0-05DA	×	RS232	GT GT GT		
DirectLOGIC 05 Series	D0-05DD	×	RS422	ет ет ет 27 23	7.2.3	
	D0-05DD-D	×				
	D0-05DR	×				
	D0-05DR-D	×				
	D0-06DD1	0				
	D0-06DD2	0				
	D0-06DR	0				
	D0-06DA	0				
DirectLOGIC 06 Series	D0-06AR	0	RS232 RS422	от от от 27 25 23	7.2.4	
	D0-06AA	0				
	D0-06DD1-D	0				
	D0-06DD2-D	0				
	D0-06DR-D	0				
	D2-240	0				
DirectLOGIC 205 Series	D2-250-1	0	RS232 RS422	от от от от 27 25 23	7.2.5	
	D2-260	0				
PZ series	PZ3	×	RS232 RS422	ет ет ет 27 25 23	7.2.6	

^{*1} The GOT can only read the clock data.In the clock setting, though the adjust is available, the broadcast is not available.

7.2 System Configuration

7.2.1 Connecting to SU-5E or SU-6B

■ When connecting to one PLC

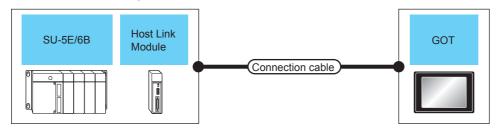




PLC		Connection cable		GOT			
Model name	Host link module*1	Communi cation Type	Cable model Connection diagram number	Max. distance	Option device	Model	Number of connectable equipment
			DS 222 User) RS-232		- (Built into GOT)	ет ет 27 25 ^{Gт} 23	
SU-5E/6B (general	_	RS-232	connection diagram 1)	15m	GT15-RS2-9P	ет ет 27 25	1 PLC for 1 GOT
communication port)		RS-422	422 (USEP) RS-422 connection diagram 1)	1000m	- (Built into GOT)	27 25 GT 23	TPLCION GOT
		110 422			GT15-RS4-9S	ет ет 27 25	
		RS-232	User) RS-232 connection diagram 1)	15m -	- (Built into GOT)	ет ет 27 25 ет 23	
SU-5E/6B					GT15-RS2-9P	ет ет 27 25	1 host link module for 1
	U-01DM	RS-422 col	(User) RS-422	1200m -	- (Built into GOT)	27 25 GT 25 23	бот
			connection diagram 3)		GT15-RS4-9S	27 ST 25	

¹ The data communications module is manufactured by KOYO ELECTRONICS INDUSTRIES CO., LTD.For details of the product, contact KOYO ELECTRONICS INDUSTRIES CO., LTD.

■ When connecting to multiple PLCs

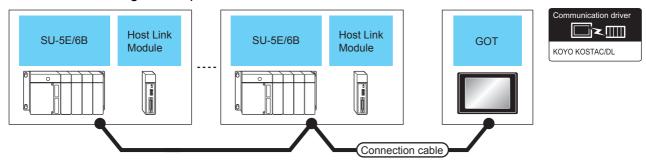


	PLC		Connection cab	Connection cable				
Model name	Host link module*1	Communi cation Type	Cable model Connection diagram number	Max. distance	Option device	Model	Number of connectable equipment	
SU-5E/6B	_	RS-422	(User) RS-422	1000m	- (Built into GOT)	er er 27 25 er 23	90 PLCs for 1 GOT*2	
SU-5E/6B -		- 10422	connection diagram 5)	1000111	GT15-RS4-9S	er er 27 25	90 PLCs for 1 GOT 2	
SU-5E/6B	U-01DM	RS-422	(User) RS-422	1200m	- (Built into GOT)	GT 27 25 GT 23	90 host link module for 1	
SU-SE/0B U-U1DM	G-61DIW	connection diagram 7)	1200111	GT15-RS4-9S	27 CT 25	GOT* ²		

The data communications module is manufactured by KOYO ELECTRONICS INDUSTRIES CO., LTD.For details of the product, contact KOYO ELECTRONICS INDUSTRIES CO., LTD.

^{*2} When the number of links exceeds 30, use a transmission line conversion unit D-01CV per 30 links. For details, refer to the following manual.

7.2.2 Connecting to SU-5M or SU-6M

■ When connecting to one PLC

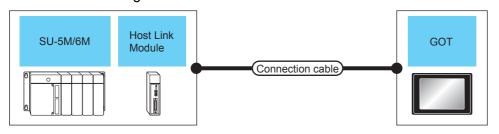




	PLC		Connection cable		GC	Number of	
Model name	Host link module*1	Communi cation Type	Cable model Connection diagram number	Max. distance	Option device	Model	connectable equipment
		RS-232	User RS-232 connection	15m -	- (Built into GOT)	ет ет 27 25 ет 23	
SU-5M/6M (general communication port 1)	_	110 202	diagram 1)		GT15-RS2-9P	er er 27 25	
	RS-422	RS-422	(User RS-422 connection	1000m	- (Built into GOT)	ет ет 27 25 ^{Gт} 23	
		1.6 122	diagram 1)		GT15-RS4-9S	er er 27 25	1 PLC for
SU-5M/6M (general communication port 2)	- RS-232	Z-20JP (Programmable connecting cable)	3m	- (Built into GOT)	er er 27 25 er 23	1 GOT	
		- RS-232	+ S-9CNS1(Conversion connector)*1	9	GT15-RS2-9P	ет ет 27 25	
SU-5M/6M (general communication port 3)	_	RS-422	(User) RS-422 connection	1000m	- (Built into GOT)	er er 27 25 er 23	
	- 103-422		diagram 2)		GT15-RS4-9S	ет ет 27 25	

PLC		Connection cable		GC	Number of		
Model name	Host link module*1	Communi cation Type	Cable model Connection diagram number	Max. distance	Option device	Model	connectable equipment
SU-5M/6M U-	HADM	U-01DM RS-422	(User) RS-232 connection diagram 1)	15m ·	- (Built into GOT)	et et 27 25 es 23	1 host link module
					GT15-RS2-9P	er er 27 25	
	OOIDW		(User RS-422 connection	1200m	- (Built into GOT)	er 27 25 er 23	for 1 GOT
			diagram 3)	.200	GT15-RS4-9S	ет ет 27 25	

The programmable connecting cable and conversion connector are products manufactured by KOYO ELECTRONICS INDUSTRIES CO., LTD.

For details of the product, contact KOYO ELECTRONICS INDUSTRIES CO., LTD.

■ When connecting to multiple PLCs

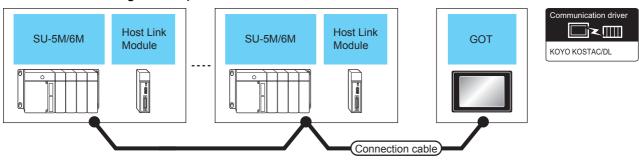


	PLC		Connection cab	le	GOT		Number of					
Model name	Host link module ^{*1}	Communi cation Type	Cable model Connection diagram number	Max. distance	Option device	Model	connectable equipment					
SU-5M/6M (general	- RS-422		(User) RS-422	1000m -	- (Built into GOT)	ет ет 27 25 ет 23						
communication port 1)		connection diagram 5)				connection diagram 5)	connection diagram 5)			GT15-RS4-9S	ет ет 27 25	90 PLCs for 1 GOT*2
SU-5M/6M (general		RS-422	(User) RS-422 connection diagram 6)			_			1000m	- (Built into GOT)	27 25 GT 23	90 PECS IOI 1 GOT
communication port 3)		110 422							connection diagram 6)		connection diagram 6)	connection diagram 6)
QU EM/GM	II 04DM	DS 422	(User) (User) RS-422	1200m	- (Built into GOT)	GT GT 25 GT 23	90 host link module					
SU-5M/6M	0 0 1 DW 1 1 O 422		connection diagram 7)	1200111	GT15-RS4-9S	GT GT 27 25	for 1 GOT*2					

The data communications module is manufactured by KOYO ELECTRONICS INDUSTRIES CO., LTD. For details of the product, contact KOYO ELECTRONICS INDUSTRIES CO., LTD.

^{*2} When the number of links exceeds 30, use a transmission line conversion unit D-01CV per 30 links. For details, refer to the following manual.

7.2.3 Connecting to DirectLOGIC 05 series

■ When connecting to one PLC

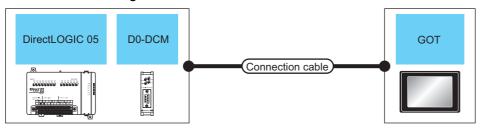




	PLC		Connection cable		GO	T	
Model name	Data communication s module *2	Communi cation Type	Cable model Connection diagram number	Max. distance	Option device	Model	Number of connectable equipment
Direct LOGIC 05 (communication	_	RS-232	Z-20JP (Programmable connecting cable)	Programmable connecting		er er 25 25 Gr 23	1 PLC for
port 1) (communication port 2)		110 202	S-9CNS1(Conversion			ет ет 27 25	1 GOT
Direct	D0-DCM	RS-232	Z-20JP (Programmable connecting cable)	3m	- (Built into GOT)	ет ет 27 25 ет 23	
LOGIC 05	(port 1)	110 202	+ S-9CNS1(Conversion connector)*1	S-9CNS1(Conversion		ет 27 25	
		RS-232	User RS-232 connection	User RS-232 connection diagram 2)		27 25 GT 23	1 data communication
Direct	D0-DCM	110 202	diagram 2)			ет 27 25	module for 1 GOT
LOGIC 05	(port 2)	RS-422	User RS-422 connection	1000m	- (Built into GOT)	eT	
		110-422	diagram 4)	1000111	GT15-RS4-9S	ет ет 27 25	

^{*1} The programmable connecting cable and conversion connector are products manufactured by KOYO ELECTRONICS INDUSTRIES CO., LTD.

For details of the product, contact KOYO ELECTRONICS INDUSTRIES CO., LTD.

^{*2} The data communications module is manufactured by KOYO ELECTRONICS INDUSTRIES CO., LTD. For details of the product, contact KOYO ELECTRONICS INDUSTRIES CO., LTD.

■ When connecting to multiple PLCs

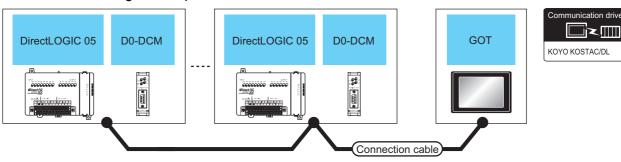


	PLC		Connection cable		GOT		Number of
Model name	Data communications module*1	Communi cation Type	Cable model Connection diagram number	Max. distance	Option device	Model	connectable equipment
Direct	D0-DCM	RS-422	User RS-422 connection	1000m	- (Built into GOT)	27 25 27 25 23	90 data
LOGIC 05	(port 2)	110-422	diagram 8)	1000111	GT15-RS4-9S	er er 25	module for 1 GOT*2

The data communications module is manufactured by KOYO ELECTRONICS INDUSTRIES CO., LTD. For details of the product, contact KOYO ELECTRONICS INDUSTRIES CO., LTD.

When the number of links exceeds 30, use a transmission line conversion unit D-01CV per 30 links. For details, refer to the following manual.

7.2.4 Connecting to DirectLOGIC 06 series

■ When connecting to one PLC

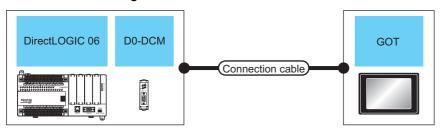



	PLC		Connection cable		G	TC	Number of
Model name	Data communications module*1	Commun ication Type	Cable model Connection diagram number	Max. distance	Option device	Model	connectable equipment
Direct LOGIC 06			- (Built into GOT)	er er 25 25 23			
(communication port 1)		110 202	+ S-9CNS1(Conversion connector)*2	5111	GT15-RS2-9P	ет ет 27 25	
		RS-232	(User) RS-232 connection diagram	15m	- (Built into GOT)	eT eT 25 eT 25 eT 23	1 PLC for
Direct LOGIC 06		110 202	2)	10111	GT15-RS2-9P	er er 27 25	1 GOT
(communication port 2)		RS-422	User RS-422 connection diagram	1000m	- (Built into GOT)	er er 25 er 25 er 23	
		110 422	4)	100011	GT15-RS4-9S	ет ет 27 25	


	PLC		Connection cable		G	ОТ	Number of
Model name	Data communications module*1	Commun ication Type	Cable model Connection diagram number	Max. distance	Option device	Model	connectable equipment
Direct	D0-DCM	RS-232	Z-20JP (Programmable connecting cable)	3m	- (Built into GOT)	et et 27 25 es 23	
LOGIC 06	(port 1)	110 202	+ S-9CNS1(Conversion connector)* ²	- Gill	GT15-RS2-9P	ет ет 27 25	
		RS-232	User RS-232 connection diagram	15m	- (Built into GOT)	et et 27 25 et 23	1 data communication
Direct	D0-DCM	110 202	2)	10111	GT15-RS2-9P	er er 25	module for 1 GOT
LOGIC 06	(port 2)	RS-422	(User) RS-422 connection diagram	1000m	- (Built into GOT)	GT 25 GT 23	
		110-422	4)	1000111	GT15-RS4-9S	ет ет 27 25	

The data communications module is manufactured by KOYO ELECTRONICS INDUSTRIES CO., LTD. For details of the product, contact KOYO ELECTRONICS INDUSTRIES CO., LTD.

^{*2} The programmable connecting cable and conversion connector are products manufactured by KOYO ELECTRONICS INDUSTRIES CO., LTD.

For details of the product, contact KOYO ELECTRONICS INDUSTRIES CO., LTD.

■ When connecting to multiple PLCs

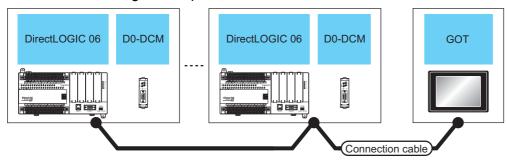




	PLC		Connection cable		GOT		Number of
Model name	Data communication module*1	Commun ication Type	Cable model Connection diagram number	Max. distance	Option device	Model	connectable equipment
Direct LOGIC 06	_	RS-422	(User) RS-422 connection	1000m	- (Built into GOT)	ет ет 27 25 ет 23	90 PLCs for
(communication port 2)		110 422	diagram 8)	1000111	GT15-RS4-9S	ет ет 27 25	1 GOT ^{*2}
Direct	D0-DCM	RS-422	User RS-422 connection	1000m	- (Built into GOT)	er er 27 25 er 23	90 data communication
LOGIC 06	(port 2)	110 422	diagram 8)	1030111	GT15-RS4-9S	ет ет 27 25	module for 1 GOT*2

The data communications module is manufactured by KOYO ELECTRONICS INDUSTRIES CO., LTD. For details of the product, contact KOYO ELECTRONICS INDUSTRIES CO., LTD.

^{*2} When the number of links exceeds 30, use a transmission line conversion unit D-01CV per 30 links. For details, refer to the following manual.

7.2.5 Connecting to D2-240, D2-250-1 or D2-260

■ When connecting to one PLC

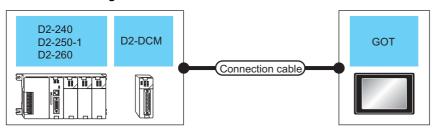




	PLC		Connection cable		GC	T	N. orboros
Model name	Data communicati ons module*1	Commun ication Type	Cable model Connection diagram number	Max. distance	Option device	Model	Number of connectable equipment
D2-240 D2-250-1 D2-260	-	RS-232	User RS-232 connection	3m	- (Built into GOT)	eT eT 25 25 23	
(communication port 2)		110 202	diagram 2)	o	GT15-RS2-9P	eт eт 27 25	1 PLC for 1 GOT
D2-250-1 D2-260	_	RS-422	User RS-422 connection	1000m	- (Built into GOT)	et et 25 et 25 et 23	112010111001
(communication port 2)			diagram 4)	1000111	GT15-RS4-9S	ет ет 27 25	
		RS-232	User RS-232 connection	15m	- (Built into GOT)	eT eT 25 25 23	
D2-240 D2-250-1	D2-DCM	110 202	diagram 1)	10	GT15-RS2-9P	eт eт 27 25	1 data communication
D2-260	DZ DOW	RS-422	User RS-422 connection	1200m	- (Built into GOT)	27 25 GT 25 23	module for 1 GOT
		110-722	diagram 3)	1200m	GT15-RS4-9S	et et 27 25	

The programmable connecting cable and conversion connector are products manufactured by KOYO ELECTRONICS INDUSTRIES CO., LTD.

For details of the product, contact KOYO ELECTRONICS INDUSTRIES CO., LTD.

■ When connecting to multiple PLCs

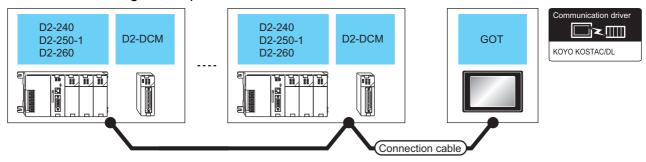


	PLC		Connection cab	le	GOT		
Model name	Data communicati ons module*1	Communi cation Type	Cable model Connection diagram number	Max. distance	Option device	Model	Number of connectable equipment
D2-250-1 D2-260	_	RS-422	(User) RS-422	1000m	- (Built into GOT)	et et 25 25 et 23	90 PLCs for
(communication port 2)		110 422	connection diagram 8)	1000111	GT15-RS4-9S	er er 27 25	1 GOT*2
D2-240 D2-250-1	D2-DCM	RS-422	(User) RS-422	1200m	- (Built into GOT)	27 25 GT 23	90 data communication
D2-260	DZ DOW	10 722	connection diagram 7)	1200111	GT15-RS4-9S	ет ет 27 25	module for 1 GOT*2

The data communications module is manufactured by KOYO ELECTRONICS INDUSTRIES CO., LTD. For details of the product, contact KOYO ELECTRONICS INDUSTRIES CO., LTD.

^{*2} When the number of links exceeds 30, use a transmission line conversion unit D-01CV per 30 links. For details, refer to the following manual.

7.2.6 Connecting to PZ


■ When connecting to one PLC

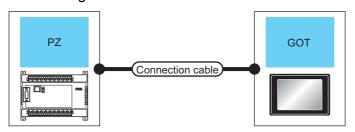



PLC		Connection cable		GOT		
Model name	Communi cation Type	Cable model Connection diagram number	Max. distance	Option device	Model	Number of connectable equipment
	RS-232	User RS-232 connection diagram 2)	15m	- (Built into GOT)	er er 25 er 25 er 23	
PZ (general	110-232	(mining) RS-232 connection diagram 2)	13111	GT15-RS2-9P	er er 25	1 PLC for 1 GOT
communication port 2)	RS-422	(User) DC 422 connection discuss A)	1000m	- (Built into GOT)	27 25 GT 25 23	11 20 101 1 001
	110-422	(User) RS-422 connection diagram 4)	1000111	GT15-RS4-9S	et et 27 25	

■ When connecting to multiple PLCs

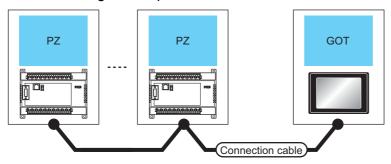



PLC		Connection cable		GOT		
Model name	Communi cation Type	Cable model Connection diagram number	Max. distance	Option device	Model	Number of connectable equipment
PZ (general	RS-422	(Ise) DO 400 and the discuss O	- (Built into GOT)	- (Built into GOT)	GT 27 25 GT 23 90 PLCs for	
communication port 2)	R3-422	(User) RS-422 connection diagram 8)	1000m	GT15-RS4-9S	ет ет 27 25	1 GOT*1

When the number of links exceeds 30, use a transmission line conversion unit D-01CV per 30 links. For details, refer to the following manual.


7.3 Connection Diagram

The following diagram shows the connection between the GOT and the PLC.

7.3.1 RS-232 cable


Connection diagram

(1) RS-232 connection diagram 1)

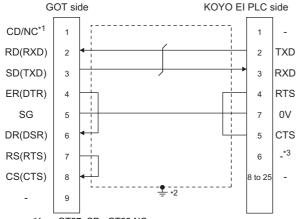

- *1 GT27: CD, GT23:NC
- *2 Connect FG grounding to the appropriate part of a cable shield line.
- *3 For U-01DM and D2-DCM, the signal name will be +5V.

(2) RS-232 connection diagram 2)

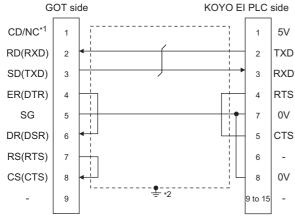

- *1 GT27: CD, GT23:NC
- *2 Connect FG grounding to the appropriate part of a cable shield line.

Precautions when preparing a cable

(3) Cable length

The length of the RS-232 cable must be 15m or less.

(4) GOT side connector

For the GOT side connector, refer to the following.

1.4.1 GOT connector specifications

(5) KOYO EI PLC side connector


Use the connector compatible with the KOYO EI PLC side.

For details, refer to the KOYO EI PLC user's manual.

7.3.2 RS-422 cable


■ Connection diagram

(1) RS-422 connection diagram 1)

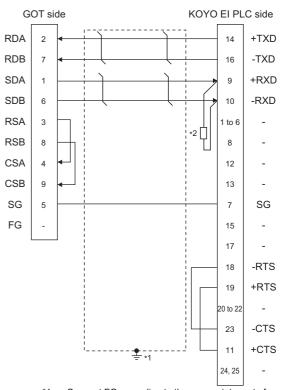


- *1 Connect FG grounding to the appropriate part of a cable shield line.
- *2 Connect a terminating resistor (approximately 150Ω) to the PLC at a terminal station.

(2) RS-422 connection diagram 2)

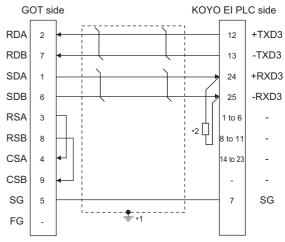


- Connect FG grounding to the appropriate part of a cable shield line.
- *2 Connect a terminating resistor (approximately 150 Ω) to the PLC at a terminal station.

(3) RS-422 connection diagram 3)

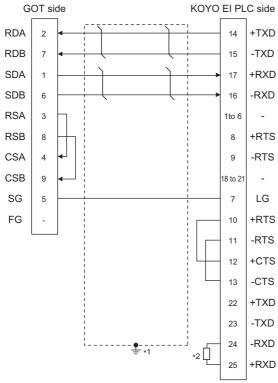


- *1 Connect FG grounding to the appropriate part of a cable shield line
- *2 Connect a terminating resistor (approximately 150 Ω) to the PLC at a terminal station.

(4) RS-422 connection diagram 4)

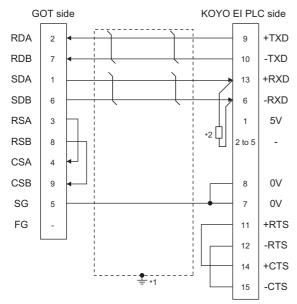

- *1 Connect FG grounding to the appropriate part of a cable shield line.
- *2 Connect a terminating resistor (approximately 100 to 500 Ω) to the PLC to be a terminal.


(5) RS-422 connection diagram 5)

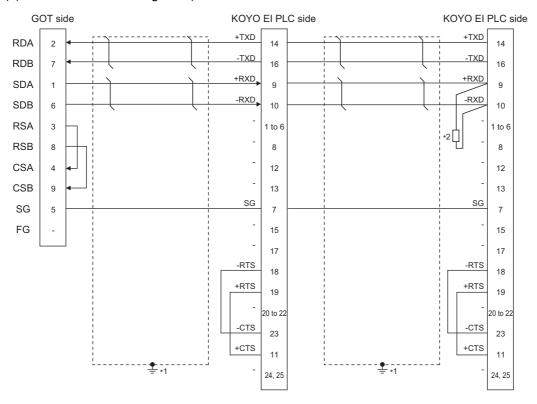

- *1 Connect FG grounding to the appropriate part of a cable shield line.
- *2 Connect a terminating resistor (approximately $150\,\Omega$) to the PLC at a terminal station. When the number of links exceeds 30, use a transmission line conversion unit D-01CV per 30 links. For details, refer to the following manual.


KOYO EI PLC user's Manual

(6) RS-422 connection diagram 6)

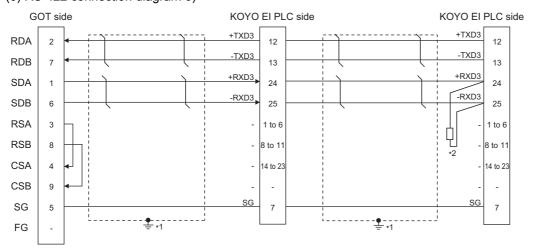

- *1 Connect FG grounding to the appropriate part of a cable shield line.
- *2 Connect a terminating resistor (approximately 150 Ω) to the PLC at a terminal station. When the number of links exceeds 30, use a transmission line conversion unit D-01CV per 30 links. For details, refer to the following manual.


(7) RS-422 connection diagram 7)

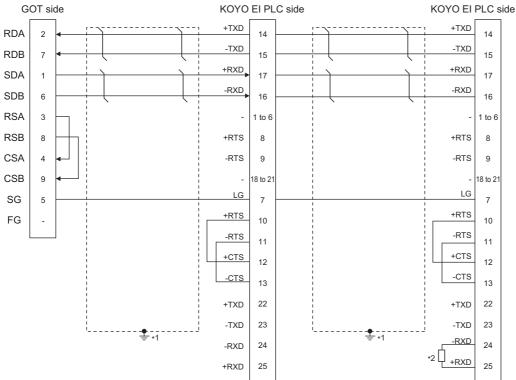

- *1 Connect FG grounding to the appropriate part of a cable shield line.
- *2 Connect a terminating resistor (approximately 150 Ω) to the PLC at a terminal station. When the number of links exceeds 30, use a transmission line conversion unit D-01CV per 30 links. For details, refer to the following manual.

KOYO EI PLC user's Manual

(8) RS-422 connection diagram 8)

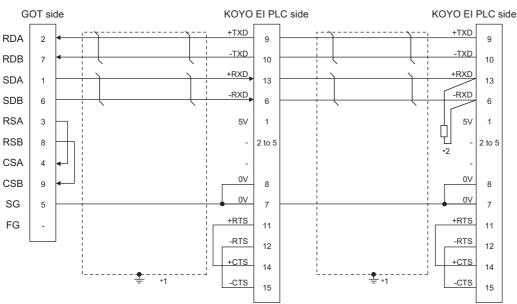

- *1 Connect FG grounding to the appropriate part of a cable shield line.
- *2 Connect a terminating resistor (approximately 100 to $500\,\Omega$) to the PLC to be a terminal. When the number of links exceeds 30, use a transmission line conversion unit D-01CV per 30 links. For details, refer to the following manual.

Precautions when preparing a cable

(1) Cable length

The maximum length of the RS-422 cable differs according to the specifications of the KOYO EI PLC side module.

For details, refer to the following manual.

KOYO EI PLC user's Manual

(2) GOT side connector

For the GOT side connector, refer to the following.

1.4.1 GOT connector specifications

(3) KOYO EI PLC side connector

Use the connector compatible with the KOYO EI PLC side.

For details, refer to the KOYO EI PLC user's manual.

Connecting terminating resistors

(1) GOT side

Set the terminating resistor setting switch of the GOT main unit to "Disable".

For the procedure to set the terminating resistor, refer to the following.

1.4.3 Terminating resistors of GOT


(2) KOYO EI PLC

To connect a KOYO EI PLC to a GOT, a terminating resistor must be set to the KOYO EI PLC.

7.4 GOT Side Settings

7.4.1 Setting communication interface (Communication settings)

Set the channel of the equipment to be connected to the GOT.

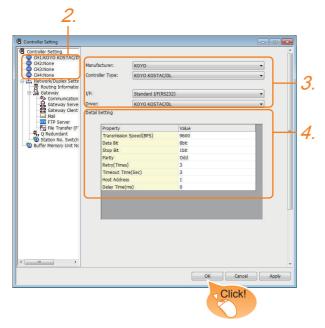

- Select [Common] → [Controller Setting] from the menu.
- 2. The Controller Setting window is displayed. Select the channel to be used from the list menu.
- Set the following items.

Manufacturer: KOYO

Controller Type: KOYO KOSTAC/DL

I/F: Interface to be usedDriver: KOYO KOSTAC/DL

 The detailed setting is displayed after Manufacturer, Controller Type, I/F, and Driver are set. Make the settings according to the usage environment.

7.4.2 Communication detail settings

Click the [OK] button when settings are completed.



The settings of connecting equipment can be confirmed in [I/F Communication Setting]. For details, refer to the following.

1.1.2 I/F communication setting

7.4.2 Communication detail settings

Make the settings according to the usage environment.

Property	Value
Transmission Speed(BPS)	9600
Data Bit	8 bit
Stop Bit	1 bit
Parity	Odd
Retry(Times)	3
Timeout Time(Sec)	3
Host Address	1
Delay Time(ms)	0

Item	Description	Range
Transmission Speed	Set this item when change the transmission speed used for communication with the connected equipment. (Default: 9600bps)	9600bps, 19200bps, 38400bps, 57600bps, 115200bps
Data Bit	Set this item when change the data length used for communication with the connected equipment. (Default: 8bits)	7bits/8bits
Stop Bit	Specify the stop bit length for communications. (Default: 1bit)	1bit/2bits
Parity	Specify whether or not to perform a parity check, and how it is performed during communication. (Default: Odd)	None Even Odd
Retry	Set the number of retries to be performed when a communication error occurs. (Default: 3times)	0 to 5times
Timeout Time	Set the time period for a communication to time out. (Default: 3sec)	1 to 50sec
Delay Time	Set this item to adjust the transmission timing of the communication request from the GOT. (Default: 0ms)	0 to 300ms
Host Address	Specify the host address (station No. of the GOT to which the PLC is connected) in the connected network. (Default: 1)	1 to 90



(1) Communication interface setting by the Utility The communication interface setting can be changed on the Utility's [Communication Settings] after writing [Communication Settings] of project data.

For details on the Utility, refer to the following manual.

GOT2000 Series User's Manual (Utility)

(2) Precedence in communication settings When settings are made by GT Designer3 or the Utility, the latest setting is effective.

7.5 PLC Side Setting



KOYO EI PLC

For details of KOYO EI PLCs, refer to the following manuals.

KOYO EI PLC user's Manual

■ PLC CPU

Model nar	Refer to	
KOSTAC SU	SU-5E/6B	7.5.1
Series	SU-5M/6M	7.5.2
DirectLOGIC 05 Series DirectLOGIC 06 Series	7.5.3	
DirectLOGIC 205 Series	7.5.4	
PZ series	7.5.5	

■ Data Communications Module

Model nan	Refer to	
Host Link Module U-01DM		7.5.6
Data Communications	D0-DCM	7.5.7
Module	D2-DCM	7.5.8

7.5.1 Connecting to SU-5E/6B


Communication settings

Make the following settings using the programmer system parameter setting.

Item	Set value
Station No.	1 to 90
Transmission mode	HEX
Parity	NONE, ODD
Data bit	8 bit (Fixation)
Stop bit	1 bit (Fixation)

Setting DIP switches

Set the transmission speed using the CPU DIP switch.

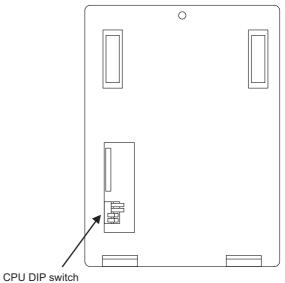



Item	Set value	Switch No.		
пеш	Set value	3	4	
Transmission	9600bps	ON	OFF	
speed*1	19200bps	ON	ON	

Indicates only the transmission speeds that can be set on the $\ensuremath{\mathsf{GOT}}$ side.

Set the same transmission speed of the GOT. For the transmission speed setting on the GOT side, refer to the following.

7.4.1 Setting communication interface (Communication settings)

7.5.2 Connecting to SU-5M/6M

Communication settings

Make the following settings using the programmer system parameter setting.

Item	Set value
Protocol	ССМ
Response delay time	0ms
Timeout Time	800ms/960ms/1200ms/1600ms/4000ms/ 8000ms/16000ms/40000ms
Station No.	1 to 90
Transmission mode	HEX
Stop bit	1bit, 2bits
Data bit	8bits (Fixed)
Parity	NONE, ODD, EVEN
Transmission speed*1	9600bps, 19200bps, 38400bps

Indicates only the transmission speeds that can be set on the GOT side

Set the same transmission speed of the GOT. For the transmission speed setting on the GOT side, refer to the following



7.4.1 Setting communication interface (Communication settings)

7.5.3 Connecting to DirectLOGIC 05 series or DirectLOGIC 06 series

Communication settings

Make the following settings using the programmer system parameter setting.

Item	Set value
Protocol	CCM NET (DirectNET)
Timeout	780ms or more
RTS On Delay Time	0ms*1
RTS Off Delay Time	0ms*1
Station No.	1 to 90
Transmission speed*2	9600bps, 19200bps, 38400bps
Stop bit	1bit, 2bits
Parity	NONE, ODD, EVEN
Communication format	HEX

To use a PLC with multidrop, set the "RTS on delay time" to 5ms or more and the "RTS off delay time" to 2ms or more.

Indicates only the transmission speeds that can be set on

Set the same transmission speed of the GOT. For the transmission speed setting on the GOT side, refer to the following

7.4.1 Setting communication interface (Communication settings)

7.5.4 Connecting to DirectLOGIC 205 series

Communication settings

Make the following settings using the programmer system parameter setting.

Item	Set value
Protocol	CCM NET (DirectNET)
Station No.	1 to 90
Transmission speed*1	9600bps, 19200bps, 38400bps
Data bit	8bits (fixed)
Stop bit	1bit (fixed)
Parity	NONE, ODD
Self-diagnostic mode	OFF
Response delay time	0ms
Peer to Peer	OFF
Master/Slave	Slave
Timeout	Enable
Transmission mode	HEX
MODBUS	OFF

Indicates only the transmission speeds that can be set on the GOT side

Set the same transmission speed of the GOT. For the transmission speed setting on the GOT side, refer to the following



7.4.1 Setting communication interface (Communication settings)

7.5.5 Connecting to PZ Series

Communication settings

Make the following settings using the programmer system parameter setting.

Item	Set value
Protocol	CCM NET
Timeout	800ms/960ms/1200ms/1600ms/4000ms/ 8000ms/16000ms/40000ms
Response delay time	0ms
Station No.	1 to 90
Communication format	HEX
Transmission speed*1	9600bps, 19200bps, 38400bps
Stop bit	1bit
Parity	NONE, ODD

Indicates only the transmission speeds that can be set on the GOT side.


Set the same transmission speed of the GOT. For the transmission speed setting on the GOT side, refer to the following.

7.4.1 Setting communication interface (Communication settings)


7.5.6 Connecting to U-01DM

Setting switches

Make the communication settings using each setting switch.

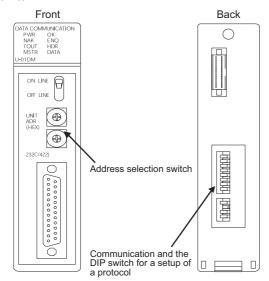


(1) Address selection switch(SW2, SW3)

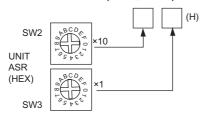

Switch No.	Settings	Setting details
SW2	Code higher rank (10 ¹ figures)	01 to 5A
SW3	Code low rank (10 ⁰ figures)	01 to 3A


(2) Communication and the DIP switch for a setup of a protocol(SW4)

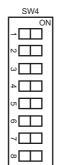

Setting	Set value	Set value Switch No.							
item	Oct value	1	2	3	4	5	6	7	8
Transmissio	9600bps	OFF	ON	ON					
n speed*1	19200bps	ON	ON	ON					
поресс	38400bps	OFF	OFF	OFF					
Parity	ODD				ON				
ranty	NONE				OFF				
Self- diagnostic	OFF					OFF			
Response delay time	0ms						OFF	OFF	OFF

- *1 Indicates only the transmission speeds that can be set on the GOT side
 - Set the same transmission speed of the GOT. For the transmission speed setting on the GOT side, refer to the following.
 - 7.4.1 Setting communication interface (Communication settings)

(3) Communication and the DIP switch for a setup of a protocol(SW5)

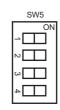

Item	Set value		Switc	h No.	
item	Set value	1	2	3	4
Peer to Peer	OFF	OFF			
M/S	Slave		OFF		
TOUT existence	Enable			OFF	
ASCII/HEX	HEX				OFF

7.5.7 Connecting to D0-DCM

Communication settings


Write the following communication settings to the specified register using the programmer. For details of the register, refer to the following manual.

KOYO EI PLC user's Manual

Item	Set value
Transmission mode	HEX
Protocol	DirectNet
Station No.	1 to 90
Transmission speed*1	9600bps, 19200bps, 38400bps, 57600bps, 115200bps
Parity	NONE, ODD, EVEN (Only communication port 2)
RTS On Delay Time (Only communication port 2)	0ms
RTS Off Delay Time (Only communication port 2)	0ms
Timeout (Only communication port 2)	800ms/960ms/1200ms/1600ms/4000ms/ 8000ms/16000ms/40000ms
485 mode selection (Only communication port 2)	RS232, RS422/485 4 line type
Data bit (Only communication port 2)	8bits, 7bits
Stop bit (Only communication port 2)	1bit, 2bits
The timeout between characters (Only communication port 2)	0 to 9999ms
The completion of a setting	Default use,A preset value is effective
Reset timeout	Invalid,Effective

^{*1} Indicates only the transmission speeds that can be set on the GOT side.

Set the same transmission speed of the GOT.
For the transmission speed setting on the GOT side, refer to the following.

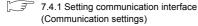

7.5.8 Connecting to D2-DCM

Communication settings

Make the following settings using the programmer.

Item	Set value
Station No.	1 to 90
Transmission speed*1	9600bps, 19200bps, 38400bps
Data bit	8bits (fixed)
Stop bit	1bit (fixed)
Parity	NONE, ODD
Self-diagnostic mode	OFF
Response delay time	0ms
Peer to Peer	OFF
Master/Slave	Slave
Timeout	Enable
Transmission mode	HEX
MODBUS	OFF

^{*1} Indicates only the transmission speeds that can be set on the GOT side.


Set the same transmission speed of the GOT. For the transmission speed setting on the GOT side, refer to the following.

7.4.1 Setting communication interface (Communication settings)

7.5.9 Station No. settings

Set each station number so that no station number overlaps.

The station number can be set without regard to the cable connection order. There is no problem even if station numbers are not consecutive.

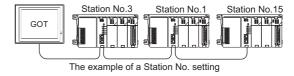

(1) Direct specification

Specify the station No. of the PLC to be changed when setting device.

Specification range				
1 0				
1 to 90				

7.6 Device Range that Can Be Set

The device ranges of controller that can be used for GOT are as follows.

Note that the device ranges in the following tables are the maximum values that can be set in GT Designer3.

The device specifications of controllers may differ depending on the models, even though belonging to the same series.

Please make the setting according to the specifications of the controller actually used.

When a non-existent device or a device number outside the range is set, other objects with correct device settings may not be monitored.

Setting item



Item	Description			
Device	Set the device name, device number, and bit number. The bit number can be set only when specifying the bit of word device.			
Information	Displays the device type and setting range which are selected in [Device].			
	Set the monitor target of the set device.			
Network	Station No.	Select this item when monitoring the PLC of the specified station No.		

7.6.1 KOYO EI PLC (KOYO KOSTAC/DL)

	Device name	Setting range	Device No. represent ation
	Input (I)*5	I0 to I1777	
	Output (Q)*5	Q0 to Q1777	
	Link relay (GI)	GI0 to GI3777	
Bit device	Link output (GQ)	GQ0 to GQ3777	
	Internal relay (M)	M0 to M3777	
	Stage (S)	S0 to S1777	Octal
	Timer (T)	T0 to T377	
	Counter (C)	C0 to C377	
	Special relay (SP)*1	SP0 to SP777	
	Timer (current value) (R)	R0 to R377	
	Preparatory register (R)*5	R400 to R677	
	Special register 1 (R)*1*5	R700 to R777	
	Timer (current value) (R)*3	R1000 to R1377	
	Data register 1 (R)*2*5	R1400 to R7377	
	Special register 2 (R)*1*4*5	R7400 to R7777	
a)	Data register 2 (R)*5	R10000 to R36777	
Word device	Special register 3 (R)*1*5	R37000 to R37777	
ord o	Link relay (R)	R40000 to R40177	
Š	Link output (R)	R40200 to R40377	
	Input (R)	R40400 to R40477	
	Output (R)	R40500 to R40577	
	Internal relay (R)	R40600 to R40777	
	Stage (R)	R41000 to R41077	
	Timer (R)	R41100 to R41117	
	Counter (R)	R41140 to R41157	
	Special relay (R)	R41200 to R41237	

- *1 Read-only device for KOSTAC SU series
- *2 The GOT cannot write data to R7377 for the SU-5M and SU-6M.
- *3 For Direct Logic 05 series and Direct Logic 06 series, devices from R1200 to R1377 are used as V-memory 2.
- *4 The GOT cannot write data to devices from R7766 to R7774 (calendar area).
- *5 The device names differ according to the series.

 The following shows the device names for each series.

KOSTAC SU PZ	Direct Logic 05 Direct Logic 06	Direct Logic 205
Input	Input relay	Input
Output	Output relay	Output
Preparatory register	V-memory 1	Data register 1
Special register 1	System parameter 1	System parameter 1
Data register 1	V-memory 2	Data register 2
Special register 2	System parameter 2	System parameter 2
Data register 2	V-memory 3	Data register 3
Special register 3	System parameter 4	System parameter 4

7.7 Precautions

■ GOT clock control

The GOT clock function is available only for the PLC with a calendar function. Note: Although the "time adjusting" and "time broadcast" functions can be selected on the GOT, the "time broadcast" function is not available. Do not select the "time broadcast" function. If both of the functions are selected, not only the "time broadcast" function but also the "time adjusting" function will be disabled.

8

CONNECTION TO JTEKT PLC

8.1	Connectable Model List
8.2	System Configuration
8.3	Connection Diagram 8 - 10
8.4	GOT Side Settings
8.5	PLC Side Setting
8.6	Device Range that Can Be Set 8 - 19
8.7	Precautions

8. CONNECTION TO JTEKT PLC

8.1 Connectable Model List

The following table shows the connectable models.


Model name	Model type	Clock	Communication Type	Connectable GOT	Refer to
PC3JG-P	TIC-6088				
PC3JG	TIC-6125		RS-232	GT GT GT	
PC3JD	TIC-5642	0	RS-422	ет ет 27 25 23	8.2.1
PC3JD-C	TIC-6029				
PC3J*1	TIC-5339	0	RS-232	ет ет ет 27 25 23	
PC3JL	TIC-5783	0	RS-422	27 25 23	8.2.2
PC2J	THC-2764				8.2.3
PC2JS	THC-2994	0	RS-232 RS-422	27 25 23	
PC2JR	THC-5053				
PC2JC	THC-5070				
PC2J16P	THC-5169	0	RS-232 RS-422	27 25 23	8.2.4
PC2J16PR	THC-5173				

^{*1} Use PC3J of the version 2.1 or later.

8.2 System Configuration

8.2.1 Connecting to PC3JG, PC3JG-P, PC3JD or PC3JD-C

■ For the RS-422 connection

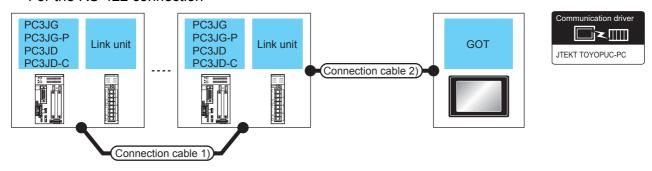


	PLC		Connection cable 1)	Connection cable 2)	Max.	GOT		Number of	
Model name	Link unit*1	Commu nication Type	Cable model Connection diagram number	Cable model Connection diagram number	dista nce	Option device	Model	connectable equipment	
PC3JG PC3JG-P	PC/CMP2- LINK	RS-422	User RS-422	GT09-C30R41201-6C(3m) GT09-C100R41201-6C(10m) GT09-C200R41201-6C(20m) GT09-C300R41201-6C(30m)	500m	- (Built into GOT)	ет ет 27 25 ет 23	32 PLCs for	
PC3JD-C	(THU-5139)	110-422	connection diagram 4)	User RS-422 connection diagram 7)	30011	GT15-RS4-9S	ет ет 27 25	1 GOT	

The link unit is a product manufactured by JTEKT Corporation. For details of the product, contact JTEKT Corporation.

■ For the RS-232 connection (via an interface converter)



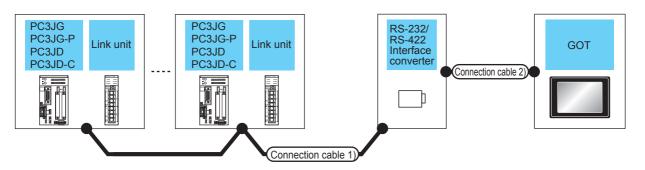

	PLC	Connection ca	able 1)	RS-232/ interface c		Connection cable 2)		GOT		Number of
Model name	Link unit ^{*1}	Cable model Connection diagram number	Max. distan ce	Model name	Commu nication Type	Cable model Connection diagram number	Max. dista nce	Option device	Model	connectable equipment
		User RS-422 connection	500m	TXU-	RS-232	GT09-C30R21201- 25P(3m) or	15m	- (Built into GOT)	27 25 27 25 23	
		diagram 1)		2051		User RS-232 connection diagram 1)	. •	GT15-RS2-9P	ет ет 27 25	
PC3JG PC3JG-P	PC/CMP- LINK (THU-2755)	User RS-422	500m	TXU-	RS-232	GT09-C30R21201- 25P(3m) or	15m	- (Built into GOT)	27 25 GT 23	32 PLCs for
PC3JD PC3JD-C	2PORT-LINK (THU-2927)	K diagram 2)		2051		(User) RS-232 connection diagram 1)		GT15-RS2-9P	ет ет 27 25	1 GOT
	PC/CMP2- LINK	(preparing): (O :		TXU-	RS-232	GT09-C30R21201- 25P(3m) or	15m	- (Built into GOT)	27 25 GT 25 23	
	(THU-5139)	connection diagram 3)	500m	2051	110-202	User RS-232 connection diagram 1)	13111	GT15-RS2-9P	ет ет 27 25	


^{*1} The link unit is a product manufactured by JTEKT Corporation. For details of the product, contact JTEKT Corporation.

^{*2} The interface converter is a product manufactured by JTEKT Corporation. For details of the product, contact JTEKT Corporation.

8.2.2 Connecting to PC3J or PC3JL

■ For the RS-422 connection




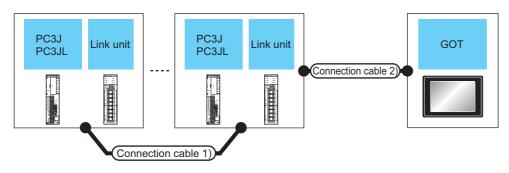

	PLC		Connection cable 1)	Connection cable 2)		GOT		Number of
Model name	Link unit*1	Commu nication Type	Cable model Connection diagram number	Cable model Connection diagram number	Max. distance	Option device	Model	connectable equipment
	-	RS-422	(User) RS-422	GT09-C30R41201-6C(3m) GT09-C100R41201-6C(10m) GT09-C200R41201-6C(20m) GT09-C300R41201-6C(30m)	500m	- (Built into GOT)	27 25 GT 25 23	
PC3J			connection diagram 6)	or (User) RS-422 connection diagram 7)	Coom	GT15-RS4-9S	ет ет 27 25	32 PLCs for
PC3JL	PC/CMP2-LINK	RS-422	(User) RS-422	GT09-C30R41201-6C(3m) GT09-C100R41201-6C(10m) GT09-C200R41201-6C(20m) GT09-C300R41201-6C(30m)	500m	- (Built into GOT)	ет ет 27 25 ет 23	1 GOT
	(THU-5139)	110 422	connection diagram 4)	or (User) RS-422 connection diagram 7)	300111	GT15-RS4-9S	ет ет 27 25	

^{*1} The link unit is a product manufactured by JTEKT Corporation. For details of the product, contact JTEKT Corporation.

■ For the RS-232 connection (via interface converter)

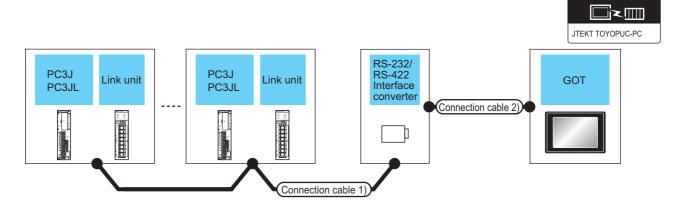

	PLC	Connection ca	able 1)	RS-232/ interface c		Connection cable 2)		GOT		Number of
Model name	Link unit ^{*1}	Cable model Connection diagram number	Max. distan ce	Model name	Commu nication Type	Cable model Connection diagram number	Max. dista nce	Option device	Model	connectable equipment
	-	Connection diagram 1) - User RS-422 connection diagram 5)	500m	TXU-	RS-232	GT09-C30R21201-25P(3m) or	15m	- (Built into GOT)	27 25 GT 23	
				2051	202	User) RS-232 connection diagram 1)		GT15-RS2-9P	ет ет 27 25	
			500	TXU-	RS-232	RS-232	GT09-C30R21201-25P(3m) or	15m	- (Built into GOT)	27 25 GT 25 GT 23
PC3J				2051		User) RS-232 connection diagram 1)		GT15-RS2-9P	ет ет 27 25	32 PLCs for
PC3JL	PC/CMP- LINK (THU-2755)	User preparing RS-422	500m	TXU-	RS-232	GT09-C30R21201-25P(3m) or	15m	- (Built into GOT)	27 25 GT 25 GT 23	1 GOT
	2PORT-LINK (THU-2927)	diagram 2)		2051		(User) RS-232 connection diagram 1)		GT15-RS2-9P	ет ет 27 25	
_	PC/CMP2-	User RS-422	500m	TXU-	RS-232	GT09-C30R21201-25P(3m) or	15m	- (Built into GOT)	27 25 GT 23	
	PC/CMP2- LINK (THU-5139)	connection 500m 2051 RS-232	202	S-232 (User) RS-232 connection diagram 1)		GT15-RS2-9P	ет ет 27 25			


^{*1} The link unit is a product manufactured by JTEKT Corporation. For details of the product, contact JTEKT Corporation.

^{*2} The interface converter is a product manufactured by JTEKT Corporation. For details of the product, contact JTEKT Corporation.

8.2.3 Connecting to PC2J, PC2JS or PC2JR

■ For the RS-422 connection



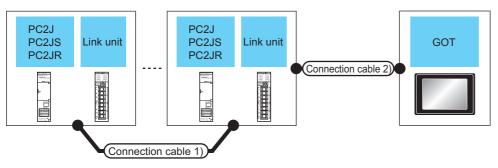


	PLC		Connection cable 1)	Connection cable 2)		GOT		Number of
Model name	Link unit ^{*1}	Commu nication Type	Cable model Connection diagram number	Cable model Connection diagram number	Max. distance	Option device	Model	connectable equipment
PC2J PC2JS	PC/CMP2- LINK	RS-422	(User) RS-422	GT09-C30R41201-6C(3m) GT09-C100R41201-6C(10m) GT09-C200R41201-6C(20m) GT09-C300R41201-6C(30m)	500m	- (Built into GOT)	27 25 GT 23	32 PLCs for
PC2JR	(THU-5139)	NO-422	connection diagram 4)	or (User) RS-422 connection diagram 7)	300111	GT15-RS4-9S	ет ет 27 25	4.007

^{*1} The link unit is a product manufactured by JTEKT Corporation. For details of the product, contact JTEKT Corporation.

■ For the RS-232 connection (via interface converter)



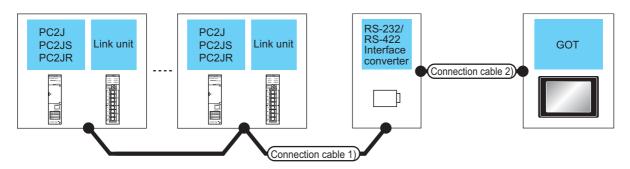


	PLC	Connection cable 1)		RS-232/RS-422 interface converter*2		Connection cable 2)		GOT		Number of
Model name	Link unit ^{*1}	Cable model Connection diagram number	Max. distan ce	Model name	Commu nication Type	Cable model Connection diagram number	Max. dista nce	Option device	Model	connectable equipment
	PC/CMP-LINK (THU-2755)	User RS-422 connection	500m	TXU-	RS-232	GT09-C30R21201- 25P(3m) or	15m	- (Built into GOT)	27 25 GT 23	
PC2J PC2JS	2PORT-LINK (THU-2927)	diagram 2)		2051		User RS-232 connection diagram 1)		GT15-RS2-9P	27 eT 27 25	32 PLCs for 1
PC2JR	PC/CMP2- LINK (THU-5139)	preparing) 130 422	500m	TXU-	J- RS-232	GT09-C30R21201- 25P(3m) or	15m	- (Built into GOT)	27 25 GT 25 GT 23	GOT
		COMMECTION		2051	NO-232	User RS-232 connection diagram 1)	IOIII	GT15-RS2-9P	ет 27 25	

- *1 The link unit is a product manufactured by JTEKT Corporation. For details of the product, contact JTEKT Corporation.
- *2 The interface converter is a product manufactured by JTEKT Corporation. For details of the product, contact JTEKT Corporation.

8.2.4 Connecting to PC2JC, PC2J16P or PC2J16PR

■ For the RS-422 connection



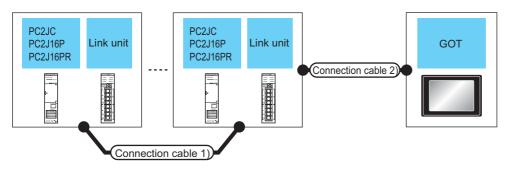


	PLC		Connection cable 1) Connection cable 2)			GOT		Number of	
Model name	Link unit ^{*1}	Commu nication Type	Cable model Connection diagram number	Cable model Connection diagram number	Max. distance	Option device	Model	connectable equipment	
PC2JC PC2J16P	PC/CMP2-LINK (THU-5139)	PC/CMP2-LINK RS-422	(User) RS-422	(User) (repring) RS-422	500m	- (Built into GOT)	9T 27 25 23	32 PLCs for	
PC2J16PR		110-422	connection diagram 4)	connection diagram 7)	300111	GT15-RS4-9S	ет ет 27 25	4.00T	

^{*1} The link unit is a product manufactured by JTEKT Corporation. For details of the product, contact JTEKT Corporation.

■ For the RS-232 connection (via interface converter)



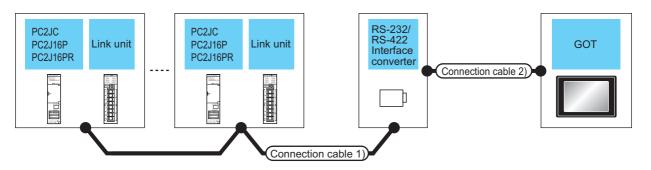

	PLC	Connection ca	able 1)		2/RS-422 converter*2	Connection cable 2))	GOT	Г	Number of		
Model name	Link unit ^{*1}	Cable model Connection diagram number	Max. distan ce	Model name	Communi cation Type	Cable model Connection diagram number	Max. dista nce	Option device	Model	connectable equipment		
		(User) RS-422	500m	TXU-	RS-232	GT09-C30R21201- 25P(3m) or	15m	- (Built into GOT)	27 25 67 23			
		connection diagram 1)		2051		(User) RS-232 connection diagram 1)		GT15-RS2-9P	ет ет 27 25			
PC2JC PC2J16P	PC/CMP-LINK (THU-2755)	(755) (User) RS-422 connection	500m	TXU-	RS-232	GT09-C30R21201- 25P(3m) or	15m	- (Built into GOT)	27 25 GT 23	32 PLCs for		
PC2J16P R	2PORT-LINK (THU-2927)		Soom	2051	01	(User) RS-232 connection diagram 1)		GT15-RS2-9P	ет ет 27 25	1 GOT		
	PC/CMP2- LINK (THU-5139)	(preparing). CO 122				TXU-	TXU-	GT09-C30R21201- 25P(3m) or	15m	- (Built into GOT)	27 25 er 23	
		LINK connection		300111	2051	RS-232	(User) RS-232 connection diagram 1)	751	GT15-RS2-9P	27 eT 27 25		

^{*1} The link unit is a product manufactured by JTEKT Corporation. For details of the product, contact JTEKT Corporation.

^{*2} The interface converter is a product manufactured by JTEKT Corporation. For details of the product, contact JTEKT Corporation.


8.3 Connection Diagram

The following diagram shows the connection between the GOT and the PLC.

8.3.1 RS-232 cable

Connection diagram

(1) RS-232 connection diagram 1)

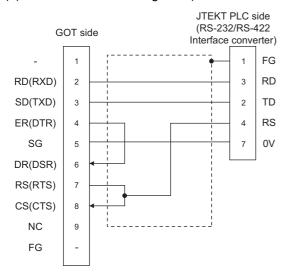

Precautions when preparing a cable

(2) Cable length

The length of the RS-232 cable must be 15m or less.

(3) GOT side connector

For the GOT side connector, refer to the following.

1.4.1 GOT connector specifications


(4) JTEKT PLC side connector

Use the connector compatible with the JTEKT PLC side module.

For details, refer to the JTEKT PLC user's manual.


■ Connection diagram

(1) RS-422 connection diagram 1) (For PC3JG-P/PC3JG/PC3JD/PC3JD-C)

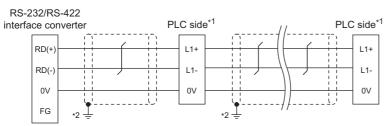


- *1 Terminating resistors should not be provided for a PLC and an RS-232/RS-422 interface converter which will be terminals.
- *2 Connect FG grounding to the appropriate part of a cable shield line.

(For PC3J/PC3JL)

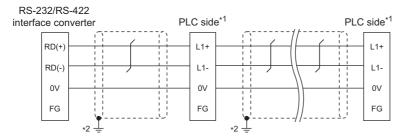


- *1 Terminating resistors should not be provided for a PLC and an RS-232/RS-422 interface converter which will be terminals.
- *2 Connect FG grounding to the appropriate part of a cable shield line.

(For PC2JC/PC2J16P, PC2J16PR)

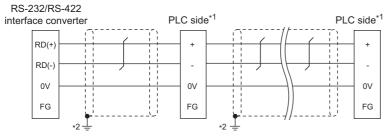


- *1 Terminating resistors should not be provided for a PLC and an RS-232/RS-422 interface converter which will be terminals.
- *2 Connect FG grounding to the appropriate part of a cable shield line.

(2) RS-422 connection diagram 2)

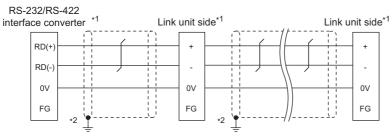


- *1 Terminating resistors should not be provided for a PLC and an RS-232/RS-422 interface converter which will be terminals.
- *2 Connect FG grounding to the appropriate part of a cable shield line.

(3) RS-422 connection diagram 3)

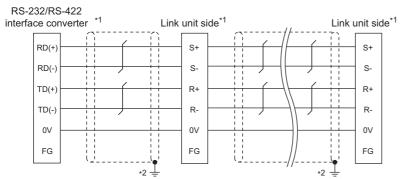


- *1 Terminating resistors should not be provided for a PLC and an RS-232/RS-422 interface converter which will be terminals.
- *2 Connect FG grounding to the appropriate part of a cable shield line.

(4) RS-422 connection diagram 4)

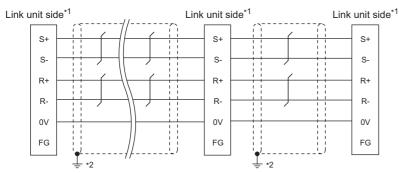


- *1 Terminating resistors should not be provided for a PLC and an RS-232/RS-422 interface converter which will be terminals.
- *2 Connect FG grounding to the appropriate part of a cable shield line.

(5) RS-422 connection diagram 5)

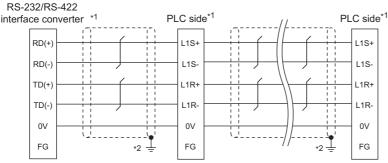


- *1 Terminating resistors should not be provided for a PLC and an RS-232/RS-422 interface converter which will be terminals.
- *2 Connect FG grounding to the appropriate part of a cable shield line.

(6) RS-422 connection diagram 6)

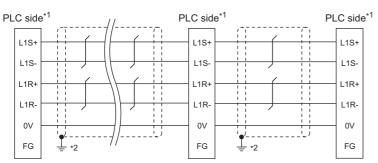

- 1 Terminating resistors should not be provided for a PLC and an RS-232/RS-422 interface converter which will be terminals.
- 2 Connect FG grounding to the appropriate part of a cable shield line.

(7) RS-422 connection diagram 7)

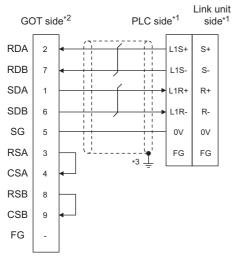

- *1 Terminating resistors should not be provided for a PLC and an RS-232/RS-422 interface converter which will be terminals.
- *2 Set the terminating resistor of GOT side which will be a terminal.
 - Connecting terminating resistors
- *3 Connect FG grounding to the appropriate part of a cable shield line

Precautions when preparing a cable

(8) Cable length

The maximum length of the RS-422 cable must be 500m or less.

(9) GOT side connector

For the GOT side connector, refer to the following.

1.4.1 GOT connector specifications

(10)JTEKT PLC side connector

Use the connector compatible with the JTEKT PLC side module.

For details, refer to the JTEKT PLC user's manual.

Connecting terminating resistors

(1) GOT side

Set the terminating resistor setting switch of the GOT main unit to "Disable".


For the procedure to set the terminating resistor, refer to the following.

1.4.3 Terminating resistors of GOT

8.4 GOT Side Settings

8.4.1 Setting communication interface (Communication settings)

Set the channel of the equipment to be connected to the GOT

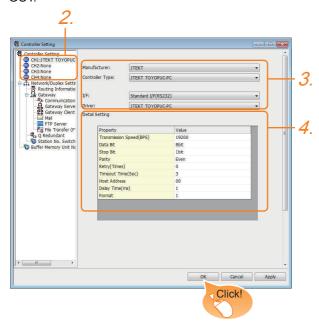

- Select [Common] → [Controller Setting] from the menu.
- 2. The Controller Setting window is displayed. Select the channel to be used from the list menu.
- Set the following items.
 - · Manufacturer: JTEKT
 - · Controller Type: JTEKT TOYOPUC-PC
 - I/F: Interface to be used
 - Driver: JTEKT TOYOPUC-PC
- The detailed setting is displayed after Manufacturer, Controller Type, I/F, and Driver are set. Make the settings according to the usage environment.

8.4.2 Communication detail settings

Click the [OK] button when settings are completed.



The settings of connecting equipment can be confirmed in [I/F Communication Setting]. For details, refer to the following.

1.1.2 I/F communication setting

8.4.2 Communication detail settings

Make the settings according to the usage environment.

Property	Value
Transmission Speed(BPS)	19200
Data Bit	8 bit
Stop Bit	1 bit
Parity	Even
Retry(Times)	0
Timeout Time(Sec)	3
Host Address	00
Delay Time(ms)	1
Format	1

Item	Description	Range
Transmission Speed	Set this item when change the transmission speed used for communication with the connected equipment. (Default: 19200bps)	9600bps, 19200bps, 38400bps, 57600bps, 115200bps
Data Bit	Set this item when change the data length used for communication with the connected equipment. (Default: 8bits)	7bits/8bits
Stop Bit	Specify the stop bit length for communications. (Default: 1bit)	1bit/2bits
Parity	Specify whether or not to perform a parity check, and how it is performed during communication. (Default: Even)	None Even Odd
Retry	Set the number of retries to be performed when a communication error occurs. (Default: 0time)	0 to 5times
Timeout Time	Set the time period for a communication to time out. (Default: 3sec)	3 to 30sec
Host Address	Specify the host address (station No. of the GOT to which the PLC is connected) in the connected network. (Default: 00)	00 to 37 (Octal)
Delay Time	Set this item to adjust the transmission timing of the communication request from the GOT. (Default: 0)	0 to 300ms
Format	Select the communication format. (Default: 1) format 1: PC3J extended function incompliant format 2: PC3J extended function compliant	1/2



(1) Format setting

The compatible format of PLC differs depending on model.

Model name	Compatible format
PC2J, PC2JS, PC2JR, PC2JC, PC2J16P, PC2J16PR	Format 1 only
PC3JG, PC3JG-P, PC3JD, PC3JD-C, PC3J, PC3JL	Format 1 or Format 2

For details of PC3J extended function, refer to the following manual.

- JTEKT PLC user's manual
- (2) Communication interface setting by the Utility
 The communication interface setting can be
 changed on the Utility's [Communication Settings]
 after writing [Communication Settings] of project
 data.

For details on the Utility, refer to the following manual.

- GOT2000 Series User's Manual (Utility)
- (3) Precedence in communication settings
 When settings are made by GT Designer3 or the
 Utility, the latest setting is effective.

PLC Side Setting 8.5



JTEKT PLC

For details of JTEKT PLCs, refer to the following manuals.

JTEKT PLC user's manual

Model name		Refer to
PLC CPU	PC3JG, PC3JG-P, PC3JD, PC3JD-C, PC3J, PC3JL, PC2J, PC2JS, PC2JR	8.5.1
	PC2JC	8.5.2
	PC2J16P, PC2J16RR	8.5.3
RS-232/RS-422 interface converter	RS-232/RS-422 interface converter	8.5.4
	PC/CMP-LINK	
Link unit	2PORT-LINK	8.5.5
	PC/CMP2-LINK	

8.5.1 Connecting to PC3JG, PC3JD, PC3JD-C, PC3JG-P, PC3J, PC3JL, PC2J, PC2JS or PC2JR

Communication settings

Make the communication settings using the PLC peripheral device (PCwin).

Item	Set value
Transmission speed*1	9600bps, 19200bps, 38400bps
Data bit*1	8bits, 7bits
Parity bit	Even (fixed)
Stop bit*1	1bit, 2bits
Station No.*2	0 to 37 (Octal)
2-wire/4-wire type*3	2-wire type or 4-wire type

- Adjust the settings with GOT settings
- *2 Avoid duplication of the station No. with any of the other
- Make the settings referring to the following connection diagram.

8.3.2 RS-422 cable

8.5.2 Connecting to PC2JC

Communication settings

Make the communication settings using each setting

For the detail settings, refer to the following manual.


JTEKT PLC user's manual

Item	Set value
Transmission speed*1	9600bps, 19200bps
Data bit ^{*1}	8bits, 7bits
Stop bit*1	1bit, 2bits
Station No.*1	0 to 37 (Octal)

Adjust the settings with GOT settings.

Settings by switch

Make the communication settings using each setting switch.

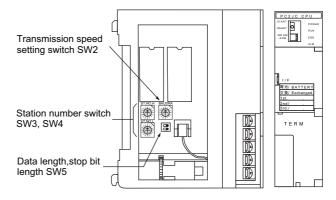

(1) Setting of the station No.

Set the station No. between 00 and 37 (Octal).

Switch name	Station number setting
SW3	Upper digit
SW4	Lower digit

(2) Transmission speed settings

Switch name	Switch position	Transmission speed (bps)
SW2	1	19200
	2	9600

(3) Settings of data length and stop bit length

Switch name	Setting item	Set value	Switch No.	
Switch Harrie	Setting item	Oct value	2	1
	Data bit	8bits	OFF	
SW5	Data Dit	7bits	ON	
3773	Stop	2bits		OFF
	bit length	1bit		ON

8.5.3 Connecting to PC2J16P or PC2J16PR

Communication settings

Make the communication settings using each setting switch.

For the detail settings, refer to the following manual.


JTEKT PLC user's manual

Item	Set value
Transmission speed*1	9600bps, 19200bps
Data bit*1	8bits, 7bits
Stop bit*1	1bit, 2bits
Station No.*1	0 to 37 (Octal)
Selection of module type	Computer link

^{*1} Adjust the settings with GOT settings.

Settings by switch

Make the communication settings using each setting switch.

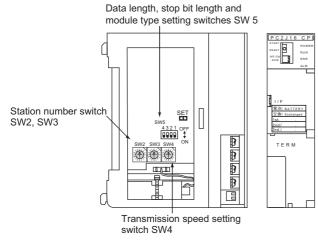

(1) Setting of the station No. Set the station No. between 00 and 37 (Octal).

Switch name	Station number setting
SW2	Upper digit
SW3	Lower digit

(2) Transmission speed settings

Switch name	Switch position	Transmission speed (bps)
SW4	1	19200
3774	2	9600

(3) Settings of data length, stop bit length and module type

Switch name	Setting item	Set value	Switch No.		
Owitch hame	Setting item	Set value	4	3	2
	Data bit	8bits	OFF		
	Data bit	7bits	ON		
SW5	Stop bit	2bits		OFF	
	length	1bit		ON	
	Module type	Computer link		1	OFF

8.5.4 RS-232/RS-422 interface converter setting

Communication settings

Make the communication settings by the setting switch of the RS-232/RS-422 interface converter.


Item	Set value
Transmission speed*1	9600bps, 19200bps
2-wire/4-wire type*2	2-wire type or 4-wire type
Echo back	OFF

- *1 Adjust the settings with GOT settings.
- *2 Set referring to the RS-422 connection diagram. For details, refer to the following.

8.3.2 RS-422 cable

Settings by switch

Make the communication settings by each setting switch of the RS-232/RS-422 interface converter.

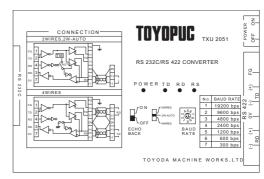

(1) Transmission speed settings

Transmission speed (bps)	Switch position	
9600	2	
19200	1	



(2) Mode setting switch

Mode	Switch position	- 2WIRES
2-wire type	2W-AUTO	2W-AUTO
4-wire type	4 WIRES	4WIRES

(3) Echoback setting switch

Setting	Switch position	
OFF	OFF	OFF ECHO BACK

8.5.5 Link unit setting

Communication settings

Make the communication settings using each setting switch of the link unit.

For the detail settings, refer to the following manual.


User's Manual of the JTEKT link unit


Item	Set value
Transmission speed*1	9600bps, 19200bps
Data bit ^{*1}	8bits, 7bits
Stop bit*1	1bit, 2bits
Station No.*1	0 to 37 (Octal)
Selection of module type	Computer link
Selection of 2-wire type or	2-wire type or 4-wire type
4- wire type*2	2-wile type of 4-wile type

- Adjust the settings with GOT settings. Set referring to the RS-422 connection diagram.For details, refer to the following.

₹ 8.3.2 RS-422 cable

Settings by switch

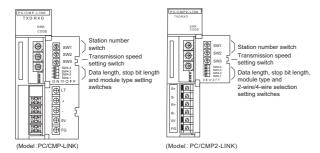

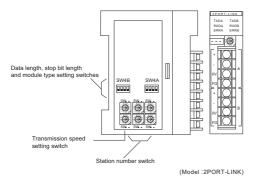

(1) Setting of the station No. Set the station No. between 00 and 37 (Octal).

Switch name	Station number setting
SW1	Upper digit
SW2	Lower digit

(2) Transmission speed settings

Switch name	Switch position	Transmission speed (bps)	
SW3	2	9600	
3443	1	19200	

(3) Data length, stop bit length, module type and 2-wire/ 4-wire type communication selection setting


Switch name	Setting item	Set value	Switch No.			
Switch Harrie	Setting item	Set value	4	3	2	1
	Data bit	8bits	OFF			
		7bits	ON			
SW4	Stop bit length	2bits		OFF		
		1bit		ON		
	Module type	PLC link			OFF	
		unit			011	
		Computer link			ON	
	2-wire type/4-	2-wire type				OFF
	wire type	communication				
	communication	4-wire type				ON
	selection*1	communication				

The setting is available only for the link unit (Model: PC/ CMP2-LINK).

8.5.6 Station number setting

Set each station number so that no station number overlaps.

The station number can be set without regard to the cable connection order. There is no problem even if station numbers are not consecutive.

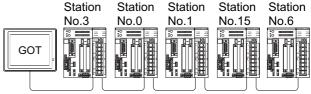

Examples of station number setting

(1) Direct specification

Specify the station No. of the PLC to be changed when setting device.

Specification range
00 to 37 (Octal)

8.6 Device Range that Can Be Set

The device ranges of controller that can be used for GOT are as follows.


Note that the device ranges in the following tables are the maximum values that can be set in GT Designer3.

The device specifications of controllers may differ depending on the models, even though belonging to the same series.

Please make the setting according to the specifications of the controller actually used.

When a non-existent device or a device number outside the range is set, other objects with correct device settings may not be monitored.

■ Setting item

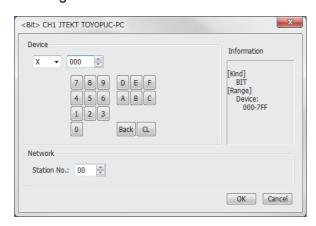

Item	Description			
Device	Set the device name, device number, and bit number. The bit number can be set only when specifying the bit of word device.			
	Program No.	Sets the number of the program for which the device is set.		
Information	Displays the device type and setting range which are selected in [Device].			
	Set the monitor target of the set device.			
Network	Station No.	Set this item when monitoring the PLC of the specified station No. (octal)		



Program number setting (when PC3JG, PC3J or PC3JD is used)

Setting of a program number is allowed for the devices indicated below.

Internal relay (M), keep relay (K), link relay (L), special relay (V), edge detection (P), timer (T), counter (C), data register (D), link register (R), special register (S), current value register (N)

8.6.1 JTEKT PLC (JTEKT TOYOPUC-PLC)

	Device name	Setting range	Device No. represen tation	
	Input (X)*1	X000 to X7FF		
	Output (Y) ^{*1}	Y000 to Y7FF		
	Link relay (L)	L000 to L7FF		
	Internal relay (M)	M000 to M7FF		
	Keep relay (K)	K000 to K2FF		
	Edge detection (P)	P000 to P1FF		
	Timer (T) ^{*1}	T000 to T1FF		
	Counter (C)*1	C000 to C1FF		
	Special relay (V)	V000 to V0FF		
	Extended input (EX)*1	EX000 to EX7FF		
	Extended output (EY)*1	EY000 to EY7FF		
vice	Extended internal relay (EM)	EM0000 to EM1FFF	Hexadeci	
3it device	Extended keep-relay (EK)	EK000 to EKFFF	mal	
ш	Extended special relay (EV)	EV000 to EVFFF		
	Extended timer (ET)*1	ET000 to ET7FF		
	Extended counter (EC)*1	EC000 to EC7FF		
	Extended link relay (EL)	EL0000 to EL1FFF		
	Extended edge detection (EP)	EP000 to EPFFF		
	Extended input 2 (GX)*1*3	GX0000 to GXFFFF		
	Extended output 2 (GY)*1*3	GY0000 to GYFFFF		
	Extended internal relay (GM) ^{*3}	GM0000 to GMFFFF		
	The bit specification of the word device (except extended buffer register, setup value register)	Setting range of each word device		
	Data register (D)	D0000 to D2FFF		
	Link register (R)	R0000 to R07FF		
	Current value register (N)	N0000 to N01FF		
	Special register (S)	S0000 to S03FF		
	File register (B)	B0000 to B1FFF		
	Extended present value register (EN)	EN0000 to EN07FF		
device	Extended setup value register (H)	H0000 to H07FF	Hexadeci	
Nord	Extended special register (ES)	ES0000 to ES07FF	mal	
_	Extended data register (U)	U0000 to U7FFF		
	Extended buffer register (EB)*3	EB00000 to EB07FFF EB08000 to EB0FFFF EB10000 to EB17FFF EB18000 to EB1FFFF		
	Setup value register (TCS)*2	TCS0000 to TCS01FF		
	The word specification of the bit device	Setting range of each bit device		

- Overlapped device designation of an input (X, EX, GX) and an output (Y, EY, GY), or a timer (T, ET) and a counter (C, EC) is not allowed.(Example: X0000 and Y0000, EX0000 and EY0000)
- *2 To store a setting value of T (timer) or C (counter), use TCS. Setting value of a timer and a counter is stored in TCS. (TCS cannot be used if a timer or a counter is not in a program.)
- 3 GX, GY, GM and EB can be used only in the PC3JG separate mode. Access to GX, GY, GM and EB through a link module is not possible.

8.7 Precautions

Station No. settings of the PLC side

In the system configuration, the PLC with the station number set with the host address must be included.For details of host address setting, refer to the following.

8.4.1 Setting communication interface (Communication settings)

■ GOT clock control

The GOT clock function is available only for the PLC with the station number set with the host address. For details of host address setting, refer to the following.

8.4.1 Setting communication interface (Communication settings)

System configuration

If the system is configured by mixing the PC3J extended function compliant PLC with the PC3J extended function incompliant PLC, normal communication may not be performed. Unify the PLCs into PC3J extended function compliant or PC3J extended function incompliant to configure the system.

System alarm

The system alarm can be displayed only for the PLC set with a host address. When connected to the PC3J extended function compliant PLC, only the system alarm of program No. 1 can be displayed.

CONNECTION TO SHARP PLC

9.1	Connectable Model List
9.2	System Configuration
9.3	Connection Diagram 9 - 7
9.4	GOT Side Settings
9.5	PLC Side Setting
9.6	Device Range that Can Be Set

9. CONNECTION TO SHARP PLC

9.1 Connectable Model List


The following table shows the connectable models.

Model name	Clock	Communication Type	Connectable GOT	Refer to
JW-21CU	×	RS-422	CI CI CI	
JW-22CU	0	RS-232 RS-422	27 25 23	9.2.1
JW-31CUH	×	RS-422		
JW-32CUH	0	RS-232 RS-422	27 25 23	9.2.2
JW-33CUH	0			
JW-50CUH	×	RS-422		
JW-70CUH	O*1		GT GT	
JW-100CUH	O*1	RS-232 RS-422	27 25 23	9.2.3
JW-100CU	0			
Z-512J	0	RS-232 RS-422	ет ет ет 27 25 23	9.2.4

^{*1} When the link unit (ZW-10CM) is used in JW-70CUH/100CUH, the clock function is not available.

System Configuration 9.2

9.2.1 Connecting to JW-21CU or JW-22CU

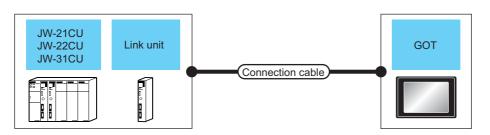




PLC			Connection cable		GOT		Number of
Model name	Link unit*1	Commu nication Type	Cable model Connection diagram number	Max. distance	Option device	Model	connectable equipment
			GT09-C30R20601-15P(3m) or	Differs according to PLC side	- (Built into GOT)	er er 27 25 er 23	
JW-22CU	_	RS-232	User RS-232 connection diagram 1)	diagram specifications.	GT15-RS2-9P	ет ет 27 25	
W 2200			GT09-C30R40601-15P(3m) GT09-C100R40601-15P(10m) GT09-C200R40601-15P(20m) GT09-C300R40601-15P(30m) or User RS-422 connection diagram 1)	Differs according to PLC side		1 GOT for 1 PLC	
				specifications.		ет ет 27 25	
JW-21CU	JW-21CM	RS-422	GT09-C30R40603-6T(3m) GT09-C100R40603-6T(10m) GT09-C200R40603-6T(20m) GT09-C300R40603-6T(30m)	Differs according to PLC side	- (Built into GOT)	ет ет 27 25 ет 23	
JW-22CU	3VV-2 TOIVI			specifications. GT15-RS4-9S	ет ет 27 25		

The link unit is a product manufactured by SHARP Corporation. For details of this product, contact SHARP Corporation.


9.2.2 Connecting to JW-31CUH, JW-32CUH or JW-33CUH

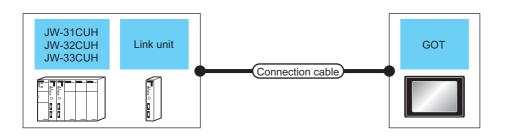



	PLC		Connection cable	Connection cable		GOT	
Model name	Link unit*1	Commu nication Type	Cable model Connection diagram number	Max. distance	Option device	Model	Number of connectable equipment
		GT09-C30R40602-15P(3m) GT09-C100R40602-15P(10m) GT09-C200R40602-15P(20m) GT09-C300R40602-15P(30m) or GT09-C300R40603-6T(3m) GT09-C300R40603-6T(10m) GT09-C200R40603-6T(20m)	` ′	Differs according to PLC side	- (Built into GOT)	er er 27 25 er 23	
JW-32CUH	GT09-C20 GT09-C20 GT09-C20 GT09-C30 User) RS-422 GT09-C30 GT09-C30 JW-21CM RS-422 GT09-C3			specifications.	GT15-RS2-9P	ет ет 27 25	
JW-33CUH			GT09-C100R40602-15P(10m) GT09-C200R40602-15P(20m)	Differs according to PLC side	- (Built into GOT)	27 25 er 23	1 GOT for 1 PLC
			, ,	specifications.	GT15-RS4-9S	ет ет 27 25	1 00110 11 20
JW-31CUH JW-32CUH			Differs according to PLC side specifications.	- (Built into GOT)	27 25 er 23		
JW-33CUH		GT09-C300R40603-6T(30m) or User (User) (RS-422 connection diagram 3)		GT15-RS4-9S	27 25		

Use the link unit supporting JW-31CUH, JW-32CUH or JW-33CUH. The link unit is a product manufactured by SHARP Corporation. For details of this product, contact SHARP Corporation.

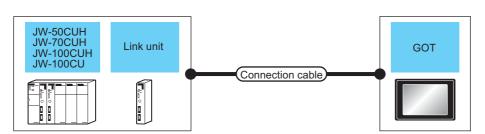




	PLC		Connection cable		GOT		Number of
Model name	Link unit*1	Commun ication Type	Cable model Connection diagram number	Max. distance	Option device	Model	connectable equipment
	RS-232		GT09-C30R20601-15P(3m) or	Differs according to	- (Built into GOT)	ет ет 27 25 ет 23	
JW-70CUH JW-100CUH	RS-	110 202	User RS-232 connection diagram 1)	PLC side specifications.	GT15-RS2-9P	ет ет 27 25	
JW-100CU		RS-422	GT09-C30R40601-15P(3m) GT09-C100R40601-15P(10m) GT09-C200R40601-15P(20m)	Differs according to PLC side specifications.	- (Built into GOT)	27 25 GT 25 GT 23	1 GOT for 1 PLC
			GT09-C300R40601-15P(30m) or User RS-422 connection diagram 1)		GT15-RS4-9S	ет ет 27 25	1 601 16 11 20
JW-50CUH JW-70CUH JW-100CUH JW-100CU		GT09-C30R40603-6T(3m) GT09-C100R40603-6T(10m) GT09-C200R40603-6T(20m)	Differs according to	- (Built into GOT)	27 25 27 25 er 23		
	ZW-10CM RS-422 GT09-C300R40603-6T(30m) or User RS-422 connection diagram 3)		PLC side specifications.	GT15-RS4-9S	ет ет 27 25		

The link unit is a product manufactured by SHARP Corporation. For details of this product, contact SHARP Corporation.

9.2.4 Connecting to Z-512J

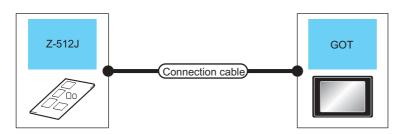



PLC)	Connection cable		GOT		
Model name	Communi cation Type	Cable model Connection diagram number	Max. distance	Option device	Model	Number of connectable equipment
Z-512J	GT09-C30R20602-15P(3m) or (User) RS-232 connection diagram 2) GT09-C30R40602-15P(3m) GT09-C100R40602-15P(10m) GT09-C200R40602-15P(20m) GT09-C300R40602-15P(30m) or (User) RS-422 connection diagram 2)	or (User) RS-232 connection diagram	Differs according to PLC side	- (Built into GOT)	er er 27 25 er 23	
			specifications.	GT15-RS2-9P	ет ет 27 25	1 GOT for 1 PLC
		GT09-C100R40602-15P(10m) GT09-C200R40602-15P(20m)	Differs according to PLC side	- (Built into GOT)	27 25 er 23	1100110111120
		specifications.	GT15-RS4-9S	ет ет 27 25		


9.3 Connection Diagram

The following diagram shows the connection between the GOT and the PLC.


9.3.1 RS-232 cable

Connection diagram

(1) RS-232 connection diagram 1)

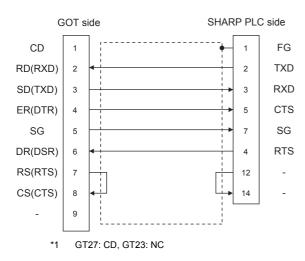

(2) RS-232 connection diagram 2)

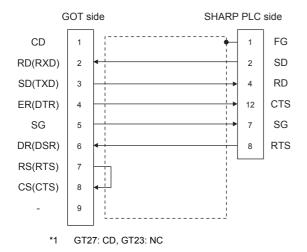

Precautions when preparing a cable

(3) Cable length

The maximum length of the RS-232 cable differs according to the specifications of the SHARP PLC. For details, refer to the following manual.

SHARP PLC user's Manual

(4) GOT side connector

For the GOT side connector, refer to the following.

1.4.1 GOT connector specifications

(5) SHARP PLC side connector


Use the connector compatible with the SHARP PLC side module.

For details, refer to the SHARP PLC user's manual.

9.3.2 RS-422 cable


Connection diagram

(1) RS-422 connection diagram 1)

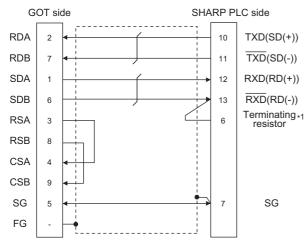


*1 Connect the terminating resistor at pin 6 with pin 13 (RXD) only at the terminal station. (Valid for JW-70CUH and JW-100CUH. The terminating resistor does not exist in JW-22CU and JW-100CU.)

(2) RS-422 connection diagram 2)

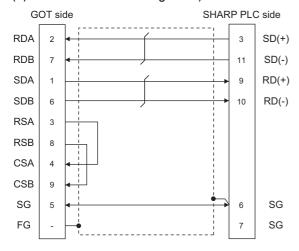

(3) RS-422 connection diagram 3)

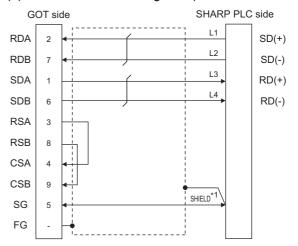

1 Two SHIELD terminals are provided for JW-10CM and ZW-10CM.Connect to either SHIELD terminal.

■ Precautions when preparing a cable

(4) Cable length

The maximum length of the RS-422 cable differs according to the specifications of the SHARP PLC. For details, refer to the following manual.

SHARP PLC user's Manual

(5) GOT side connector

For the GOT side connector, refer to the following.

1.4.1 GOT connector specifications

(6) SHARP PLC side connector

Use the connector compatible with the SHARP PLC side module.

For details, refer to the SHARP PLC user's manual.

Connecting terminating resistors

(1) GOT side

Set the terminating resistor setting switch of the GOT main unit to "Disable".

For the procedure to set the terminating resistor, refer to the following.

1.4.3 Terminating resistors of GOT

(2) SHARP PLC side

Connect the terminating resistor on the SHARP PLC side when connecting a GOT to a SHARP PLC.

The PLC CPUs and the modules on the PLC CPU side requiring a terminating resistor are shown below.

(a) JW-22CU

Turn "ON" the terminating resistor setting switch (SW1) on the back of JW-22CU to validate the terminating resistor.

(b) JW-70CUH and JW-100CUH

Connect the pin 6 (terminating resistor) of the communication port connection connector with the pin 13 (RXD) only at the terminal station to validate the terminating resistor.


(c) JW-21CM, JW-10CM and ZW-10CM

Turn "ON" the terminator switch (SW7) on the front panel only at the terminal station to validate the terminating resistor.

9.4 GOT Side Settings

9.4.1 Setting communication interface (Communication settings)

Set the channel of the equipment to be connected to the GOT.

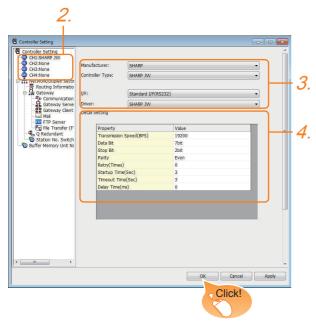

- Select [Common] → [Controller Setting] from the menu.
- The Controller Setting window is displayed. Select the channel to be used from the list menu.
- Set the following items.

Manufacturer: SHARP

Controller Type: SHARP JWI/F: Interface to be used

I/F: Interface to be used
 Driver: SHARP JW

 The detailed setting is displayed after Manufacturer, Controller Type, I/F, and Driver are set. Make the settings according to the usage environment.

9.4.2 Communication detail settings

Click the [OK] button when settings are completed.



The settings of connecting equipment can be confirmed in [I/F Communication Setting]. For details, refer to the following.

1.1.2 I/F communication setting

9.4.2 Communication detail settings

Make the settings according to the usage environment.

Property	Value
Transmission Speed(BPS)	19200
Data Bit	7 bit
Stop Bit	2 bit
Parity	Even
Retry(Times)	0
Startup Time(Sec)	3
Timeout Time(Sec)	3
Delay Time(ms)	0

Item	Description	Range
Transmission Speed	Set this item when change the transmission speed used for communication with the connected equipment. (Default: 19200bps)	4800bps, 9600bps, 19200bps
Data Bit	Set this item when change the data length used for communication with the connected equipment. (Default: 7bits)	7bit (fixed)
Stop Bit	Specify the stop bit length for communications. (Default: 2bit)	2bit (fixed)
Parity	Specify whether or not to perform a parity check, and how it is performed during communication. (Default: Even)	Even (fixed)
Retry	Set the number of retries to be performed when a communication error occurs. (Default: 0time)	0 to 5times
Startup Time	Specify the time period from the GOT startup until GOT starts the communication with the PLC CPU. (Default: 3sec)	3 to 30sec
Timeout Time*1	Set the time period for a communication to time out. (Default: 3sec)	3 to 30sec
Delay Time	Set this item to adjust the transmission timing of the communication request from the GOT. (Default: 0ms)	0 to 300ms

*1 When connecting to the communication port, set "Delay Time" of the GOT side to 30ms or more.



(1) Communication interface setting by the Utility The communication interface setting can be changed on the Utility's [Communication Settings] after writing [Communication Settings] of project data.

For details on the Utility, refer to the following manual.

GOT2000 Series User's Manual (Utility)

(2) Precedence in communication settings
When settings are made by GT Designer3 or the
Utility, the latest setting is effective.

PLC Side Setting 9.5



SHARP PLC

For details of the SHARP PLC, refer to the following

SHARP PLC user's Manual

Model nar	Refer to	
	JW-22CU	9.5.1
	JW-32CUH, JW-33CUH	9.5.2
PLC CPU	JW-70CUH, JW-100CUH, JW-100CU	9.5.1
	Z-512J	9.5.2
	JW-21CM	9.5.3
Link unit	JW-10CM, ZW-10CM	9.5.4

9.5.1 Connecting to JW-22CU, JW-70CUH, JW-100CUH or JW-100CU

System memory setting Set the system memory.

System memory No.	Item	Set value		
#236	Transmission speed, parity and stop bit	D7 D6 D5 D4 D3 D2 to D0 0 0 (3) (2) (1) (1) Transmission speed '1 '2 000: 19200bps 001: 9600bps 010: 4800bps (2) Parity 10 (fixed): Even (3) Stop bit 1 (fixed): 2 bits		
#237	Station No.	1: Station No. 1 (fixed)		


- Indicates only the transmission speeds that can be set on the GOT side.
- Set the same transmission speed of the GOT. For the transmission speed setting on the GOT side, refer to the following.

9.4.1 Setting communication interface (Communication settings)

■ Terminating resistor setting switch (For JW-22CU only)

Set the terminating resistor setting switch.

(1) When using KV-L20R or KV-L20

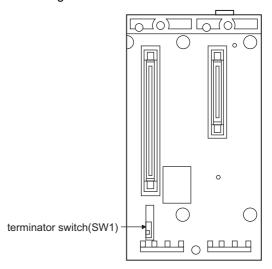



Settings				
For RS-232	RS-422 communication			
communication				
OFF (no terminating	ON (terminating resistor			
resistor)	attached)			

9.5.2 Connecting to JW-32CUH, JW-33CUH or Z-512J

Settings for connecting to communication port 1 (PG/COMM1 port)

Set the system memory.

System memory No.	Item	Set value		
#234	Transmission speed, parity and stop bit	D7 D6 D5 D4 D3 D2 to D0 0 0 (3) (2) (1) (1) Transmission speed *1 *2 000: 19200bps 001: 9600bps 010: 4800bps (2) Parity 10 (fixed): Even (3) Stop bit 1 (fixed): 2 bits		
#235	Station No.	1: Station No. 1 (fixed)		

- *1 Indicates only the transmission speeds that can be set on the GOT side.
- *2 Set the same transmission speed of the GOT. For the transmission speed setting on the GOT side, refer to the following.

9.4.1 Setting communication interface (Communication settings)

Settings for connecting to communication port 2 (PG/COMM2 port)

Set the system memory.


System memory No.	Item	Set value		
#236	Transmission speed, parity and stop bit	D7 D6 D5 D4 D3 D2 to D0 0 0 (3) (2) (1) (1) Transmission speed *1 *2 000: 19200bps 001: 9600bps 010: 4800bps (2) Parity 10 (fixed): Even (3) Stop bit 1 (fixed): 2 bits		
#237	Station No.	1: Station No. 1 (fixed)		

- *1 Indicates only the transmission speeds that can be set on the GOT side.
- *2 Set the same transmission speed of the GOT.
 For the transmission speed setting on the GOT side, refer to the following.


9.4.1 Setting communication interface (Communication settings)

9.5.3 Connecting to the link unit (JW-21CM)

Switch setting of the link unit (JW-21CM) Make setting for each switch.

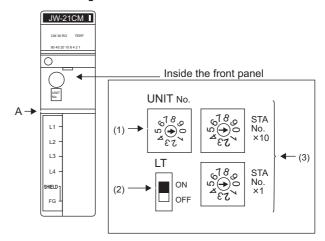

Side view indicated by A

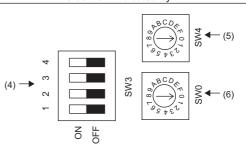

(1) Module No. switch (SW8)

The module No. switch is not used for communication with the GOT.

(2) Terminator switch(SW7)

ΙT	Settings	Setting details		
ON OFF	ON*1	Terminating resistor validated		
	*1 Turn on only for the t	Turn on only for the terminal station.		

(3) Station number setting switch(SW1,SW2)

-18		Switch No.	Settings	Setting details
	STA No.		Station No.	
732	×10	SW1	lower digit	1 (fixed)
			(10 ⁰ digit)	
	STA		Station No.	
	No. ×1	SW2	upper digit	0 (fixed)
0.3			(10 ¹ digit)	

(4) Operation mode setting switch(SW3)



	Switch No.	Settings	Setting details
	SW3-1	OFF (fixed)	Invalid
SW3	SW3-2	ON (fixed)	4-wire type
	SW3-3	OFF (fixed)	Invalid
	SW3-4	ON (fixed)	Even

(5) Transmission speed setting switch (SW4) Set the same transmission speed of the GOT. For the transmission speed setting on the GOT side, refer to the following.

9.4.1 Setting communication interface (Communication settings)



	Setting*1	Setting details
W 4	0	19200bps
S	1	9600bps
	2	4800bps

Indicates only the transmission speeds that can be set on the GOT side.


(6) Function setting switch(SW0)



Settings	Setting details
4 (fixed)	Computer link

9.5.4 Connecting to the link unit (JW-10CM or ZW-10CM)

Switch setting of link unit (JW-10CM and ZW-10CM)

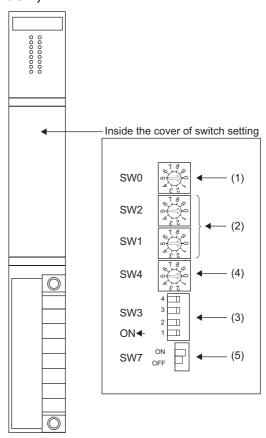

(1) Function setting switch(SW0)

	180	Settings	Setting details
SW0	4 (fixed)	Computer link (command mode)	

(2) Station number switch(SW1,SW2)

		Switch No.	Settings	Setting details
	0180		Station No.	
SW2	w.	SW1	lower digit	1 (fixed)
	53		(10 ⁰ digit)	
SW1	m		Station No.	
	232	SW2	upper digit	0 (fixed)
			(10 ¹ digit)	

(3) Operation mode setting switch(SW3)

		Switch No.
	4	SW3-1
SW3	3 🔠 2	SW3-2
ON ◆	1 💷	SW3-3
		SW3-4

Settings	Setting details
OFF (fixed)	Invalid
ON (fixed)	4-wire type
OFF (fixed)	Invalid
ON (fixed)	Even
	OFF (fixed) ON (fixed) OFF (fixed)

(4) Transmission speed setting switch (SW4) Set the same transmission speed of the GOT. For the transmission speed setting on the GOT side, refer to the following.



9.4.1 Setting communication interface (Communication settings)

SW4



_	Setting*1	Setting details
	0	19200bps
	1	9600bps
	2	4800bps

Indicates only the transmission speeds that can be set on the GOT side.

(5) Terminator switch(SW7)

SW7	ON	F
3007	OFF	L

7	Settings	Setting details
_	ON ^{*2}	Terminating resistor validated

Set to ON only for the terminal station.

9.6 Device Range that Can Be Set

The device ranges of controller that can be used for GOT are as follows.

Note that the device ranges in the following tables are the maximum values that can be set in GT Designer3.

The device specifications of controllers may differ depending on the models, even though belonging to the same series.

Please make the setting according to the specifications of the controller actually used.

When a non-existent device or a device number outside the range is set, other objects with correct device settings may not be monitored.


■ Setting item



Item	Description
Device	Set the device name, device number, and bit number. The bit number can be set only when specifying the bit of word device.
Information	Displays the device type and setting range which are selected in [Device].




- (1) Device settings of SHARP PLC
 - (a) When setting a register as a bit device
 - Registers
 Set the type (first 2 digits) and the address.

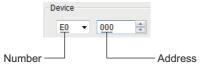


· File register

Set the file number and the address.

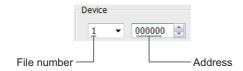


- (b) When setting a register and memory as a word device.
 - I/O relay

Set a combination of the device address (multiple of 16)+bit address format (fixed to 0).

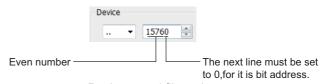

Registers and file register
 Set the device address (multiple of 16).

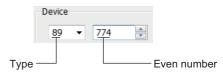

- (2) Monitoring the timer (T) and the counter (C)
 - (a) Address setting

Be sure not to set the same address range for the timer (T) and the counter (C).


Even if these addresses are overlapped, GOT displays no error.

GOT monitors them according to the address instead of the device name.

Therefore, if a device which is invalid for the SHARP PLC side parameter is set using GT Designer3, GOT monitors other device (a device corresponding to the address range of the set device).

Example:

Content in SHARP PLC parameter setting

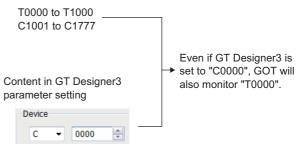

(b) Contact writing into timer (T) and the counter (C)

Writing the contact for the timer (T) and the counter (C) can only be done while the CPU is in RUN (while the timer and counter is in operation).

9.6.1 SHARP PLC (SHARP JW)

Device name		Setting range	Device No. representation
Bit device	I/O relay	00000 to15777 20000 to75777	Octal
	Timer (Contact) (T)	T0000 to T1777	
	Counter (Contact) (C)	C0000 to C1777	
	The bit specification of the word device	Setting range of each word device	-
Word device	Timer (Current value) (T)	T0000 to T1777	
	Counter (Current value) (C)	C0000 to C1777	
	Register (09 to E7)	09000 to 09776	Octal
		19000 to 19776	
		29000 to 29776	
		39000 to 39776	
		49000 to 49776	
		59000 to 59776	
		69000 to 69776	
		79000 to 79776	
		89000 to 89776	
		99000 to 99776	
		E0000 to E0776	
		E1000 to E1776	
		E2000 to E2776	
		E3000 to E3776	
		E4000 to E4776	
		E5000 to E5776	
		E6000 to E6776	
		E7000 to E7776	
	File register (1 to 7)	1000000 to 1177776 2000000 to 2177776 3000000 to 3177776 4000000 to 4177776	
		5000000 to 5177776 6000000 to 6177776 7000000 to 7177776	

CONNECTION TO SHINKO TECHNOS INDICATING CONTROLLER

10.1	Connectable Model List	. 10 - 2
10.2	System Configuration	. 10 - 4
10.3	Connection Diagram	. 10 - 9
10.4	GOT Side Settings	10 - 15
10.5	Indicating Controller Side Setting	10 - 16
10.6	Device Range that Can Be Set	10 - 18
10.7	Precautions	10 - 19

10. CONNECTION TO SHINKO TECHNOS INDICATING CONTROLLER

10.1 Connectable Model List

The following table shows the connectable models.

Series	Model name	Clock	Communication Type	Connectable GOT	Refer to
ACS-13A Series	ACS-13A□/□,□,C5*2	×	RS-232 RS-485	ет ет ет 27 25 23	[] 10.2.1
	JCS-33A-□/□□,C5 ^{*2}				
JC Series	JCR-33A-□/□□,C5 ^{*2}	×	RS-232 RS-485	от от от от 27 25 23	10.2.1
	JCD-33A-□/□□,C5 ^{*2}				
JCM-33A Series	JCM-33A□/□,□C5 ^{*2}	×	RS-232 RS-485	ет ет ет 27 25 23	10.2.1
JIR-301-M Series	JIR-301-M□,C5 ^{*2}	×	RS-232 RS-485	ет ет ет 27 25 23	10.2.1
PCD-300 Series	PCD-33A-□/M,C5 ^{*2}	×	RS-232 RS-485	ет ет 27 25 23	10.2.1
	PC935-□/M,C5 ^{*2}	×	RS-232	ет ет ет 27 25 23	10.2.1
PC-900 Series	PC955-□/M,C5 ^{*2}	^	RS-485	27 25 23	10.2.1 کی ا
r C-900 Selles	PC935-□/M,C*1	×	RS-232	ет ет ет 27 25 23	10.2.2
	PC955-□/M,C*1	^	110-202	27 25 23	10.2.2 کی
FCD-100 Series*1	FCD-13A-□/M,C	×	RS-232	ет ет ет 27 25 23	10.2.2
	FCD-15A-□/M,C		202	27 25 23	10.2.2
FCR-100 Series*1	FCR-13A-□/M,C	×	RS-232	ет ет ет 27 25 23	[₹ 10.2.2
	FCR-15A-□/M,C			27 25 23	10.2.2
FCR-23A Series*1	FCR-23A-□/M,C	×	RS-232	ет ет ет 27 25 23	10.2.2
1 ON-20A Delies	FCR-23A-□/M,C5	, î	110 202	ет ет ет 27 25 23	10.2.2 نوسيا
FIR Series*1	FIR-201-M,C	×	RS-232	ет ет ет 27 25 23	10.2.2
DCL-33A Series	DCL-33A-□/M,□,C5*2	×	RS-232 RS-485	ет ет ет 27 25 23	10.2.3

^{*1} Only the indicating controller equipped with RS-232 communication function can be connected.

The indicating controller of the following version or later can be connected.

Series	Model name	Version
ACS-13A Series	ACS-13A□/□,□,C5	
	JCS-33A-□/□□,C5	
JC Series	JCR-33A-□/□□,C5	
	JCD-33A-□/□□,C5	
JCM-33A Series	JCM-33A-□/□,□C5	Products manufactured in October 2007 or later (Indicating controllers with the serial numbers 07Axxxxxxx, 07Kxxxxxxx, and 07Xxxxxxxx or later)
JIR-301-M Series	JIR-301-M□,C5	(The first two digits of the serial numbers show the last two digits of the year.)
PCD-300 Series	PCD-33A-□/M,C5	
PC-900 Series	PC935-□/M,C5	
1 0-300 Selles	PC955-□/M,C5	
DCL-33A Series	DCL-33A-□/M,□,C5	

10.2 System Configuration

ACS13A,JC, JCM-33A,JIR-301-M, PCD-300 series, PC-955-DM,C5,


 \Box

PC-935-□/M,C5

- 10.2.1 Connecting to ACS-13A, JC, JCM-33A, JIR-301-M, PCD-300 Series, PC-900 Series (PC-955-[]/M,C5, PC-935-[]/M,C5)
 - For the RS-232 connection (via interface converter)

ACS13A,JC, JCM-33A,JIR-301-M, PCD-300 series, PC-955-□/M,C5,

PC-935-n/M,C5

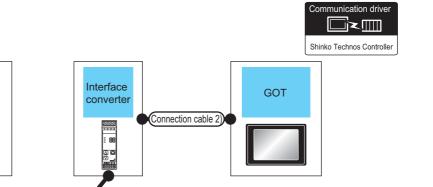


Indicating contr	oller	Connection cable	: 1)	Communic	Connection cable	GC	DΤ	Number of	
Model name	Commun ication Type	Cable model Connection diagram number	onnection diagram Max.		Cable model Connection diagram number	Max. dista nce	Option device	Model	connectable equipment
ACS13A JC JCM-33A JIR-301-M PCD-300 Series PC-955-□/M,C5 PC-935-□/M,C5	RS-232	User RS-485 connection diagram 1)	1,200m	IF-400	RS-232C CFP-C2*1	15m	- (Built into GOT) GT15-RS2-9P	GT 27 25 GT 23 GT 27 25 GT 27 25	31 indicating controllers for 1 GOT
F C-933-∐/lwi,C3									

Connection cable 1)

The communication converter is a product manufactured by Shinko Technos Co., Ltd.For details of the product, contact Shinko Technos Co., Ltd.


■ For the RS-485 connection



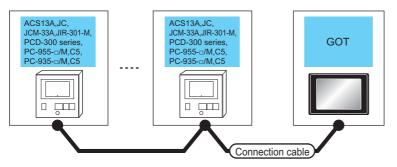

Indicating of	controller	Connection cabl	е	GOT		
Model name	Communication Type	Cable model Connection diagram number	Max. distance	Option device	Model	Number of connectable equipment
ACS13A		(User)RS-485 connection diagram 7)	500m	- (Built into GOT)	27 25 er 23	
JC JCM-33A JIR-301-M PCD-300 Series PC-955-□/M,C5	C5	(User)RS-485 connection diagram 2)	500m	GT15-RS4-TE	ет ет 27 25	31 indicating controllers for 1 GOT
PC-935-□/M,C5		(User)RS-485 connection diagram 6)	500m	FA-LTBGT2R4CBL05 (0.5m) FA-LTBGT2R4CBL10 (1m) FA-LTBGT2R4CBL20 (2m)	ет ет 27 25 ет 23	

10.2.2 Connecting to FCD-100, FCR-100, FCR-23A, FIR Series, PC-900 Series (PC-955[]/M,C, PC-935-[]/M,C)

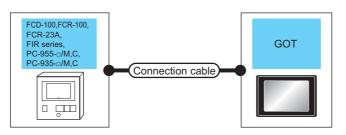




Indicating controlle	r*1	Connection cable	GOT				
Model name	Commun ication Type	Cable model Connection diagram number			Model	Number of connectable equipment	
FCD-100 FCR-100 FCR-23A	RS-232	GT09-C30R21401-4T(3m) or		- (Built into GOT)	27 25 er 23	31 indicating controllers for 1	
FIR Series PC-955-□/M,C PC-935-□/M,C	N3-232	(User) RS-232 connection diagram 1)	15m	GT15-RS2-9P	ет ет 27 25	СОТ	

Only the indicating controller equipped with RS-232 communication function can be connected.

■ For the RS-232 connection (via communication converter)

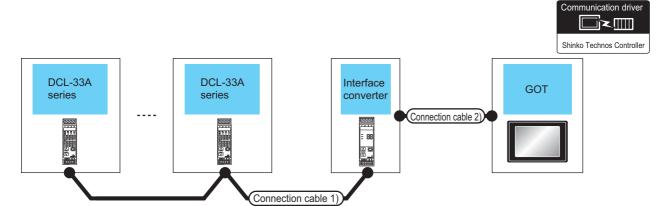


Indicating	controller	Connection cable 1)		Communi	Connection cable	2)	GOT		Number of	
Model name	Commun ication Type	Cable model Connection diagram number	Max. distance	cation converter *1	Cable model Connection diagram number	Max. dista nce	Option device	Model	connectable equipment	
DCL-33A	RS-232	RS485-CPP *1	1,200m	IF-400	RS-232CCFP-C2 *1	15m	- (Built into GOT)	27 25 er 23	31 indicating	
Series	110-202	K3405-UFF	1,200111	11 -400	N3-23200FF-02	13111	GT15-RS2-9P	ст ст 25	controllers for 1 GOT	

^{*1} Product manufactured by Shinko Technos Co., Ltd.For details of the product, contact Shinko Technos Co., Ltd.

■ For the RS-485 connection



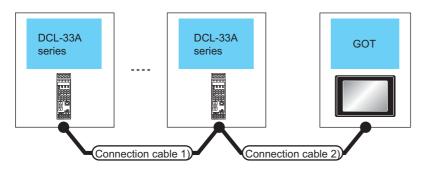

Indicating	controller	Connection cable 1)	Connection cable 2)	Max.	GOT		Number of	
Model name	Communi cation Type	Cable model Connection diagram number	Cable model Connection diagram number	distance	Option device	Model	connectable equipment	
			User)RS-485 connection diagram 5)	500m	- (Built into GOT)	27 25 er 23		
DCL-33A Series	RS-485	RS-485 CPP*1 (User) RS-485 connection diagram 3) 500m GT15-RS	GT15-RS4-TE	ет ет 27 25	31 indicating controllers for 1 GOT			
			User RS-485 connection diagram 4)	500m	FA-LTBGT2R4CBL05 (0.5m) FA-LTBGT2R4CBL10 (1m) FA-LTBGT2R4CBL20 (2m)	27 25 GT 25		

^{*1} Product manufactured by Shinko Technos Co., Ltd.For details of the product, contact Shinko Technos Co., Ltd.


10.3 Connection Diagram

The following diagram shows the connection between the GOT and the PLC.

10.3.1 RS-232 cable

Connection diagram

(1) RS-232 connection diagram 1)

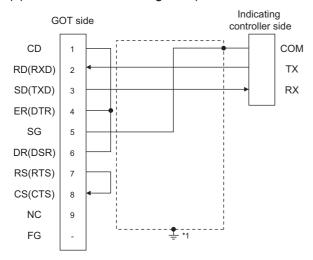

*1 Connect FG grounding to the appropriate part of a cable shield line.

Precautions when preparing a cable

(2) Cable length
The length of the RS-232 cable must be 15m or less.


(3) GOT side connectorFor the GOT side connector, refer to the following.1.4.1 GOT connector specifications

(4) Shinko Technos indicating controller side connector Use the connector compatible with the Shinko Technos indicating controller side.

For details, refer to the user's manual of the Shinko Technos indicating controller.

■ Connection diagram

(1) RS-485 connection diagram 1)

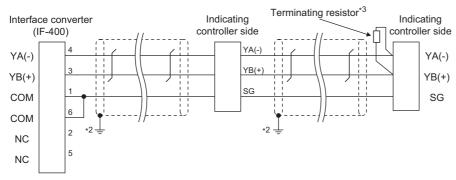


- *1 Pin No. of communication converter differs depending on the model. Refer to the following table.
- *2 Connect FG grounding to the appropriate part of a cable shield line.
- *3 For details of the terminating resistor specifications, refer to the following manual.

User's Manual of the Shinko Technos indicating controller

		Model of indicating controller											
Signal name	JCS-33A	JCR-33A	JCD-33A	JCM-33A	JIR-301-M	ACS-13A	PCD-33A	PC-955	PC-935				
name	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.				
YA(-)	13	11	11	10	11	16	11	11	11				
YB(+)	14	14	14	13	14	17	14	12	12				
SG	15	17	17	14	17	18	17	16	16				


(2) RS-485 connection diagram 2)

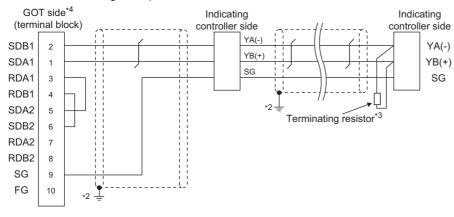

- *1 Pin No. of communication converter differs depending on the model. Refer to the following table.
- *2 Connect FG grounding to the appropriate part of a cable shield line.
- *3 For details of the terminating resistor specifications, refer to the following manual.
 - User's Manual of the Shinko Technos indicating controller
- 4 Set the terminating resistor of GOT side which will be a terminal.
 - Connecting terminating resistors


	Model of indicating controller										
Signal name	JCS-33A	JCR-33A	JCD-33A	JCM-33A	JIR-301-M	ACS-13A	PCD-33A	PC-955	PC-935		
	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.		
YA(-)	13	11	11	10	11	16	11	11	11		
YB(+)	14	14	14	13	14	17	14	12	12		
SG	15	17	17	14	17	18	17	16	16		

(3) RS-485 connection diagram 3)

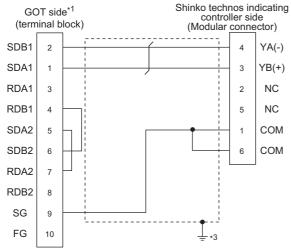


- *1 Set the terminating resistor of The GOT side.
 - Connecting terminating resistors
- *2 For details of the pin assignment, refer to the following manual.
 - User's Manual of the Shinko Technos indicating controller
- *3 Connect FG grounding to the appropriate part of a cable shield line

(4) RS-485 connection diagram 4)

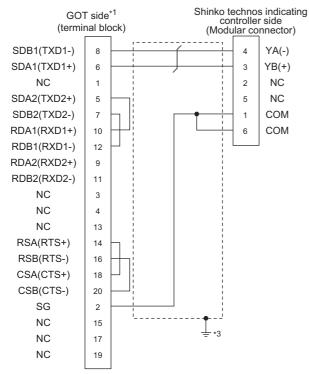


- *1 Set the terminating resistor of GOT side.
 - Connecting terminating resistors
- *2 For details of the pin assignment, refer to the following manual.
 - User's Manual of the Shinko Technos indicating
- *3 Connect FG grounding to the appropriate part of a cable shield line.

(5) RS-485 connection diagram 5)

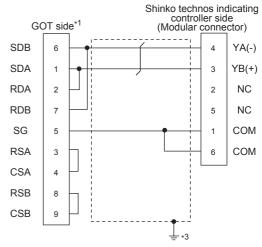


- *1 Set the terminating resistor of GOT side.
 - Connecting terminating resistors
- *2 For details of the pin assignment, refer to the following manual.
 - User's Manual of the Shinko Technos indicating controller
- *3 Connect FG grounding to the appropriate part of a cable shield line.

(6) RS-485 connection diagram 6)

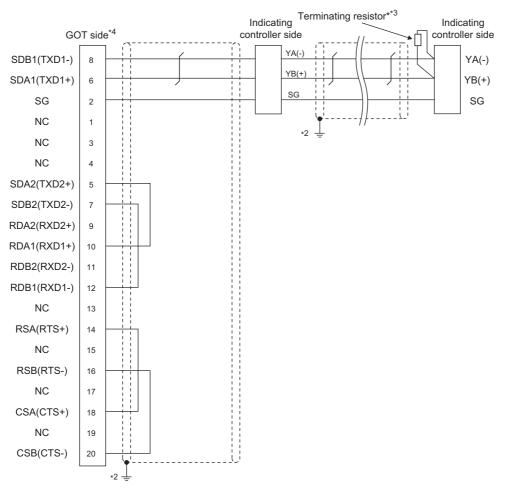

- *1 Pin No. of communication converter differs depending on the model. Refer to the following table.
- *2 Connect FG grounding to the appropriate part of a cable shield line.
- *3 For details of the terminating resistor specifications, refer to the following manual.
 - User's Manual of the Shinko Technos indicating controller
- *4 Set the terminating resistor of GOT side which will be a terminal.
 - Connecting terminating resistors

		Model of indicating controller										
Signal name	JCS-33A	JCR-33A	JCD-33A	JCM-33A	JIR-301-M	ACS-13A	PCD-33A	PC-955	PC-935			
	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.			
YA(-)	13	11	11	10	11	16	11	11	11			
YB(+)	14	14	14	13	14	17	14	12	12			
SG	15	17	17	14	17	18	17	16	16			

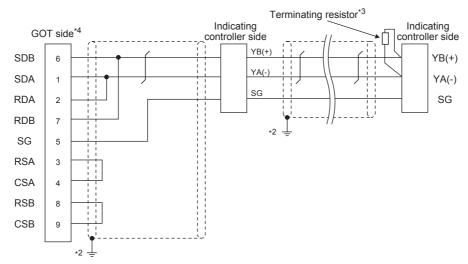

- *1 Pin No. of communication converter differs depending on the model. Refer to the following table.
- *2 Connect FG grounding to the appropriate part of a cable shield line.
- *3 For details of the terminating resistor specifications, refer to the following manual.
 - User's Manual of the Shinko Technos indicating controller
- *4 Set the terminating resistor of GOT side which will be a terminal.

■ Connecting terminating resistors

Signal name		Model of indicating controller										
	JCS-33A	JCR-33A	JCD-33A	JCM-33A	JIR-301-M	ACS-13A	PCD-33A	PC-955	PC-935			
	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.			
YA(-)	13	11	11	10	11	16	11	11	11			
YB(+)	14	14	14	13	14	17	14	12	12			
SG	15	17	17	14	17	18	17	16	16			

Precautions when preparing a cable

(8) Cable length

- (a) The length of the RS-485 cable used for direct connecting the indicating controller to the communication converter The length of the RS-485 cable must be 1200m or less.
- (b) The length of the RS-485 cable used for direct connecting the indicating controller to GOT The length of the RS-485 cable must be 500m or less.

(9) GOT side connector

For the GOT side connector, refer to the following.

1.4.1 GOT connector specifications

(10)Shinko Technos indicating controller side connector Use the connector compatible with the Shinko Technos indicating controller side.

For details, refer to the user's manual of the Shinko Technos indicating controller.

Connecting terminating resistors

(1) GOT side

Set the terminating resistor setting switch of the GOT main unit to "100 OHM".

For the procedure to set the terminating resistor, refer to the following.

1.4.3 Terminating resistors of GOT


(2) Shinko Technos indicating controller side When connecting a Shinko Technos indicating controller to the GOT, a terminating resistor must be connected to the Shinko Technos indicating controller.

User's Manual of the Shinko Technos indicating controller

10.4 GOT Side Settings

10.4.1 Setting communication interface (Communication settings)

Set the channel of the equipment to be connected to the GOT.

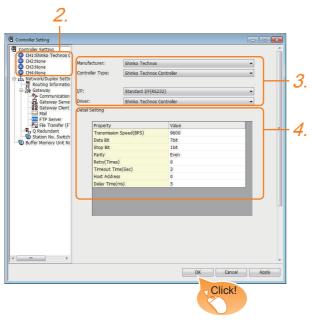

- Select [Common] → [Controller Setting] from the menu.
- The Controller Setting window is displayed. Select the channel to be used from the list menu.
- Set the following items.
 - · Manufacturer: Shinko Technos
 - · Controller Type: Shinko Technos Controller
 - I/F: Interface to be used
 - · Driver: Shinko Technos Controller
- 4. The detailed setting is displayed after Manufacturer, Controller Type, I/F, and Driver are set. Make the settings according to the usage environment.
 - 10.4.2 Communication detail settings

Click the [OK] button when settings are completed.



The settings of connecting equipment can be confirmed in [I/F Communication Setting]. For details, refer to the following.

1.1.2 I/F communication setting

10.4.2 Communication detail settings

Make the settings according to the usage environment.

Property	Value
Transmission Speed(BPS)	9600
Data Bit	7 bit
Stop Bit	1 bit
Parity	Even
Retry(Times)	0
Timeout Time(Sec)	3
Host Address	0
Delay Time(ms)	5

Item	Description	Range
Transmission Speed	Set this item when change the transmission speed used for communication with the connected equipment. (Default: 9600bps)	9600bps, 19200bps, 38400bps, 57600bps, 115200bps
Data Bit	Set this item when change the data length used for communication with the connected equipment. (Default: 7bits)	7bits/8bits
Stop Bit	Specify the stop bit length for communications. (Default: 1bit)	1bit/2bits
Parity	Specify whether or not to perform a parity check, and how it is performed during communication. (Default: Even)	None Even Odd
Retry	Set the number of retries to be performed when a communication error occurs. (Default: 0time)	0 to 5times
Timeout Time	Set the time period for a communication to time out. (Default: 3sec)	3 to 30sec
Host Address	Specify the host address (station No. of the GOT to which the indicating controller is connected) in the connected network. (Default: 0)	0 to 94
Delay Time	Set this item to adjust the transmission timing of the communication request from the GOT. (Default: 5ms)	0 to 300ms



- (1) Communication interface setting by the Utility The communication interface setting can be changed on the Utility's [Communication Settings] after writing [Communication Settings] of project data.
 - For details on the Utility, refer to the following manual.
- GOT2000 Series User's Manual (Utility)
- (2) Precedence in communication settings When settings are made by GT Designer3 or the Utility, the latest setting is effective.

10.5 Indicating Controller Side Setting



(1) Shinko Technos indicating controller For details of Shinko Technos indicating controller, refer to the following manual.

User's Manual of the Shinko Technos indicating controller

(2) Communication converter For details on communication settings of the communication converter, refer to the following manual.

User's Manual of communication converter

	Model name	Refer to
Indicating controller	ACS-13A, DCL-33A, JC, JCM-33A, JIR-301-M, PCD-300 Series, PC-900 Series (PC-955-□/M,C5, PC- 935-□/M,C5)	10.5.1
Controller	FCD-100, FCR-100, FCR-23A, FIR Series, PC-900 Series (PC-955-□/ M,C, PC-935-□/M,C)	10.5.2
Communication converter	IF-400	10.5.3

10.5.1 Connecting to ACS-13A, DCL-33A, JC, JCM-33A, JIR-301-M, PCD-300 Series, PC-900 Series (PC-955-[]/M,C5, PC-935-[]/M,C5)

Communication settings

Make the communication settings by operating the key of the indicating controller.

Item	Set value
Transmission speed*1	9600bps, 19200bps
Data bit	7bits (fixed)
Parity bit	Even (fixed)
Stop bit	1bit (fixed)
Station No.*2*3	0 to 95
Communication protocol	Shinko protocol

- Adjust the settings with GOT settings. Avoid duplication of the station No. with any of the other
- When setting the "95" to the station No., the read-out of data

10.5.2 Connecting to FCD-100, FCR-100, FCR-23A, FIR Series, PC-900 Series (PC-955-[]/ M,C, PC-935-[]/M,C)

Communication settings

Make the communication settings by operating the key of the indicating controller.

Item	Set value
Transmission speed*1	9600bps, 19200bps
Data bit	7bits (fixed)
Parity bit	Even (fixed)
Stop bit	1bit (Fixed)
Station No.*1*2	0 to 95
Communication protocol	Shinko protocol

Adjust the settings with GOT settings

10.5.3 Connecting to communication converter (IF-400)

Communication settings

Make the communication settings by operating the key of the communication converter.

Item	Set value
Transmission speed*1	9600bps, 19200bps
Sending/Receiving switching period*2	1 character, 2 character

Adjust the settings with GOT and the indicating controller settings


When setting the "95" to the station No., the read-out of data cannot be performed.

The setting of 1 character is recommended.

10.5.4 Station No. settings

Set each station number so that no station number overlaps.

The station number can be set without regard to the cable connection order. There is no problem even if station numbers are not consecutive.

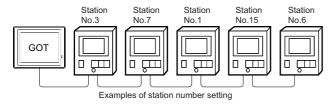

(1) Direct specification

When setting the device, specify the station number of the indicating controller of which data is to be changed.



(2) Indirect specification

When setting the device, indirectly specify the station number of the indicating controller of which data is to be changed using the 16-bit GOT internal data register (GD10 to GD25).


When specifying the station No. from 100 to 115 on GT Designer3, the value of GD10 to GD25 compatible to the station No. specification will be the station No. of the indicating controller.

Specification station NO.	Compatible device	Setting range
100	GD10	
101	GD11	
102	GD12	
103	GD13	
104	GD14	
105	GD15	
106	GD16	0 to 94
107	GD17	For the setting other than the above, error
108	GD18	(dedicated device is out of range) will
109	GD19	occur.
110	GD20	
111	GD21	
112	GD22	
113	GD23	
114	GD24	
115	GD25	

(3) All station specification

Target station differs depending on write-in operation or read-out operation.

• For write-in operation, all station will be a target. In the WORD BIT write-in operation, only the indicating controller whose station No. is the same as host address is applicable. For details of host address setting, refer to the following.

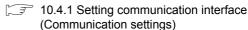

· In the read-out operation, only the indicating controller whose station No. is the same as host address is applicable.

For details of host address setting, refer to the following.



10.4.1 Setting communication interface (Communication settings)

10.6 Device Range that Can Be Set

The device ranges of controller that can be used for GOT are as follows.


Note that the device ranges in the following tables are the maximum values that can be set in GT Designer3.

The device specifications of controllers may differ depending on the models, even though belonging to the same series.

Please make the setting according to the specifications of the controller actually used.

When a non-existent device or a device number outside the range is set, other objects with correct device settings may not be monitored.

Setting item

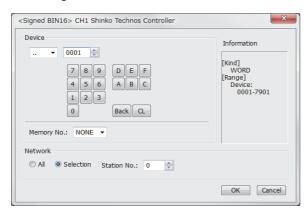

Item			Description
цепп			·
Device		number can b	device number, and bit number. e set only when specifying the bit of
	Memory No.*1	Set the mem device to be	ory number (None, 0 to 7) of the monitored.
Information		the device ty I in [Device].	pe and setting range which are
	Set the	monitor target	of the set device.
Network	All	indicating co During monit is set for [Ho detail setting (When writin data is writte controllers d controller tha	em when writing data to all the ntrollers connected. toring, the indicating controller which est Address] of the communication is monitored. If the data in numerical input, the ento all connected indicating uring input, and the indicating at is set for [Host Address] is uring other than input (displaying).)
Network	Station No.	controller of After selecting	em when monitoring the indicating the specified station No. ng, set the station No. of the ntroller in the following range. To monitor the indicating controller of the specified station No. Same as the setting of [All]. To specify the station No. of the indicating controller to be monitored by the value of GOT data register (GD).*2

*1 The device name is displayed as follows when the memory number (0 to 7) is set.

Memory No.	Displayed device name
None	Device Number
0	M0/Device Number
1	M1/Device Number
2	M2/Device Number
3	M3/Device Number
4	M4/Device Number
5	M5/Device Number
6	M6/Device Number
7	M7/Device Number

*2 The following shows the relation between station numbers of the indicating controller and the GOT data register.

Station No.	GOT data register (GD)	Setting range
100	GD10	0 to 94
101	GD11	(If setting a value
:	:	outside the range
114	GD24	above, a device range
115	GD25	error occurs.)

10.6.1 SHINKO indicating controller (Shinko Technos Controller)

	Device name	Setting range	Device No. representation
Bit device	The bit specification of the word device*1	Setting range of each word device	-
Word device	Data item ()	0001 to7901	Hexadecimal

^{*1} As bit specification of a word device is performed after the GOT reads the value, do not change the value with the indicating controller during this period.

10.7 Precautions

Station number settings of indicating controller

In the system configuration, the indicating controller with the station number set with the host address must be included.

For details of host address setting, refer to the following.

10.4.1 Setting communication interface (Communication settings)

GOT clock control

Since the indicating controller does not have a clock function, the settings of [time adjusting] or [time broad cast] by GOT clock control will be disabled.

When using the communication converter IF-

When using the communication converter IF-400, some communication error may occur. Set the number of retries to more than one time.

Disconnecting some of multiple connected equipment

The GOT can disconnect some of multiple connected equipment by setting GOT internal device. For example, the faulty station where a communication timeout error occurs can be disconnected from connected equipment.

For details of GOT internal device setting, refer to the following manual.

GT Designer3 (GOT2000) Screen Design Manual



	
	_
	_

11

CONNECTION TO CHINO CONTROLLER

11.1	Connectable Model List
11.2	System Configuration11 - 3
11.3	Connection Diagram11 - 11
11.4	GOT Side Settings
11.5	Controller Side Setting
11.6	Device Range that Can Be Set11 - 33
11.7	Precautions

11. CONNECTION TO CHINO CONTROLLER

11.1 Connectable Model List

The following table shows the connectable models.

Series	Model name*1	Clock	Communication Type	Connectable GOT	Refer to
LT230 Series	LT230	×	RS-232 RS-485		
LT300 Series	LT350	×			
LI 300 Series	LT370	_ ×	RS-232 RS-422		
LT400 Series	LT450	×	RS-485		
L1400 Selles	LT470			GT GT GT	
LT830 Series	LT830	×	RS-232 RS-485	ет ет ет 27 23	3 11.2.1
DZ1000 Series	DZ1000	×			
DZ2000 Series	DZ2000	×	RS-232 RS-422		
DB1000 Series	DB1000	×	RS-422 RS-485		
DB2000 Series	DB2000	×			
KP Series	KP1000 KP2000	×	RS-232	er er er	
AL3000 Series	AL3000	×	RS-422 RS-485	от ет ет 27 25 23	11.2.2
AH3000 Series	AH3000	×	- 1.6 .66		
SE3000 Series	SE3000	×	RS-232 RS-422 RS-485	et let let	
JU Series	JU	×		27 25 GT 23	11.2.3
KE Series	KE3000	×	RS-422 RS-485		
LE5000 Series	LE5000	×			
GT120 Series	GT120	×	RS-232 RS-485	ет ет ет 27 25 23	[] 11.2.4


¹ From the models of controller, select the detailed model name which supports each communication type. For details of CHINO controller detailed model names, refer to the following catalog.

Catalog of CHINO controllers

11.2 System Configuration

Connecting to LT230, LT300, LT400, LT830, DZ1000, DZ2000, DB1000, 11.2.1 DB2000 series

■ When connecting to controller

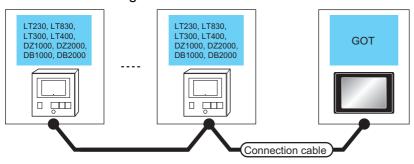




Indicating controller		Connection cabl	е	GOT		
Model name	Communicat ion Type	Cable model Connection diagram number	Max. distance	Option device	Model	Number of connectable equipment
	RS-232	User RS232 connection	15m	- (Built into GOT)	ет ет 27 25 ет 23	1 controller for 1 GOT
LT300 LT400 DZ1000	RS-232	diagram 1)	1311	GT15-RS2-9P	ет ет 27 25	T controller for 1 got
DZ2000 DB1000 DB2000	RS-422	User RS422 connection	1200m	- (Built into GOT)	27 25 er 23	31 controllers for 1 GOT ^{*2}
		diagram 2)	1230111	GT15-RS4-9S	ет ет 27 25	3 Controllers for 1 GOT
LT230 LT300		User RS485 connection diagram 1)	1200m	FA-LTBGTR4CBL05 (0.5m) FA-LTBGTR4CBL10 (1m) FA-LTBGTR4CBL20 (2m)	27 25 er 23	
LT400 LT830 DZ1000 DZ2000 DB1000	RS-485	User RS485 connection diagram 1)	1200m	GT15-RS4-TE	ет ет 27 25	31 controllers for 1 GOT*2
DB2000		User RS485 connection diagram 12)	1200m	- (Built into GOT)	ет ет 27 25	

■ When connecting to converter




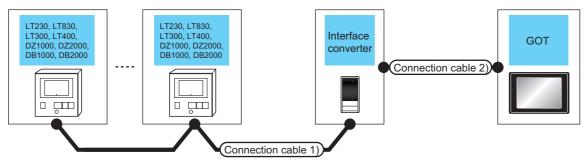

Indicating controller	Connection cable	e 1)	Conv	erter ^{*1}	Connection cable	: 2)	GOT	-	Number of
Model name	Cable model Connection diagram number	Max. distance	Model name	Commun ication Type	Cable model Connection diagram number	Max. distance	Option device	Model	connectable equipment
LT300 LT400 DZ1000	(User) (paping) RS422	1200m	SC8-10	RS-232	User (reprint) RS232	15m	- (Built into GOT)	ет ет 27 25 ет 23	
DZ2000 DB1000 DB2000	connection diagram 1)	1200111	000 10	110 202	connection diagram 1)	10	GT15-RS2-9P	ет ет 27 25	31 controllers
LT230 LT300 LT400 LT830	(User) (poping) RS485	1200m	SC8-10	RS-232	(User) RS232	15m	- (Built into GOT)	ет ет 27 25 ет 23	for 1 GOT
DZ1000 DZ2000 DB1000 DB2000	connection diagram 2)	1200111	303-10	110 202	connection diagram 1)	10111	GT15-RS2-9P	ет ет 27 25	

^{*1} The converter is a product manufactured by CHINO corporation. For details of the product, contact CHINO corporation.

■ When connecting to controller

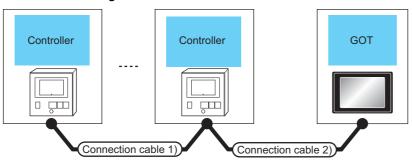




Indica	_	Connection cable 1)	Connection cable 2)		GOT		Notes
Model name	Commu nication Type	Cable model ^{*1} Connection diagram number	Cable model ^{*1} Connection diagram number	Max. distance	Option device	Model	Number of connectable equipment
	RS-232		RZ-CRS6□□ or	15m	- (Built into GOT)	27 25 27 25 6T 23	1 controller for 1 GOT
	110-202		(Jser) RS232 connection diagram 1)	13111	GT15-RS2-9P	er er 27 25	
		RZ-CRA1□□	(User) (reging) RS422	1200m	- (Built into GOT)	er 27 25 25 23	
	RS-422	RZ-GRATILI	connection diagram 2)	1200111	GT15-RS4-9S	ет ет 27 25	31 controllers for 1 GOT*3
KP1000 KP2000 AL3000 AH3000		(User) RS422 connection diagram 2)		1200m	- (Built into GOT)	ет 27 25 ет 23	31 Contioners for 1 GOT
				1200111	GT15-RS4-9S	^{ст} 27 25	
		RZ-CRA1□□	User) RS422 connection diagram 1)	1200m	FA-LTBGTR2CBL05 (0.5m) FA-LTBGTR2CBL10 (1m)	27 25 GT 23	
		(User) RS485 conn	ection diagram 1)		FA-LTBGTR2CBL20 (2m)	23	
	RS-485	RZ-LEC Connection diagram 4)		1200m	GT15-RS4-TE	ет ет 27 25	31 controllers for 1 GOT
		(User) (Vegating) RS485 conne	ection diagram 12)	1200m	- (Built into GOT)	er er 27 25	

Product manufactured by CHINO corporation. For details of the product, contact CHINO corporation.

■ When connecting to converter




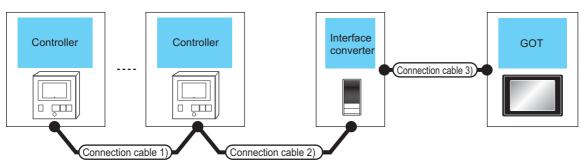

Indicating controller	Connection cable 1)	Connection cable 2)	Max.	Conv	verter*1	Connection cabl	le 3)	GOT		Number of
Model name	Cable model ^{*1} Connection diagram number	Cable model ^{*1} Connection diagram number	distance	Model name	Commu nication Type	Cable model Connection diagram number	Max. dista nce	Option device	Model	connectable equipment
	RZ-CRA1□□ or (Unser) RS422	RZ-CRA2□□ or	1200m	SC8	RS	RZ-CRS6□ or (User) (yser)	15m	- (Built into GOT)	27 25 GT 25 GT 23	
KP1000 KP2000 AL3000 AH3000	connection diagram 1)	(User)RS422 connection diagram 1)	1230111	-10	-232	connection diagram 1)		GT15-RS2-9P	27 25	31 controllers
	RZ-LEC Or			SC8	RS	RZ-CRS6 or	15m	- (Built into GOT)	27 25 27 25 37 23	for 1 GOT
	connection			-10		(User) RS232 connection diagram 1)	13111	GT15-RS2-9P	ст ст 25	

Product manufactured by CHINO corporation. For details of the product, contact CHINO corporation.

■ When connecting to controller

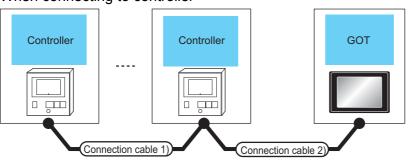




		Connection can		JIII ECLIOIT			
Indic contr	ating roller	Connection cable 1)	Connection cable 2)	May	GOT		Number of connected -
Model name	Commu nication Type	Cable model ^{*1} Connection diagram number	Cable model ^{*1} Connection diagram number	Max. distance	Option device	Model	Number of connectable equipment
SE3000	RS-232		RZ-CRS6□□ or	15m	- (Built into GOT)	et et 25 et 25 et 23	1 controller for 1 GOT
CLOUG	110 202		(Jser) RS232 connection diagram 1)	10111	GT15-RS2-9P	ет ет 27 25	
		RZ-CRA1□□ ^{*2}	User RS422 connec-	1200m	- (Built into GOT)	27 25 27 25 61 23	
	RS-422	NZ-UNAT	tion diagram 2)	1230111	GT15-RS4-9S	ет ет 27 25	31 controllers for 1 GOT*3
	110 122		1200m	- (Built into GOT)	GT 25 25 23	3 Teoritoliers for 1 GoT	
SE3000 JU KE3000 LE5000		(mpains) RS422 CONF	(User) RS422 connection diagram 2)		GT15-RS4-9S	er er 27 25	
		RZ-LEC C C C C C C C C C C C C C C C C C C	User RS485 connection diagram 9)	1200m	FA-LTBGTR2CBL05 (0.5m) FA-LTBGTR2CBL10 (1m) FA-LTBGTR2CBL20 (2m)	et et 25 27 25 et 23	
	RS-485	RZ-LEC CSS1Z2*3	User RS485 connection diagram 10)	1200m	GT15-RS4-TE	ет ет 27 25	31 controllers for 1 GOT
		(User) RS485 connu	RS485 connection diagram 13)		- (Built into GOT)	er er 27 25	

Product manufactured by CHINO corporation. For details of the product, contact CHINO corporation.

RZ-CRA1 and RZ-LEC can be used in SE3000, JU or LE5000 series only.

RZ-CSS1Z2 can be used in JU series only.

■ When connecting to converter

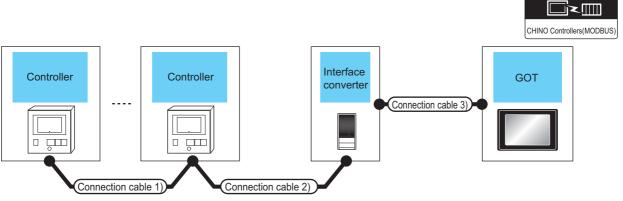

Communication driver

Indicating controller	Connection cable 1)	Connection cable 2)	Max.	Conv	verter*1	Connection cat	ole 3)	GOT		Number of
Model name	Cable model*1 Connection diagram number	Cable model ^{*1} Connection diagram number	distance	Model name	Commu nication Type	Cable model Connection diagram number	Max. distance	Option device	Model	connectable equipment
	RZ-CRA1□□*² or	or or		SC8	RS	RZ-CRS6 Or	15m	- (Built into GOT)	er er 27 25 er 23	
SE3000 JU	(User) RS422 connection diagram 1)	(User) RS422 connection diagram 1)		-10	-232	RS232 connection diagram 1)		GT15-RS2-9P	27 25	31 controllers
KE3000 LE5000	RZ-LEC	RZ-LEC \\ (only JU, LE5000) RZ-LED \\ (only SE3000)	1200m	SC8	RS	RZ-CRS6 Or	15m	- (Built into GOT)	27 25 GT 25 GT 23	for 1 GOT
	or User (Magnity) RS485 connection diagram 11)	or (User) RS485 connection diagram 11)	User (User) 85 connection		-232	RS232 connection diagram 1)	13111	GT15-RS2-9P	27 25	


¹ Product manufactured by CHINO corporation. For details of the product, contact CHINO corporation.

^{*2} RZ-CRA1 \square and RZ-CRA2 \square can be used in SE3000, JU or LE5000 series only.

^{*3} RZ-CSS1Z2 can be used in JU series only.

Connecting to GT120 Series 11.2.4

■ When connecting to controller

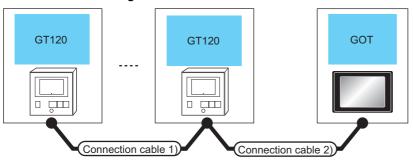




Indicating of	controller	Connection cable 1)	Connection cable 2)		GOT		Number of
Model name	Commun ication Type	Cable model Connection diagram number	Cable model Ma Connection diagram dista number		Option device Mod		connectable equipment
			User RS485 connection diagram 6)	1200m	- (Built into GOT)	27 25 er 23	
GT120	RS-485	GT8-CDD(60mm) or User RS485 connection diagram 4)	User) RS485 connection diagram 7)	1200m	FA-LTBGT2R4CBL05 (0.5m) FA-LTBGT2R4CBL10 (1m) FA-LTBGT2R4CBL20 (2m)	27 25 27 25 23	31 controllers for 1 GOT
			User RS485 connection diagram 8)	1200m	GT15-RS4-TE	ет ет 27 25	

■ When connecting to converter



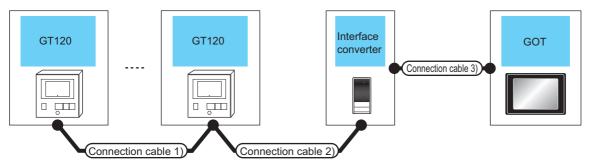

Indicating controller	Connection cable 1)	Connection cable 2)	Max.	Conve	erter*1	Connection cable	3)	GOT		Number of
Model name	Cable model Connection diagram number	Cable model Connection diagram number	distance	Model name	Commu nication Type	Cable model Connection diagram number	Max. dista nce	Option device	Model	connectable equipment
GT120	GT8-CDD(60mm) or (User) RS485	GT8-CDM(3m) or	1200m	SC8-10	DS 222	User RS232	15m	- (Built into GOT)	ет 27 25 ет 23	31
G1120	connection diagram 4)	(User) RS485 connection diagram 8)	1200111	306-10	RS-232	connection diagram 1)	15m	GT15-RS2-9P	ет ет 27 25	controllers for 1 GOT

^{*1} The converter is a product manufactured by CHINO corporation. For details of the product, contact CHINO corporation.


11.3 Connection Diagram

The following diagram shows the connection between the GOT and the PLC.

11.3.1 RS-232 cable

■ Connection diagram

(1) RS232 connection diagram 1)

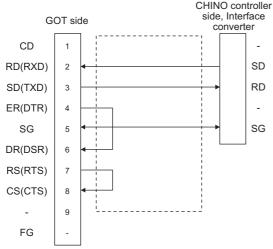

*1 Terminal number of the controller and the converter differ depending on the model.Refer to the following table.

		Controller									
Signal	LT300	LT400	DZ1000, DZ2000	DB1000	DB2000	SC8-10					
Harric	Terminal	Terminal	Terminal	Terminal	Terminal	Terminal					
	No.	No.	No.	No.	No.	No.					
SD	11	11	19	13	27	2					
RD	13	13	21	12	26	1					
SG	15	15	23	14	28	3					

		Controller								
Signal	KP1000	KP2000		SE3000	AL3000 AH3000					
name	Terminal	Terminal No.	*1	Terminal	Terminal					
	No.	R*2, B*2, C*2, D*2	B*2, E*2	name	name					
SD	13	27	30	SD	SD					
RD	12	26	29	RD	RD					
SG	14	28	31	SG	SG					

- For KP2000 series, the terminal No. differs according to the model.
- *2 This indicates the symbols of the position 10) (third zone) of the following models. Model: KP2 4) 5) 6) 7) 8) 9) 10) – 12) 13) 14)

For the symbol B, two terminal numbers are available. Select as necessary.

Precautions when preparing a cable

(1) Cable length

The length of the RS-232 cable must be 15m or less.

(2) GOT side connector

For the GOT side connector, refer to the following.

1.4.1 GOT connector specifications


(3) CHINO controller side connector

Use the connector compatible with the CHINO controller side module.

For details, refer to the user's manual of the CHINO controller.

■ Connection diagram

(1) RS422 connection diagram 1)

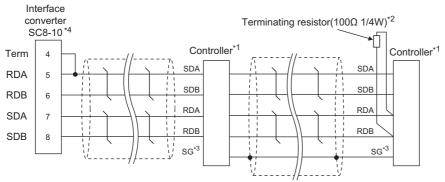

- *1 Pin No. of controller differs depending on the model. Refer to the following table.
- *2 Terminating resistor should be provided for a controller which will be a terminal.
- *3 Do not connect SG of the controller and SG of the converter.
- *4 Set the Communication Type switch of the converter to RS-422.


	Controller type									
Signal name	LT300	LT400	DZ1000, DZ2000	DB1000	DB2000					
	Terminal No.	Terminal No.	Terminal No.	Terminal No.	Terminal No.					
SDA	11	11	19	14	28					
SDB	12	12	20	15	29					
RDA	13	13	21	12	26					
RDB	14	14	22	13	27					
SG	15	15	23	16	30					

		Controller type										
Signal name Terr	KP1000	KP2000		SE3000	AL3000 AH3000	JU	KE3000	LE5000				
	Terminal	Terminal No.*5		Terminal	Terminal	Terminal	Terminal	Terminal				
	No.	A*6	C*6, F*6	name	name	No.	name	name				
SDA	14	28	31	SDA	SDA	1	SDA	SDA				
SDB	15	29	32	SDB	SDB	2	SDB	SDB				
RDA	12	26	29	RDA	RDA	3	RDA	RDA				
RDB	13	27	30	RDB	RDB	4	RDB	RDB				
SG	16	30	28	SG	SG	5	SG	SG				

^{*5} For KP2000 series, the terminal No. differs according to the model.

^{*6} This indicates the symbols of the position 10) (third zone) of the following models. Model: KP2 4) 5) 6) 7) 8) 9) 10) – 12) 13) 14)

(2) RS422 connection diagram 2)

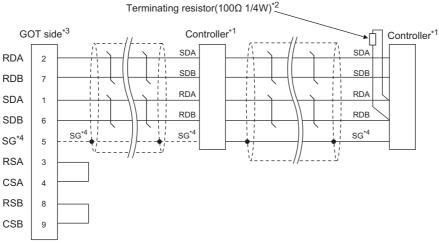

- Pin No. of controller differs depending on the model. Refer to the following table. *1
- *2 Terminating resistor should be provided for a controller which will be a terminal.
- *3 Set the terminating resistor of GOT side.

■ Connecting terminating resistors

When connecting to DB1000 or DB200 Series, connect SG of the controller and SG of the GOT.

	Controller type									
Signal name	LT300	LT400	DZ1000, DZ2000	DB1000	DB2000					
	Terminal No.	Terminal No.	Terminal No.	Terminal No.	Terminal No.					
SDA	11	11	19	14	28					
SDB	12	12	20	15	29					
RDA	13	13	21	12	26					
RDB	14	14	22	13	27					
SG	15	15	23	16	30					

		Controller type								
Signal name	KP1000	KP1000 KP2000		SE3000	AL3000 AH3000	JU	KE3000	LE5000		
	Terminal No.	Termin	al No. ^{*5}	Terminal		Terminal No.	Terminal name	Terminal name		
		A*6	C*6, F*6	name						
SDA	14	28	31	SDA	SDA	1	SDA	SDA		
SDB	15	29	32	SDB	SDB	2	SDB	SDB		
RDA	12	26	29	RDA	RDA	3	RDA	RDA		
RDB	13	27	30	RDB	RDB	4	RDB	RDB		
SG	16	30	28	SG	SG	5	SG	SG		

For KP2000 series, the terminal No. differs according to the model.

This indicates the symbols of the position 10) (third zone) of the following models. Model: KP2 4) 5) 6) 7) 8) 9) 10) - 12) 13) 14)

Precautions when preparing a cable

(1) Cable length

The length of the RS-422 cable must be 1200m or less.

(2) GOT side connector

For the GOT side connector, refer to the following.

1.4.1 GOT connector specifications

(3) CHINO controller side connector

Use the connector compatible with the CHINO controller side module.

For details, refer to the user's manual of the CHINO controller.

Connecting terminating resistors

(1) GOT side

Set the terminating resistor setting switch of the GOT main unit to "100 OHM".

For the procedure to set the terminating resistor, refer to the following.

1.4.3 Terminating resistors of GOT


(2) CHINO controller side

When connecting a CHINO controller to the GOT, a terminating resistor must be connected to the CHINO controller.

User's Manual of the CHINO controller

■ Connection diagram

(1) RS485 connection diagram 1)

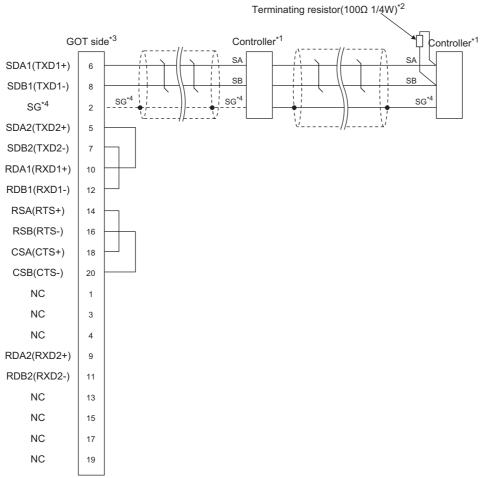


- *1 Pin No. of controller differs depending on the model. Refer to the following table.
- *2 Terminating resistor should be provided for a controller which will be a terminal.
- *3 Set the terminating resistor of GOT side.
 - Connecting terminating resistors
- *4 When connecting to DB1000 or DB200 Series, connect SG of the controller and SG of the GOT.

	Controller type								
Signal name	LT230	LT300	LT400	LT830	DZ1000, DZ2000	DB1000	DB2000		
	Terminal No.	Terminal No.	Terminal No.	Terminal No.	Terminal No.	Terminal No.	Terminal No.		
SA	6	11	11	6	19	12	26		
SB	7	12	12	7	20	13	27		
SG	8	15	15	8	23	14	28		

	Controller type						
Signal name	KP1000	KP200	AL3000 AH3000				
	Terminal	Terminal N	Terminal				
	No.	S*6, E*6, F*6, G*6	D*6, G*6	name			
SA	12	26	29	SA			
SB	13	27	30	SB			
SG	14	28	31	SG			

^{*5} For KP2000 series, the terminal No. differs according to the model.

(2) RS485 connection diagram 2)

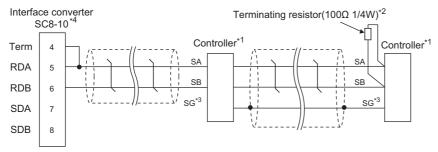

- *1 Pin No. of controller differs depending on the model. Refer to the following table.
- *2 Terminating resistor should be provided for a controller which will be a terminal.
- *3 Do not connect SG of the controller and SG of the GOT.
- *4 Set the Communication Type switch of the converter to RS-485.

	Controller type								
Signal name	LT230	LT300	LT400	LT830	DZ1000, DZ2000	DB1000	DB2000		
	Terminal No.	Terminal No.	Terminal No.	Terminal No.	Terminal No.	Terminal No.	Terminal No.		
SA	6	11	11	6	19	12	26		
SB	7	12	12	7	20	13	27		
SG	8	15	15	8	23	14	28		


Signal name	Controller type							
	KP1000	KP200	AL3000 AH3000					
	Terminal No.	Terminal 1	Terminal					
		S*6, E*6, F*6, G*6	D*6, G*6	name				
SA	12	26	29	SA				
SB	13	27	30	SB				
SG	14	28	31	SG				

^{*5} For KP2000 series, the terminal No. differs according to the model.

^{*6} This indicates the symbols of the position 10) (third zone) of the following models. Model: KP2 4) 5) 6) 7) 8) 9) 10) – 12) 13) 14) For the symbol G, two terminal numbers are available. Select as necessary.

^{*6} This indicates the symbols of the position 10) (third zone) of the following models. Model: KP2 4) 5) 6) 7) 8) 9) 10) – 12) 13) 14)
For the symbol G, two terminal numbers are available. Select as necessary.

(3) RS485 connection diagram 3)

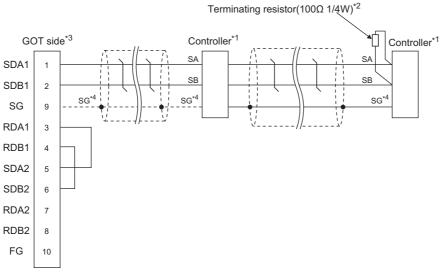

- *1 Pin No. of controller differs depending on the model. Refer to the following table.
- *2 Terminating resistor should be provided for a controller which will be a terminal.
- *3 Set the terminating resistor of GOT side.
 - Connecting terminating resistors
- *4 When connecting to DB1000 or DB200 Series, connect SG of the controller and SG of the GOT.


				Controller type			
Signal name	LT230	LT300	LT400	LT830	DZ1000, DZ2000	DB1000	DB2000
	Terminal No.	Terminal No.	Terminal No.	Terminal No.	Terminal No.	Terminal No.	Terminal No.
SA	6	11	11	6	19	12	26
SB	7	12	12	7	20	13	27
SG	8	15	15	8	23	14	28

		Controller	type		
Signal name	KP1000	KP200	0	AL3000 AH3000	
	Terminal		Terminal No.*5		
	No.	S*6, E*6, F*6, G*6	D*6, G*6	name	
SA	12	26	29	SA	
SB	13	27	30	SB	
SG	14	28	31	SG	

^{*5} For KP2000 series, the terminal No. differs according to the model.

This indicates the symbols of the position 10) (third zone) of the following models. Model: KP2 4) 5) 6) 7) 8) 9) 10) – 12) 13) 14)
For the symbol G, two terminal numbers are available. Select as necessary.


(4) RS485 connection diagram 4)

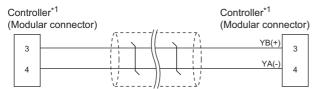

*1 For details of the pin assignment, refer to the following manual.


User's Manual of the CHINO controller

(5) RS485 connection diagram 5)

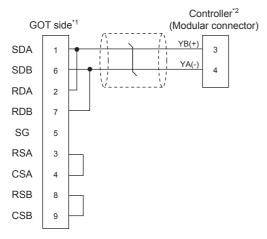


- *1 Set the terminating resistor of GOT side.
 - Connecting terminating resistors
- *2 For details of the pin assignment, refer to the following manual.
 - User's Manual of the CHINO controller

(6) RS485 connection diagram 6)

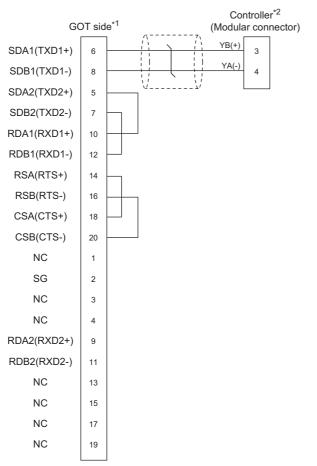


- *1 Set the terminating resistor of GOT side.
 - Connecting terminating resistors
- *2 For details of the pin assignment, refer to the following manual.
 - User's Manual of the CHINO controller

(7) RS485 connection diagram 7)

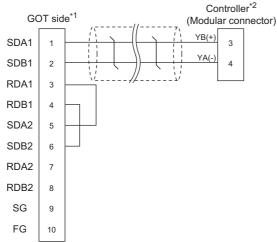

- *1 Set the terminating resistor of GOT side.
 - Connecting terminating resistors
- *2 For details of the pin assignment, refer to the following manual.
 - User's Manual of the CHINO controller


(8) RS485 connection diagram 8)

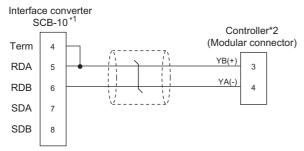

- *1 Set the Communication Type switch of the converter to RS-485.
- *2 For details of the pin assignment, refer to the following manual.

User's Manual of the CHINO controller


(9) RS485 connection diagram 9)

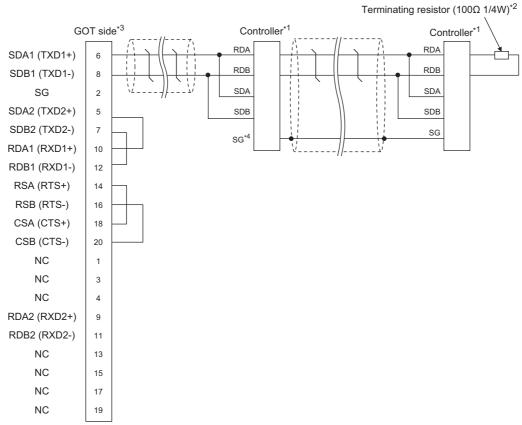

- *1 Pin No. of controller differs depending on the model. Refer to the following table.
- *2 Terminating resistor should be provided for a controller which will be terminating resistors.
- Set the terminating resistor of The GOT side.
 - Connecting terminating resistors
- *4 Do not connect SG of the controller and SG of the GOT.

	Controller type				
Signal name	SE3000	JU	KE3000	LE5000	
3 2 2 2	Terminal name	Terminal No.	Terminal name	Terminal name	
RDA	RDA	3	RDA	RDA	
RDB	RDB	4	RDB	RDB	
SDA	SDA	1	SDA	SDA	
SDB	SDB	2	SDB	SDB	
SG	SG	5	SG	SG	


(10) RS485 connection diagram 10)

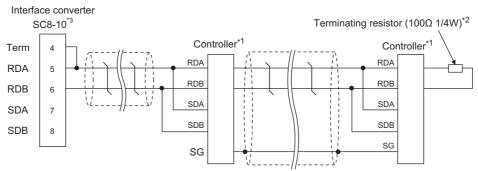

- Pin No. of controller differs depending on the model. Refer to the following table.
- *2 Terminating resistor should be provided for a controller which will be terminating resistors.
- Set the Communication Type switch of the converter to RS-485.

	Controller type				
Signal name	SE3000	JU	KE3000	LE5000	
g	Terminal	Terminal	Terminal	Terminal	
	name	No.	name	name	
RDA	RDA	3	RDA	RDA	
RDB	RDB	4	RDB	RDB	
SDA	SDA	1	SDA	SDA	
SDB	SDB	2	SDB	SDB	
SG	SG	5	SG	SG	


(11) RS485 connection diagram 11)

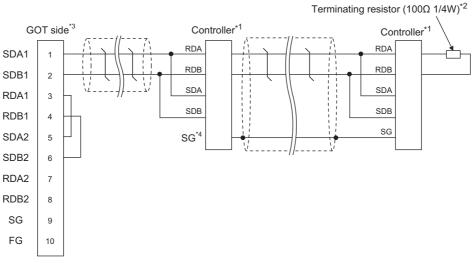

- *1 Pin No. of controller differs depending on the model. Refer to the following table.
- *2 Terminating resistor should be provided for a controller which will be terminating resistors.
- *3 Set the terminating resistor of The GOT side.
 - Connecting terminating resistors
- Do not connect SG of the controller and SG of the GOT.

	Controller type				
Signal name	SE3000	JU	KE3000	LE5000	
3	Terminal	Terminal	Terminal	Terminal	
	name	No.	name	name	
RDA	RDA	3	RDA	RDA	
RDB	RDB	4	RDB	RDB	
SDA	SDA	1	SDA	SDA	
SDB	SDB	2	SDB	SDB	
SG	SG	5	SG	SG	

(12) RS485 connection diagram 12)

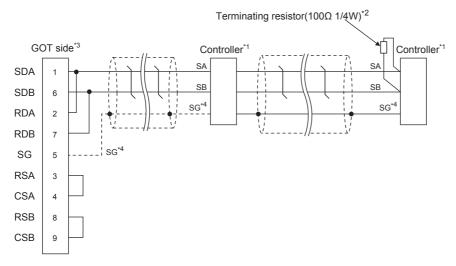

- *1 Pin No. of controller differs depending on the model. Refer to the following table.
- *2 Terminating resistor should be provided for a controller which will be terminating resistors.
- *3 Set the terminating resistor of The GOT side.
 - Connecting terminating resistors
- *4 When connecting to DB1000 or DB200 Series, connect SG of the controller and SG of the GOT.

				Controller type			
Signal name	LT230	LT300	LT400	LT830	DZ1000, DZ2000	DB1000	DB2000
	Terminal No.	Terminal No.	Terminal No.	Terminal No.	Terminal No.	Terminal No.	Terminal No.
SA	6	11	11	6	19	12	26
SB	7	12	12	7	20	13	27
SG	8	15	15	8	23	14	28


		Controller	type	
KP1000 Signal name		KP200	0	AL3000 AH3000
Terminal		Terminal I	Terminal	
	No.	S*6, E*6, F*6, G*6	D*6, G*6	name
SA	12	26	29	SA
SB	13	27	30	SB
SG	14	28	31	SG

^{*5} For KP2000 series, the terminal No. differs according to the model.

For the symbol G, two terminal numbers are available. Select as necessary.

^{*6} This indicates the symbols of the position 10) (third zone) of the following models. Model: KP2 4) 5) 6) 7) 8) 9) 10) - 12) 13) 14)

(13) RS485 connection diagram 13)

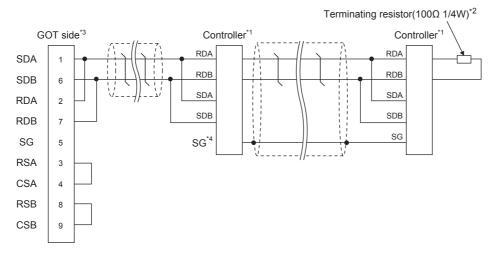

- Pin No. of controller differs depending on the model. Refer to the following table.
- Terminating resistor should be provided for a controller which will be terminating resistors.
- *3 Set the terminating resistor of The GOT side.
 - Connecting terminating resistors
- Do not connect SG of the controller and SG of the GOT.

	Controller type					
Signal name	SE3000	JU	KE3000	LE5000		
S .	Terminal	Terminal	Terminal	Terminal		
	name	No.	name	name		
RDA	RDA	3	RDA	RDA		
RDB	RDB	4	RDB	RDB		
SDA	SDA	1	SDA	SDA		
SDB	SDB	2	SDB	SDB		
SG	SG	5	SG	SG		

Precautions when preparing a cable

(1) Cable length

The maximum length of the RS-485 cable must be 1,200m or less.

(2) GOT side connector

For the GOT side connector, refer to the following.

1.4.1 GOT connector specifications

(3) CHINO controller side connector

Use the connector compatible with the CHINO controller side module.

For details, refer to the user's manual of the CHINO controller.

Connecting terminating resistors

(1) GOT side

Set the terminating resistor setting switch of the GOT main unit to "100 OHM".

For the procedure to set the terminating resistor, refer to the following.

1.4.3 Terminating resistors of GOT

(2) CHINO controller side


When connecting a CHINO controller to the GOT, a terminating resistor must be connected to the CHINO controller.

User's Manual of the CHINO controller

11.4 GOT Side Settings

11.4.1 Setting communication interface (Communication settings)

Set the channel of the equipment to be connected to the GOT.

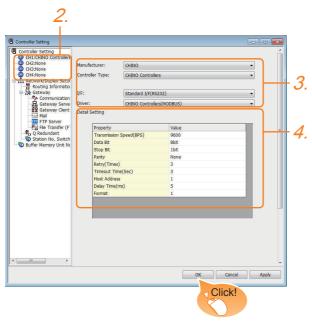

- Select [Common] → [Controller Setting] from the menu.
- The Controller Setting window is displayed. Select the channel to be used from the list menu.
- 3. Set the following items.
 - · Manufacturer: CHINO
 - · Controller Type: CHINO Controllers
 - I/F: Interface to be used
 - Driver: CHINO Controller(MODBUS)
- The detailed setting is displayed after Manufacturer, Controller Type, I/F, and Driver are set. Make the settings according to the usage environment.

11.4.2 Communication detail settings

Click the [OK] button when settings are completed.



The settings of connecting equipment can be confirmed in [I/F Communication Setting]. For details, refer to the following.

1.1.2 I/F communication setting

11.4.2 Communication detail settings

Make the settings according to the usage environment.

Property	Value
Transmission Speed(BPS)	9600
Data Bit	8 bit
Stop Bit	1 bit
Parity	None
Retry(Times)	3
Timeout Time(Sec)	3
Host Address	1
Delay Time(ms)	5
Format	1

Item	Description	Range
Transmission Speed	Set this item when change the transmission speed used for communication with the connected equipment. (Default: 9600bps)	9600bps, 19200bps, 38400bps, 57600bps, 115200bps
Data Bit	Set this item when change the data length used for communication with the connected equipment. (Default: 8bits)	7bits/8bits
Stop Bit	Specify the stop bit length for communications. (Default: 1bit)	1bit/2bits
Parity	Specify whether or not to perform a parity check, and how it is performed during communication. (Default: None)	None Even Odd
Retry	Set the number of retries to be performed when a communication error occurs. (Default: 3times)	0 to 5times
Timeout Time	Set the time period for a communication to time out. (Default: 1sec)	1 to 30sec
Host Address	Specify the host address (station No. of the GOT to which the controller is connected) in the connected network. (Default: 1)	1 to 99
Delay Time	Set this item to adjust the transmission timing of the communication request from the GOT. (Default: 5ms)	0 to 300ms
Format	Select the communication format. (Default: 1) Format 1: Accessible to LT230/300/400/830, DZ1000/2000, Not accessible to GT120 Format 2: Accessible to GT120	1/2



(1) Format

When connecting to GT120, specify format 2.

(2) Delay Time

When connecting to the following models, set the send delay time to 30ms or more.

Model name

DZ1000, DZ2000

(3) Communication interface setting by the Utility
The communication interface setting can be
changed on the Utility's [Communication Settings]
after writing [Communication Settings] of project
data.

For details on the Utility, refer to the following manual.

GOT2000 Series User's Manual (Utility)

(4) Precedence in communication settings
When settings are made by GT Designer3 or the
Utility, the latest setting is effective.

11.5 Controller Side Setting



(1) CHINO controller

For details of CHINO controller, refer to the following manual.

User's Manual of the CHINO controller

(2) Converter

For details on communication settings of the converter, refer to the following manual.

User's Manual for converter

Mode	Model name		
	LT230, LT300	11.5.1	
	LT400, LT830	11.5.2	
	DZ1000, DZ2000	11.5.3	
	DB1000, DB2000	11.5.4	
	GT120	11.5.5	
Controller	KP1000, KP2000	11.5.6	
	AL3000, AH3000	11.5.7	
	SE3000	11.5.8	
	JU	11.5.9	
	KE3000	11.5.10	
	LE5000	11.5.11	
Converter	SC8-10	11.5.12	

11.5.1 Connecting to LT230, LT300 Series

Key Lock setting

To write the Digital and the Analog parameters, set the Key Lock setting to Lock 4.

Communication settings

Set the communication settings with controller key operation.

Item	Set value
Protocol	rtU: MODBUS RTU
Function	Com: Upper communication
Station No.*1	1 to 99
Transmission speed*2	9600bps, 19200bps
Character* ² (Bit length, Parity bit, Stop bit)	5: 8bit, None, 1bit 6: 8bit, None, 2bit 7: 8bit, Even, 1bit 8: 8bit, Even, 2bit 9: 8bit, Odd, 1bit 10: 8bit, Odd, 2bit

^{*1} Avoid duplication of the station No. with any of the other units.

11.5.2 Connecting to LT400, LT830 Series

■ Key Lock setting

To write the Digital and the Analog parameters, set thefollowing Key Lock setting

LT400: Lock4LT830: Lock3

■ Communication settings

Set the communication settings with controller key operation.

Item	Set value	
Protocol	rtU: MODBUS RTU	
Function	Com: Upper communication	
Station No.*1	1 to 99	
Transmission speed*2	9600bps, 19200bps	
Character ^{*2} (Bit length, Parity bit, Stop bit)	8N1: 8bit, None, 1bit 8N2: 8bit, None, 2bit 8E1: 8bit, Even, 1bit 8E2: 8bit, Even, 2bit 8O1: 8bit, Odd, 1bit 8O2: 8bit, Odd, 2bit	

¹ Avoid duplication of the station No. with any of the other

11.5.3 Connecting to DZ1000, DZ2000 Series

Key Lock setting

To write the Digital and the Analog parameters, set the Key Lock setting to Lock 2.

Communication settings

Set the communication settings with controller key operation.

Item	Set value	
Protocol	rtU: MODBUS RTU	
Function	Com: Upper communication	
Station No.*1	1 to 31	
Transmission speed*2	9600bps, 19200bps	
Data bit	8bits (fixed)	
Stop bit	1bit (fixed)	
Parity bit	None (fixed)	

^{*1} Avoid duplication of the station No. with any of the other units.

^{*2} Adjust the settings with GOT settings.

Adjust the settings with GOT settings.

^{*2} Adjust the settings with GOT settings.

11.5.4 Connecting to DB1000, DB2000 Series

Communication settings

Set the communication settings with controller key operation.

Item	Set value	
Protocol	MODBUS (RTU)	
Function	Com: Upper communication	
Station No.*1	01 to 99	
Transmission speed*2	9600bps, 19200bps, 38400bps	
Character	7BIT/EVEN/STOP1 7BIT/EVEN/STOP2 7BIT/ODD/STOP1 7BIT/ODD/STOP2 8BIT/NON/STOP1 8BIT/NON/STOP2 8BIT/EVEN/STOP1 8BIT/EVEN/STOP2 8BIT/EVEN/STOP2 8BIT/ODD/STOP1 8BIT/ODD/STOP2	

^{*1} Avoid duplication of the station No. with any of the other units.

11.5.5 Connecting to GT120 Series

Key Lock setting

To write the Digital and the Analog parameters, set the Key Lock setting to Lock 3.

Communication settings

Release the controller lock function in advance and set the following communication settings.

After completing the communication settings, set the Key Lock setting to Lock 3.

Item	Set value
Communication protocol	comr: MODBUS RTU
Station No.*1	1 to 95
Transmission speed*2	96: 9600bps 192: 19200bps
Data bit	8bits (fixed)
Stop bit*2	1bit, 2bits
Parity bit ^{*2}	nonE: None EVEn: Even odd: Odd

^{*1} Avoid duplication of the station No. with any of the other units.

11.5.6 Connecting to KP1000, KP2000

Key Lock setting

To write the Digital and the Analog parameters, set the Key Lock setting.

Communication settings

Set the communication settings with controller key operation.

Item	Set value	
Protocol	MODBUS (RTU)	
Function	COM	
Station No.*1	1 to 99	
Transmission speed*2	2400bps, 4800bps, 9600bps, 19200bps, 38400bps	
Character ^{*2} (Bit length, Parity bit, Stop bit)	8BIT/NON/STOP1 8BIT/NON/STOP2 8BIT/EVEN/STOP1 8BIT/EVEN/STOP2 8BIT/ODD/STOP1 8BIT/ODD/STOP2	

^{*1} Avoid duplication of the station No. with any of the other units.

11.5.7 Connecting to AL3000, AH3000

Key Lock setting

To write the Digital and the Analog parameters, set the Key Lock setting.

Communication settings

Set the communication settings with controller key operation.

Item	Set value	
Protocol	MODBUS	
Transmission code	rtu	
Communication type	RS232C, RS-422A, RS-485	
Station No.*1	1 to 31	
Transmission speed*2	2400bps, 4800bps, 9600bps, 19200bps	
Character*2 (Bit length, Parity bit, Stop bit)	[8N1]: 8bit, None, 1bit [8N2]: 8bit, None, 2bit [8E1]: 8bit, Even, 1bit [8E2]: 8bit, Even, 2bit [8O1]: 8bit, Odd, 1bit [8O2]: 8bit, Odd, 2bit	

^{*1} Avoid duplication of the station No. with any of the other units.

^{*2} Adjust the settings with GOT settings.

11.5.8 Connecting to SE3000

Key Lock setting

To write the Digital and the Analog parameters, set the Key Lock setting.

Communication settings


Make the communication settings using the engineering software package (PASS)

Item	Set value
Protocol	MODBUS RTU
Station No.*1*3	1 to 31
Transmission speed*2*3	9600bps, 19200bps
Data bit	8bits (fixed)
Parity bit*2	Even, Odd, Non
Stop bit*2	1bit, 2bits
Transmission code	Binary (fixed)
Error check	CRC-16 (fixed)

- *1 Avoid duplication of the station No. with any of the other units.
- *2 Adjust the settings with GOT settings.
- *3 Station No. and Transmission speed can also be set by switch SW1.

Setting by Switch (SW1)

Station No. and Transmission speed can be set.

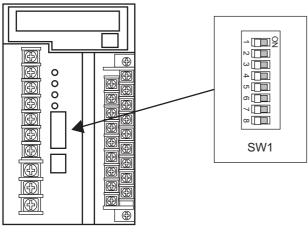


(1) Station No.

SW1-1	SW1-2	SW1-3	SW1-4	SW1-5	Station No.	
OFF	OFF	OFF	OFF	OFF	1	
ON	OFF	OFF	OFF	OFF	1	
OFF	ON	OFF	OFF	OFF	2	
ON	ON	OFF	OFF	OFF	3	
:						
			:			
ON	OFF	ON	ON	ON	29	
OFF	ON	ON	ON	ON	30	
ON	ON	ON	ON	ON	31	

(2) Transmission speed

SW1-6	SW1-7	communication port	Transmission speed
OFF	OFF	Upper communication	9600bps
OFF	ON	Upper communication	19200bps
ON	OFF	ENG -	
ON	ON	User setting inhibited	

■ Setting by Switch (SW2)

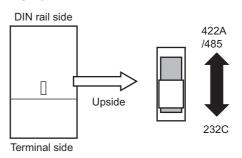

SW2		
Front side (Terminal side)	Rear side (DIN rail side)	
RS232C	RS422A/485	

11.5.9 Connecting to JU

Key Lock setting

To write the Digital and the Analog parameters, set the Key Lock setting.

Communication settings

Set the communication settings with controller key operation.

Item	Set value	
Protocol	rtU	
Station No.*1	1 to 99	
Transmission speed*2	9600bps, 19200bps	
Character*2 (Bit length, Parity bit, Stop bit)	[8N1]: 8bit, None, 1bit [8N2]: 8bit, None, 2bit [8E1]: 8bit, Even, 1bit [8E2]: 8bit, Even, 2bit [8O1]: 8bit, Odd, 1bit [8O2]: 8bit, Odd, 2bit	

- *1 Avoid duplication of the station No. with any of the other units.
- units.
 *2 Adjust the settings with GOT settings.


11.5.10 Connecting to KE3000

Key Lock setting

To write the Digital and the Analog parameters, set the Key Lock setting.

Communication settings

Make the communication settings by operating the switches SW2 and SW3 of the module.

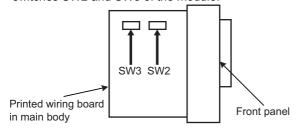

(1) Setting by SW2

Item	Set value	SW2-2	SW2-3
Transmission code*2	MODBUS RTU	OFF	-
Transmission and d*1	9600bps	-	OFF
Transmission speed*1	19200bps	-	ON
Transmission character structure*2	8bits, None, 1bit (fixed)	-	-

- Adjust the settings with GOT settings. When the transmission code is MODBUS RTU, the setting of the transmission character structure is fixed.

(2) Setting by SW3

Set the station No. as follows.

SW3-4	SW3-5	SW3-6	SW3-7	SW3-8	Station No.*1
OFF	OFF	OFF	OFF	OFF	1
ON	OFF	OFF	OFF	OFF	1
OFF	ON	OFF	OFF	OFF	2
ON	ON	OFF	OFF	OFF	3
			:		
			:		
ON	OFF	ON	ON	ON	29
OFF	ON	ON	ON	ON	30
ON	ON	ON	ON	ON	31

Avoid duplication of the station No. with any of the other

11.5.11 Connecting to LE5000

Key Lock setting

To write the Digital and the Analog parameters, set the Key Lock setting.

Communication settings

Set the communication settings with controller key operation.

Item	Set value		
RTU/ASCII	RTU		
Station No.*1	1 to 99		
Transmission speed*2	9600bps, 19200bps		
Character*2 (Bit length, Parity bit, Stop bit)	[8N1]: 8bit, None, 1bit [8N2]: 8bit, None, 2bit [8E1]: 8bit, Even, 1bit [8E2]: 8bit, Even, 2bit [8O1]: 8bit, Odd, 1bit [8O2]: 8bit, Odd, 2bit		

- Avoid duplication of the station No. with any of the other
- Adjust the settings with GOT settings.

11.5.12 Connecting to converter SC8-10


Communication settings

Make the communication settings using setting switches.

Item	Set value		
Transmission speed select switch*1	9600bps, 19200bps		
Communication type switch	RS-485, RS-422		

Adjust the settings with GOT and controller settings.

Settings by switch

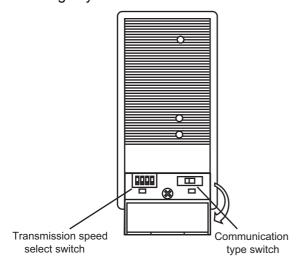

(1) Transmission speed setting

Setting	Set value	Switch No.					
item	Set value	1	2	3	4	A	
Transmissi	9600bps	OFF	ON	OFF	OFF	¥	
on speed	19200bps	OFF	OFF	ON	OFF		1 2 3 4


(2) Communication type setting



11.5.13 Station number setting

Set each station number so that no station number overlaps.

The station number can be set without regard to the cable connection order. There is no problem even if station numbers are not consecutive.

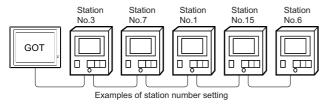

(1) Direct specification

When setting the device, specify the station number of the controller of which data is to be changed.

Model name	Specification range	Refer to
LT230, LT300, LT400, LT830	1 to 99	11.5.1 11.5.2
DZ1000, DZ2000	1 to 31	11.5.3
DB1000, DB2000	1 to 99	11.5.4
GT120	1 to 95	11.5.5
KP1000, KP2000	1 to 99	11.5.6
AL3000, AH3000	1 to 31	11.5.7
SE3000	1 to 31	11.5.8
JU	1 to 99	11.5.9
KE3000	1 to 31	11.5.10
LE5000	1 to 99	11.5.11

(2) Indirect specification

When setting the device, indirectly specify the station number of the controller of which data is to be changed using the 16-bit GOT internal data register (GD10 to GD25).

When specifying the station No. from 100 to 115 on GT Designer3, the value of GD10 to GD25 compatible to the station No. specification will be the station No. of the controller.

Specification station NO.	Compatible device	Setting range
100	GD10	
101	GD11	
102	GD12	
103	GD13	
104	GD14	4 +- 00. 17000 17000 17400 17000
105	GD15	1 to 99: LT230, LT300, LT400, LT830 DB1000, DB2000, KP1000,
106	GD16	KP2000, JU, LE5000
107	GD17	1 to 31: DZ1000, DZ2000, AL3000
108	GD18	AH3000, KE3000, SE3000
109	GD19	1 to 95: GT120
110	GD20	For the setting other than the above, error (dedicated device is out of range) will occur.
111	GD21	(dodicated device is out of fallige) will occur.
112	GD22	
113	GD23	
114	GD24	
115	GD25	

(3) All station specification

Target station differs depending on write-in operation or read-out operation.

- For write-in operation, all station will be a target.
- For read-out operation, only one station will be a target.
- All station specification is not available for KE3000.
 Do not use the all station specification for systems which include KE3000.

11.6 Device Range that Can Be Set

The device ranges of controller that can be used for GOT are as follows.


Note that the device ranges in the following tables are the maximum values that can be set in GT Designer3.

The device specifications of controllers may differ depending on the models, even though belonging to the same series.

Please make the setting according to the specifications of the controller actually used.

When a non-existent device or a device number outside the range is set, other objects with correct device settings may not be monitored.

■ Setting item

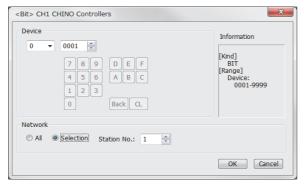

Item	Description					
Device		device name, device number, and bit number. number can be set only when specifying the bit of vice.				
Information	Displays the device type and setting range which are selected in [Device].					
	Set the	monitor target of the set device.				
Network	All	Select this item when writing data to all controllers connected. During monitoring, the controller which is set for [Host Address] of the communication detail settings is monitored. (When inputting data with the numerical input function, data is written to all the connected controllers during input. The controller set for [Host Address] is monitored during other than input (displaying).)				
	Station No.					

*1 The following shows the relation between station numbers of the controller and the GOT data register.

Station No.	GOT data register (GD)	Setting range
100	GD10	1 to 99
101	GD11	(If setting a value outside the range
:	:	above, a device
114	GD24	range error
115	GD25	occurs.)



Device settings of CHINO controller

Devices are set with reference numbers.

For parameters corresponding to each reference number, refer to the manual of the controller to be used.

11.6.1 CHINO controller (CHINO Controllers)

Device name		Setting range	Device No. representation	
evice	Digital parameter (0)	00001 to 09999	Do dand	
Bit device	Digital input data (1)*1	10001 to 19999	Decimal	
device	Analog input data (3)*1	30001 to 39999	Dagimal	
Word device	Analog parameter (4)	40001 to 49999	Decimal	

^{*1} Only reading is possible.

11.7 Precautions

■ Station number settings of temperature controller

In the system configuration, the controller with the station number set with the host address must be

For details of host address setting, refer to the following.

11.4.1 Setting communication interface (Communication settings)

■ GOT clock control

Since the controller does not have a clock function, the settings of [time adjusting] or [time broad cast] by GOT clock control will be disabled.

Disconnecting some of multiple connected equipment

The GOT can disconnect some of multiple connected equipment by setting GOT internal device. For example, the faulty station where a communication timeout error occurs can be disconnected from connected equipment.

For details of GOT internal device setting, refer to the following manual.

GT Designer3 (GOT2000) Screen Design Manual

CONNECTION TO TOSHIBA PLC

12.1 Connectable Model List	12 - 2
12.2 Serial Connection	12 - 3
12.3 Ethernet Connection	12 - 9
12.4 Device Range that Can Be Set	12 - 14

12. CONNECTION TO TOSHIBA PLC


12.1 Connectable Model List

The following table shows the connectable models.

Series	Model name	Clock	Communi cation Type	Connectable GOT	Refer to	
	T2 (PU224)	0				
	Т3	0	RS-422		[☐ 3 12.2.1	
PROSEC T Series	ТЗН	0		от от от от 25 23		
	T2E	0	RS-232			
	T2N	0	RS-422			
	model 2000(S2)	0		ет ет ет	[
PROSEC	model 2000(S2T)	0	RS-422			
V Series	model 2000(S2E)	0	R5-422	27 25 CT 23		
	model 3000 (S3)	0				
Unified Controller nv Series	Controller type1 PU811	0	Ethernet	ет ет ет 27 25 23	[-] 12.3.1	

12.2 Serial Connection


System configuration for connecting to PROSEC T series 12.2.1

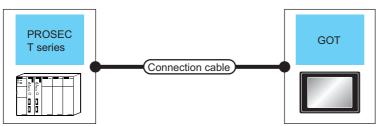



DI O		0	007			
PLO		Connection cable		GOT		Number of connectable
Model name	Communica tion Type	Cable model Connection diagram number	Max. distance	Option device	Model	equipment
T2 (PU224) T3	RS-422	GT09-C30R40501-15P(3m) GT09-C100R40501-15P(10m) GT09-C200R40501-15P(20m) GT09-C300R40501-15P(30m)	1km	- (Built into GOT)	27 25 GT 23	
ТЗН		or (User) RS422 connection diagram 1)		GT15-RS4-9S	ет ет 27 25	
T2E	RS-232	GT09-C30R40102-9P(3m) or	15m	- (Built into GOT)	GT 27 25 GT 23	
	NO-2J2	(User) RS232 connection diagram	13111	GT15-RS2-9P	ет ет 27 25	- 1 GOT for 1 PLC
	RS-422	GT09-C30R40502-6C(3m) GT09-C100R40502-6C(10m) GT09-C200R40502-6C(20m) GT09-C300R40502-6C(30m) or (JSET) (J	1km -	- (Built into GOT)	27 25 GT 25 GT 23	
				GT15-RS4-9S	ет ет 27 25	
	RS-232 (User) RS232 (User) RS23	GT09-C30R20502-15P(3m)	15m	- (Built into GOT)	ет ет 27 25 ет 23	
T2N		(User) RS232 connection diagram 2)		GT15-RS2-9P	ет ет 27 25	
		GT09-C30R40503-15P(3m) GT09-C100R40503-15P(10m) GT09-C200R40503-15P(20m) GT09-C300R40503-15P(30m) or User (User) RS422 connection diagram 3)	1km -	- (Built into GOT)	ет ет 27 25 ет 23	
				GT15-RS4-9S	ет ет 27 25	

12.2.2 System configuration for connecting to PROSEC V series

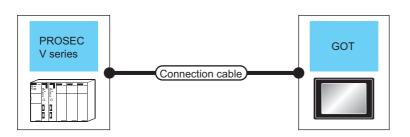



PLC		Connection cable		Connection cable GOT		Number of
Model name	Communi cation Type	Cable model Max Connection diagram number distan		Option device	Model	connectable equipment
model 2000 (S2) model 2000 (S2T)	OT00 0000D40500 00(00)		1km	- (Built into GOT)	er er 25 25 23	
model 2000 (S2E)			GT15-RS4-9S	ет ет 27 25	1 GOT for 1 PLC	
model 3000 (S3)	RS-422	GT09-C30R40501-15P(3m) GT09-C100R40501-15P(10m) GT09-C200R40501-15P(20m) GT09-C300R40501-15P(30m)	1km	- (Built into GOT)	ет ет 27 25 ет 23	1 1 001 101 11 20
	110 122	or User RS422 connection diagram 1)		GT15-RS4-9S	ет ет 27 25	


12.2.3 Connection Diagram

The following diagram shows the connection between the GOT and the PLC.


■ RS-232 cable

(1) Connection diagram

(a) RS232 connection diagram 1)

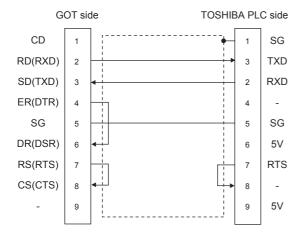

(b) RS232 connection diagram 2)

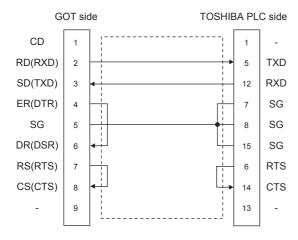

(2) Precautions when preparing a cable

(a) Cable length

The length of the RS-232 cable must be 15m or


(b) GOT side connectorFor the GOT side connector, refer to the following.1.4.1 GOT connector specifications

(c) TOSHIBA PLC side connector
Use the connector compatible with the TOSHIBA PLC.
For details, refer to the TOSHIBA PLC user's manual.


■ RS-422 cable

(1) Connection diagram


(a) RS422 connection diagram 1)

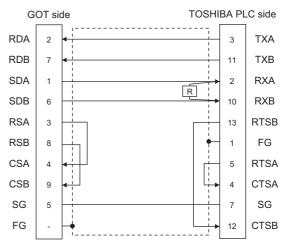

(b) RS422 connection diagram 2)

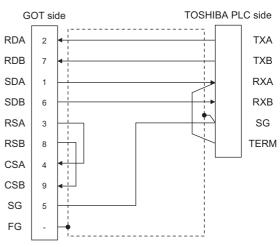

(c) RS422 connection diagram 3)

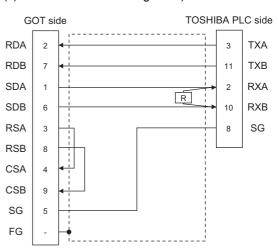

(2) Precautions when preparing a cable

(a) Cable length

The length of the RS-422 cable must be 1km or less.

(b) GOT side connector

For the GOT side connector, refer to the following.

1.4.1 GOT connector specifications

(c) TOSHIBA PLC side connector

Use the connector compatible with the TOSHIBA PLC.

For details, refer to the TOSHIBA PLC user's manual.

(3) Setting terminating resistors

(a) GOT side

Set the terminating resistor setting switch of the For details of terminating resistor settings, refer to the following.

1.4.3 Terminating resistors of GOT

(b) TOSHIBA PLC side

When connecting an TOSHIBA PLC to a GOT, a terminating resistor must be set to the TOSHIBA PLC.

For the setting of the terminating resistor, refer to the following manual.


TOSHIBA PLC user's Manual

- T2 (PU224), T2N, T3, T3H, model 3000 (S3) Connect the terminating resistor (1/2W-120 Ω) across RXA and RXB.
- T2E, model 2000 (S2, S2T) Short across the RXA and TERM terminals.

12.2.4 GOT Side Settings

Setting communication interface (Communication settings)

Set the channel of the equipment to be connected to the GOT.

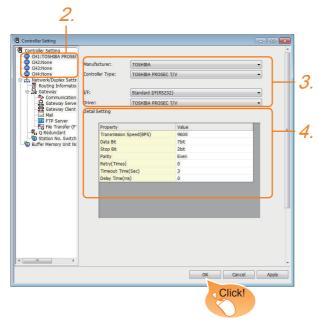

- Select [Common] → [Controller Setting] from the menu.
- The Controller Setting window is displayed. Select the channel to be used from the list menu.
- Set the following items.
 - · Manufacturer: TOSHIBA
 - Controller Type: TOSHIBA PROSEC T/V
 - I/F: Interface to be used
 - Driver: TOSHIBA PROSEC T/V
- 4. The detailed setting is displayed after Manufacturer, Controller Type, I/F, and Driver are set. Make the settings according to the usage environment.
 - □ Communication detail settings

Click the [OK] button when settings are completed.



The settings of connecting equipment can be confirmed in [I/F Communication Setting]. For details, refer to the following.

1.1.2 I/F communication setting

Communication detail settings
 Make the settings according to the usage environment.

Property	Value
Transmission Speed(BPS)	9600
Data Bit	7 bit
Stop Bit	2 bit
Parity	Even
Retry(Times)	0
Timeout Time(Sec)	3
Delay Time(ms)	0

Item	Description	Range
Transmission Speed	Set this item when change the transmission speed used for communication with the connected equipment. (Default: 9600bps)	4800bps, 9600bps, 19200bps, 38400bps, 57600bps, 115200bps
Data Bit	Set this item when change the data length used for communication with the connected equipment. (Default: 7bits)	7bit, 8bit
Stop Bit	Specify the stop bit length for communications. (Default: 2bit)	1bit, 2bit
Parity	Specify whether or not to perform a parity check, and how it is performed during communication. (Default: Even)	None, Even, Odd
Retry	Set the number of retries to be performed when a communication error occurs. (Default: 0time)	0 to 5times
Timeout Time	Set the time period for a communication to time out. (Default: 3sec)	1 to 30sec
Delay Time	Set this item to adjust the transmission timing of the communication request from the GOT. (Default: 0ms)	0 to 300 (ms)



(1) Communication interface setting by the Utility The communication interface setting can be changed on the Utility's [Communication Settings] after writing [Communication Settings] of project data.

For details on the Utility, refer to the following manual.

GOT2000 Series User's Manual (Utility)

(2) Precedence in communication settings
When settings are made by GT Designer3 or the
Utility, the latest setting is effective.

12.2.5 PLC Side Setting



TOSHIBA PLC

For details of the TOSHIBA PLC, refer to the following

TOSHIBA PLC user's Manual

Model name		Refer to
	T2 (PU224), T2E, T2N	12 - 8
PLC CPU	T3, T3H	12 - 8
	model 2000 (S2, S2T, S2E), model 3000 (S3)	12 - 8

■ Connecting to T2 (PU224), T2E or T2N

(1) Switch setting

Set the switches accordingly.

(a) Operation mode setting switch

	Switch No.	Settings	Setting details
OFF ON 1	4	OFF (fixed)	Computer link
4	5	OFF (fixed)	Sampator mix

(b) DIP switch on module PCB (T2N only)

	Set value		
Switch No.	For RS-232	For RS-422	
	communication	communication	
DIP switch: No. 1	ON (RS-232C)	OFF (RS-485*1)	

Can be used as RS-422.

(2) Transmission parameter setting Enter the transmission parameters.

Item	Set value
Transmission speed*1*2*3	4800bps, 9600bps, 19200bps
Data bit	7bit
Stop bit	2bit
Parity bit	Even
Station No.	1

- Indicates only the transmission speeds that can be set on
- the GOT side.
 Fixed to 9600bps for T2E only.
 The transmission speed setting must be consistent with that of the GOT side.

For the transmission speed setting on the GOT side, refer to



■ Setting communication interface (Communication settings)

Connecting to T3 or T3H

Enter the transmission parameters.

Item	Set value
Transmission speed*1*2	4800bps, 9600bps, 19200bps
Data bit	7bit
Stop bit	2bit
Parity bit	Even
Station No.	1

- Indicates only the transmission speeds that can be set on the GOT side.
- The transmission speed setting must be consistent with that of the GOT side.

For the transmission speed setting on the GOT side, refer to the following.

■ Setting communication interface (Communication settings)

Connecting to model 2000 (S2, S2T, S2E), model 3000 (S3)

Enter the transmission parameters.

Item	Set value
Transmission method	RS485 ^{*1}
RS485	COM1
Timeout time	5sec
Transmission speed*2*3	4800bps, 9600bps, 19200bps
Data bit	7bit
Stop bit	2bit
Parity bit	Even
Station No.	1

- Can be used as RS-422.
- Indicates only the transmission speeds that can be set on the GOT side
- The transmission speed setting must be consistent with that of the GOT side.
 For the transmission speed setting on the GOT side, refer to


the following



■ Setting communication interface (Communication settings)

12.3 Ethernet Connection

System configuration for connecting to Unified Controller nv Series 12.3.1

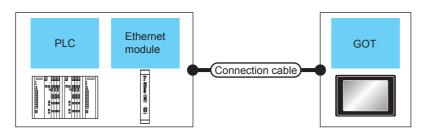



PLC	,	Connection cable		GOT		
Series	Ethernet module*3	Cable model	Maximum segment length*2	Option device	Model	Number of connectable equipment
Unified Controller nv Series	EN811	Twisted pair cable*1 • 10BASE-T Shielded twisted pair cable (STP) or unshielded twisted pair cable (UTP): Category 3, 4, and 5 • 100BASE-TX Shielded twisted pair cable (STP): Category 5 and 5e	100m	- (Built into GOT)	ет ет 27 25 ет 23	When PLC:GOT is N: 1 The number of PLCs for 1 GOT 32 or less When PLC:GOT is 1: N The number of GOTs for 1 PLC No limit number*4

The destination connected with the twisted pair cable varies with the configuration of the applicable Ethernet network system. Connect to the Ethernet module, hub, transceiver or other system equipment corresponding to the applicable Ethernet network

Use cables, connectors, and hubs that meet the IEEE802.3 10BASE-T/100BASE-TX standard.

A length between a hub and a node.

The maximum distance differs depending on the Ethernet device to be used.

The following shows the number of the connectable nodes when a repeater hub is used.

- 10BASE-T: Max. 4 nodes for a cascade connection (500m)
- 100BASE-TX: Max. 2 nodes for a cascade connection (205m)


When switching hubs are used, the cascade connection between the switching hubs has no logical limit for the number of cascades.

For the limit, contact the switching hub manufacturer.

- Product manufactured by TOSHIBA Corporation. For details of the product, contact TOSHIBA Corporation.
- There is no restriction for the number of GOTs. However, if the number of GOTs increases, the communication becomes highloaded, and it may affect the communication performance.

12.3.2 GOT side settings

 Setting communication interface (Communication settings)
 Set the channel of the connected equipment.

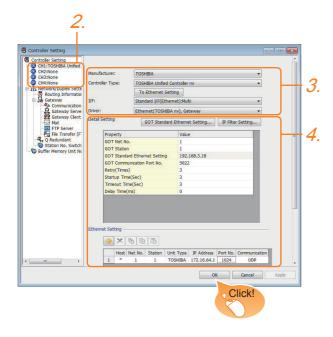

- Select [Common] → [Controller Setting] from the menu.
- 2. The Controller Setting window is displayed. Select the channel to be used from the list menu.
- Set the following items.
 - Manufacturer: TOSHIBA
 - Controller Type: TOSHIBA Unified Controller nv
 - · I/F: Interface to be used
 - Driver: Ethernet (TOSHIBA nv), Gateway
- The detailed setting is displayed after Manufacturer, Controller Type, I/F, and Driver are set. Make the settings according to the usage environment.

12.3.2 ■ Communication detail settings

Click the [OK] button when settings are completed.



The settings of connecting equipment can be confirmed in [I/F Communication Setting]. For details, refer to the following.

1.1.2 I/F communication setting

Communication detail settings

Make the settings according to the usage environment.


Property	Value	
GOT Net No.	1	
GOT Station	1	
GOT Standard Ethernet Setting	192.168.3.18	
GOT Communication Port No.	5022	
Retry(Times)	3	
Startup Time(Sec)	3	
Timeout Time(Sec)	3	
Delay Time(ms)	0	

	D	D
Item	Description	Range
GOT Net No.	Set the network No. of the GOT. (Default: 1)	1 to 239
GOT Station*1	Set the station No. of the GOT. (Default: 1)	1 to 254
GOT Standard Ethernet Setting	Set the GOT IP address, subnet mask, default gateway, peripheral S/W communication port No., transparent port No.	Standard Ethernet Setting
GOT Communication Port No.	Set the GOT port No. for the connection with the Ethernet module. (Default: 5022)	1024 to 5010, 5014 to 65534 (Except for 5011 to 5013 and 49153 to 49170)
Retry	Set the number of retries to be performed when a communication timeout occurs. When receiving no response after retries, the communication times out. (Default: 3times)	0 to 5times
Startup Time	Specify the time period from the GOT startup until GOT starts the communication with the PLC CPU. (Default: 3sec)	3 to 255sec
Timeout Time	Set the time period for a communication to time out. (Default: 3sec)	1 to 90sec
Delay Time	Set the delay time for reducing the load of the network/ destination PLC. (Default: 0ms)	0 to 10000 (×10ms)

Each of [GOT Station] set in the communication detail setting and [Station] set in the Ethernet setting must be set to different station numbers.

■ GOT Standard Ethernet Setting


Make the settings according to the usage environment.

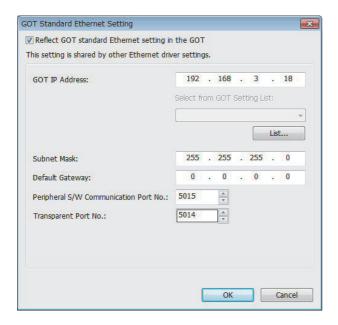

Item	Description	Range
GOT IP Address	Set the IP address of the GOT. (Default: 192.168.3.18)	0.0.0.0 to 255.255.255.2 55
Subnet Mask	Set the subnet mask for the sub network. (Only for connection via router) If the sub network is not used, the default value is set. (Default: 255.255.255.0)	0.0.0.0 to 255.255.255.2 55
Default Gateway	Set the router address of the default gateway where the GOT is connected. (Only for connection via router) (Default: 0.0.0.0)	0.0.0.0 to 255.255.255.2 55
Peripheral S/W Communication Port No.	Set the GOT port No. for the S/W communication. (Default: 5015)	1024 to 5010, 5014 to 65534 (Except for 5011, 5012, 5013 and 49153)
Transparent Port No.	Set the GOT port No. for the transparent function. (Default: 5014)	1024 to 65534 (Except for 5011 to 5013 and 49153 to 49170)

By setting of the OMRON PLC, set the same [GOT Communication Port No.] setting as that of [FINS UDP Port] of CX-Programmer.

Ethernet setting

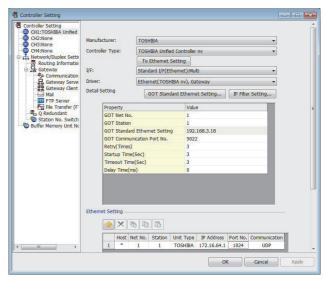

Item	Description	Set value
Host	The host is displayed. (The host is indicated with an asterisk (*).)	-
N/W No.	Set the network No. of the connected Ethernet module. (Default: 1)	1 to 239
Station*1	Set the station No. of the connected Ethernet module. (Default: 1)	1 to 254
Туре	TOSHIBA (fixed)	TOSHIBA (fixed)
IP Address	Set the IP address of the connected Ethernet module. (Default: 172.16.64.1)	PLC side IP address
Port No.	Set the port No. of the connected Ethernet module. (Default: 1024)	1024 to 65534
Communication format	UDP (fixed)	UDP (fixed)

*1 Each of [GOT Station] set in the communication detail setting and [Station] set in the Ethernet setting must be set to different station numbers.

Communication detail settings




(1) Communication interface setting by the Utility The communication interface setting can be changed on the Utility's [Communication setting] after writing [Communication Settings] of project data.

For details on the Utility, refer to the following manual.

GOT2000 Series User's Manual (Utility)

(2) Precedence in communication settings
When settings are made by GT Designer3 or the
Utility, the latest setting is effective.

■ IP Filter Setting

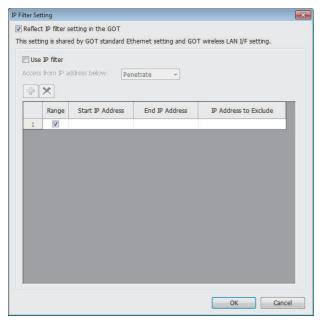

For details on the IP Filter Setting, refer to the following manual.

GT Designer3 (GOT2000) Screen
Design Manual


POINT.

TOSHIBA PLC

For details of TOSHIBA PLCs, refer to the following

TOSHIBA PLC user's Manual

Setting of operation mode switch and station No. switch

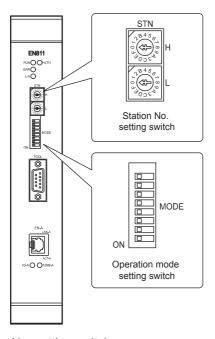

(1) Station No. setting switch

The station No. setting switches are hexadecimal rotary switches that determine the station No. on the Ethernet network.

Set the station address (1 to 254) that has been assigned upon system configuration in a HEX code. Assign an address with a different value to each of the nodes in the system.

Switch name	Setting details	Setting range
STN-H	Upper address : 0 to F (Hex.)	01 to FE (Hex.)
STN-L	Lower address : 0 to F (Hex.)	OTTOTE (HEX.)

(2) Operation mode setting switch

(a) Operation mode

Switch No.		Settings	
1	OFF	ON	OFF
2	OFF	OFF	ON
3	OFF	OFF	OFF
Operation mode	Normal	For ma	intenance

Switch No.	Settings
4	Not in use
5	Not ill use

(b) IP address type

Switch No.	Settings			
6	OFF	ON		
7	OFF	ON	OFF	ON
8	OFF	OFF	ON	ON
Operation mode	Class B 172.16.64.XX	Reserved	Class C 192.168.0.XX	Tool setting

• Class B 172.16.64.XX

XX indicates the value of the station No. setting switches.

Subnet mask: 255.255.192.0 Class B 192.168.0.XX

XX indicates the value of the station No. setting

switches.

Subnet mask: 255.255.255.0

Tool setting

It can be set freely from the engineering tool, and the value has precedence over the value of the station No. setting switches.

12.3.4 **Precautions**

Delay of device communication

Note that if a non-existent station, or a station which power is turned OFF is monitored, the communication of normal stations is also delayed.

Redundant system

When configuring a redundant system, the "Multicast address setting" for the configured PLC pair (System A: Primary, System B: Secondary) is required.

12.4 Device Range that Can Be Set

The device ranges of controller that can be used for GOT are as follows


Note that the device ranges in the following tables are the maximum values that can be set in GT Designer3.

The device specifications of controllers may differ depending on the models, even though belonging to the same series.


Please make the setting according to the specifications of the controller actually used.

When a non-existent device or a device number outside the range is set, other objects with correct device settings may not be monitored.

(1) Setting item

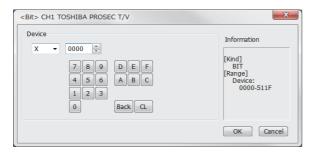

TOSHIBA PROSEC T/V Series

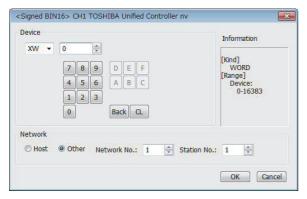


TOSHIBA Unified Controller nv Series

Item	Description			
Device	Set the device name, device number, and bit number. The bit number can be set only when specifying the bit of word device.			
Information		Displays the device type and setting range which are selected in [Device].		
	Set the monitor	Select this item for monitoring the host		
Network	Other	Select this for monitoring other controllers. After selecting the item, set the station number of the controller to be monitored. NW No.: Set the network No. Station No.: Set the station No.		




- (1) Device settings of TOSHIBA PLC
 - (a) When setting a relay as a bit device Set the device using the format of word address (DEC) + bit address (HEX).

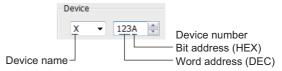

(b) When setting a relay as a word device Set the device using the format of word address (DEC).

For the device name setting, enter "w" before the bit device name.

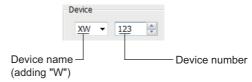

(2) Notation of device address (when using PROSEC V series)

The notation of device address setting is different between the TOSHIBA PLC peripheral software and GOT.

For the difference of notations between peripheral softwares and GOT, refer to the following.

■ TOSHIBA PLC (TOSHIBA PROSEC T/V Series)

■ TOSHIBA PLC (TOSHIBA PROSEC T/V Series)

	Device name	Setting range	Device No. represen tation
	External input (X)	X0000 to X511F	
	External output (Y)	Y0000 to Y511F	
	Internal relay (R)*7	R0000 to R4095F	Hexadec
	Special relay (S)*7	S0000 to S511F	imal
	Link register relay (Z)	Z0000 to Z999F	
e	Link relay (L)	L0000 to L255F	
Bit device	Timer (Contact) (T)*1	T0 to T999	Decimal
Bit	Counter (Contact) (C)*1	C0 to C511	Decimal
	The bit specification of the word device *2*5*7 (except external input, external output, internal relay, special relay link relay, timer and counter)	Setting range of each word device	-
	External input (XW)	XW0 to XW511	
	External output (YW)	YW0 to YW511	
	Internal relay (RW)**6*8	RW0 to RW4095	
	Special relay (SW)*8	SW0 to SW511	
Ф	Link relay (LW)	LW0 to LW255	
Word device	Timer (Current value) (T)*1	T0 to T999	Decimal
	Counter (Current value) (C)*1	C0 to C511	
	Data register (D) *3*6*8	D0 to D8191	
	Link register (W)	W0 to W2047	
	File register (F)*4	F0 to F32767	

PROSEC T Series

- *1 The writing of the timer (contact)/(current value) and counter (contact)/(current value) are executed after being read by the GOT. Therefore, do not edit it in the sequence program during this period
- during this period.

 *2 As bit specification of a word device is performed after the GOT reads the value, do not change the value in the
- sequence program during this period.
 When the mode switch on the CPU module is set to "P-RUN", writing to D0000 through D4095 is disabled.
- *4 Extension file register is not supported.

PROSEC V Series

- *5 As bit specification of a word device is performed after the GOT reads the value, do not change the value in the sequence program during this period.
- sequence program during this period.

 *6 RW0000 and D0000 indicate the data register in the same region although they are shown in different notations.
- *7 For bit data, the conversion from the address notation for the TOSHIBA PLC to that for the GOT is shown as follows. Address notation for TOSHIBA PLC + 16=Word address (Quotient)...Bit address (Remainder)

Address notation for TOSHIBA PLC	Address notation for GOT	Conversion
S8191	S <u>511F</u> (Decimal) (Hexadecimal)	8191÷16= 51115
R65535	R <u>4095F</u> (Decimal) (Hexadecimal)	65535÷16= 409515

*8 For word data, the conversion from the address notation for the TOSHIBA PLC to that for the GOT is shown as follows.

Communication format		Address notation for TOSHIBA PLC	Address notation for GOT
16bit data		DW10	D10
32bit data	(Integer)	DD10 (Calculate the device No. in 32-bit unit)	D20
	(Real number)	DF10 (Calculate the device No. in 32-bit unit)	D20

■ TOSHIBA PLC (Unified Controller nv Series)

Device name		Setting range	Device No. represent ation	
	External input (X)	X000000 to X16383F		
a)	External input (X)	Y000000 to Y16383F		
, vice	Internal relay (R)	R00000 to R8191F	Decimal +Hexade	
3it device	Input variable (I)	I000000 to I16383F	cimal	
Ш	Output variable (Q)	Q000000 to Q16383F	olitiai	
	Special relay (S)	S00000 to S1023F		
	External input (XW)	XW0 to XW16383		
	External output (YW)	YW0 to YW16383	Decimal	
	Internal relay (RW)	RW0 to RW8191		
vice	Special relay (SW)	SW0 to SW1023		
de	Data register (D)	D0 to D8191		
Word device	File register (F)	F0 to F32767		
	Input variable (IW)	IW0 to IW16383	Decimal	
	Output variable (QW)	QW0 to QW16383		
	User global (UG)	UG0 to UG262143		



CONNECTION TO TOSHIBA MACHINE PLC

13.1	Connectable Model List	13 - 2
13.2	System Configuration	. 13 - 3
13.3	Connection Diagram	13 - 5
13.4	GOT Side Settings	13 - 9
13.5	PLC Side Setting	13 - 10
13 6	Device Range that Can Be Set	13 - 11

13. CONNECTION TO TOSHIBA MACHINE PLC


13.1 Connectable Model List

The following table shows the connectable models.

Series	Model name	Clock	Communi cation Type	Connectable GOT	Refer to	
	TC3-01	0	- RS-232	DS 222		
TCmini Series	TC3-02	0			[☐ ₹ 13.2.1	
	TC6-00	0		GT GT GT GT 23 GT GS		
	TC8-00	0				
	TC5-02	×	RS-485	DC 495		
	TC5-03	×				
Robot controller	TS2000	X	- RS-232	ет ет ет ет 27 ет 25 23 21 GS	P-1000	
Robot controller	TS2100	×		K3-232	27 25 23 21 ^{GS}	[_ 13.2.2

13.2 System Configuration

13.2.1 Connecting to TC3, TC5, TC6, TC8

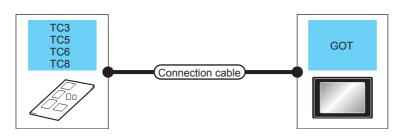




PLC		Connection cable		GOT		
Model name	Communicat ion Type	Cable model Connection diagram number	Max. distance	Option device	Model	Number of connectable equipment
				- (Built into GOT)	GT 25 25 27 27 27 27 27 27 27 27 27 27 27 27 27	
TC3, TC6,	RS-232	(User) RS232 connection diagram 1) (User) RS232 connection diagram 3)	15m	GT15-RS2-9P	ет 27 25	
TC8,				GT10-C02H-6PT9P*1	GT _{03P} GT _{03P} 2104P 2104P R4 R2	
			15m	- (Built into GOT)	GT ₀ 3P 2104P 2104P R2	1 GOT for 1 PLC
		User RS485 connection diagram 1)		- (Built into GOT)	GT 25 25 GT 23 21 21	
TC5	RS-485 (User) RS485 connection diagram 2) (User) RS485 connection diagram 3)	400m	- (Built into GOT)	GT ₀ AR GT ₀ 3P 210AP 210AP GT ₀ 3P 210AP R4		
				FA-LTBGT2R4CBL05(0.5m)*2 FA-LTBGT2R4CBL10(1m)*2 FA-LTBGT2R4CBL20(2m)*2	GT CT 25 GT 23	

¹ When a GT10-C02H-6PT9P unit of the sub version A or B is used, do not ground the case of the D-sub (9-pin) connector.

^{*2} Product manufactured by MITSUBISHI ELECTRIC ENGINEERING COMPANY LIMITED. For details of the product, contact MITSUBISHI ELECTRIC ENGINEERING COMPANY LIMITED.

13.2.2 Connecting to TS2000, TS2100

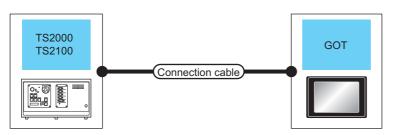



Robot cor	ntroller	Connection cabl	е	GOT		
Model name	Communicat ion Type	Cable model Connection diagram number	Max. distance	Option device	Model	Number of connectable equipment
TS2000	RS-232	(User) RS232 connection diagram 2)	15m	- (Built into GOT)	GT 27 25 GT 23 GT 23 GT 21050 GS	
				GT15-RS2-9P	ет ет 27 25	1 GOT for
TS2100 (POD port)	110-232			GT10-C02H-6PT9P*1	GT ₀ 3sP 2104P 2104P R4 R2	1 robot controller
	(User)RS232 connection diagram 4)	15m	- (Built into GOT)	GT_03P 21 ^{04R} 2104P R2		

^{*1} When a GT10-C02H-6PT9P unit of the sub version A or B is used, do not ground the case of the D-sub (9-pin) connector.


13.3 Connection Diagram

The following diagram shows the connection between the GOT and the PLC.


13.3.1 RS-232 cable

Connection diagram


(1) RS232 connection diagram 1)

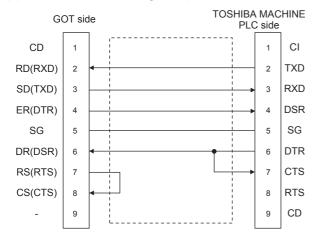


(2) RS232 connection diagram 2)

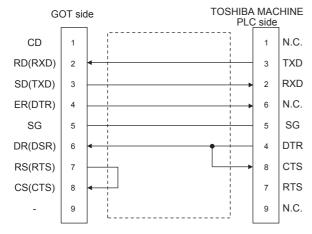

(3) RS232 connection diagram 3)

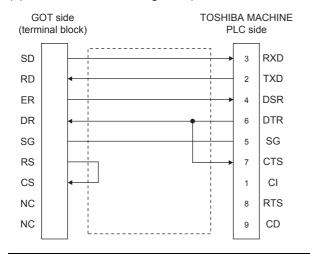

(4) RS232 connection diagram 4)

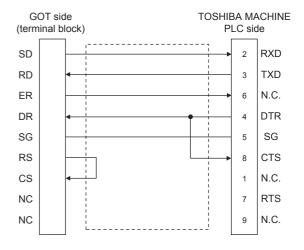

Precautions when preparing a cable

- (1) Cable length


 The length of the RS-232 cable must be 15m or less.
- (2) GOT side connector

 For the GOT side connector, refer to the following.

 1.4.1 GOT connector specifications
- (3) TOSHIBA MACHINE PLC side connector
 Use the connector compatible with the TOSHIBA
 MACHINE PLC side module.
 For details, refer to the TOSHIBA MACHINE PLC
 user's manual.

Connection diagram

(1) RS485 connection diagram 1)

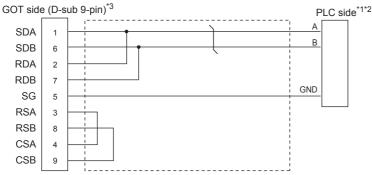


Pin No. of PLC side differs depending on the model. Refer to the following table.

	Model of PLC					
Signal name	TC	5-02	TC5-03			
Oignai name	CN24A	CN24B	CN14	CN18		
	Pin No.	Pin No.	Pin No.	Pin No.		
Α	1	1	3	3		
В	2	2	4	4		
GND	3	3	5	5		

- For the PLC side terminating resistor, refer to the following.
 - PLC user's Manual to be used
- Set the terminating resistor of GOT side which will be a terminal. For GT27, GT25, GT23 :Set the terminating resistor "Enable". :Set the terminating resistor "110 Ω ".
 - 1.4.3 Terminating resistors of GOT

(2) RS485 connection diagram 2)

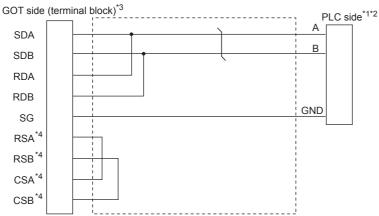


Pin No. of PLC side differs depending on the model. Refer to the following table.

	Model of PLC				
Signal name	TC	5-02	TC5-03		
Signal name	CN24A	CN24B	CN14	CN18	
	Pin No.	Pin No.	Pin No.	Pin No.	
Α	1	1	3	3	
В	2	2	4	4	
GND	3	3	5	5	

- For the PLC side terminating resistor, refer to the following.
 - PLC user's Manual to be used
- Set the terminating resistor of GOT side, which will be a terminal, to "110 Ω ".
 - 1.4.3 Terminating resistors of GOT
- The signals RSA, RSB, CSA, and CSB are not provided for



(3) RS485 connection diagram 3)

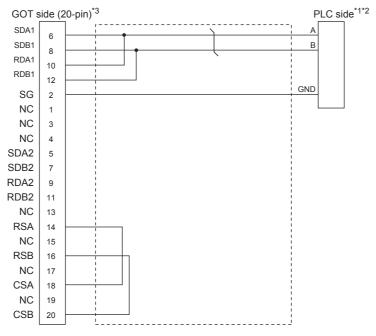

Pin No. of PLC side differs depending on the model. Refer to the following table.

	Model of PLC					
Signal name	TC	5-02	TC5-03			
Signar name	CN24A	CN24B	CN14	CN18		
	Pin No.	Pin No.	Pin No.	Pin No.		
Α	1	1	3	3		
В	2	2	4	4		
GND	3	3	5	5		

For the PLC side terminating resistor, refer to the following.

PLC user's Manual to be used

1.4.3 Terminating resistors of GOT

Set the terminating resistor of GOT side, which will be a terminal, to "Enable".

Precautions when preparing a cable

(1) Cable length

The length of the RS-485 cable must be 400m or less.

(2) GOT side connector

For the GOT side connector, refer to the following.

1.4.1 GOT connector specifications

(3) PLC side connector

Use the connector compatible with the PLC side. For details, refer to the PLC user's Manual to be used.

Connecting terminating resistors

(1) GOT side

When connecting a PLC to the GOT, a terminating resistor must be connected to the GOT.

(a) For GT27, GT25, GT23

Set the terminating resistor using the terminating resistor setting switch.

(b) For GT21

Set the terminating resistor using the terminating resistor selector.

For the procedure to set the terminating resistor, refer to the following.

1.4.3 Terminating resistors of GOT

(2) PLC side


When connecting a PLC to the GOT, a terminating resistor must be connected to the PLC.

For details, refer to the PLC user's Manual to be used.

13.4 GOT Side Settings

13.4.1 Setting communication interface (Communication settings)

Set the channel of the equipment to be connected to the GOT.

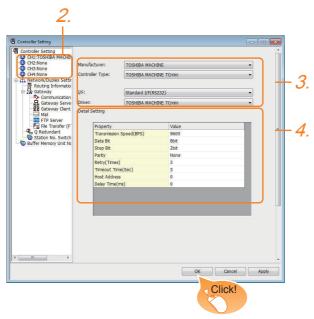

- Select [Common] → [Controller Setting] from the menu.
- The Controller Setting window is displayed. Select the channel to be used from the list menu.
- Set the following items.
 - Manufacturer: TOSHIBA MACHINE
 - · Controller Type: TOSHIBA MACHINE TCmini
 - · I/F: Interface to be used
 - Driver: TOSHIBA MACHINE TCmini
- The detailed setting is displayed after Manufacturer, Controller Type, I/F, and Driver are set. Make the settings according to the usage environment.
 - 13.4.2 Communication detail settings

Click the [OK] button when settings are completed.



The settings of connecting equipment can be confirmed in [I/F Communication Setting]. For details, refer to the following.

1.1.2 I/F communication setting

13.4.2 Communication detail settings

Make the settings according to the usage environment.

Property	Value
Transmission Speed(BPS)	9600
Data Bit	8 bit
Stop Bit	2 bit
Parity	None
Retry(Times)	3
Timeout Time(Sec)	3
Host Address	0
Delay Time(ms)	0

Item	Description	Range
Transmission Speed	Set this item when change the transmission speed used for communication with the connected equipment. (Default: 9600bps)	9600bps, 19200bps, 38400bps, 57600bps, 115200bps
Data Bit	Set this item when change the data length used for communication with the connected equipment. (Default: 8bit)	7bits/8bits
Stop Bit	Specify the stop bit length for communications. (Default: 2bits)	1bit/2bits
Parity	Specify whether or not to perform a parity check, and how it is performed during communication. (Default: None)	None Even Odd
Retry	Set the number of retries to be performed when a communication error occurs. (Default: 3times)	0 to 5times
Timeout Time	Set the time period for a communication to time out. (Default: 3sec)	1 to 30sec
Host Address	Specify the host address (station No. of the GOT to which the PLC is connected) in the connected network. (Default: 0)	0 to 63
Delay Time	Set this item to adjust the transmission timing of the communication request from the GOT. (Default: 0ms)	0 to 300 (ms)



(1) Communication interface setting by the Utility
The communication interface setting can be
changed on the Utility's [Communication Settings]
after writing [Communication Settings] of project
data.

For details on the Utility, refer to the following manual.

- GOT2000 Series User's Manual (Utility)
- (2) Precedence in communication settings
 When settings are made by GT Designer3 or the
 Utility, the latest setting is effective.

13.5 PLC Side Setting



TOSHIBA MACHINE PLC

For details of the TOSHIBA MACHINE PLC, refer to the following manual.

TOSHIBA MACHINE PLC user's Manual

Mode	Refer to	
	TC3, TC8	13.5.1
PLC CPU	TC5	13.5.2
	TC6	13.5.3
Robot controller	TS2000, TS2100	13.5.4

13.5.1 Connecting to TC3, TC8 series

No communication settings.

Communication is available using default value of the PLC.

13.5.2 Connecting to TC5 series


The setting of transmission speed is changeable.

Set the following Generic register 1(D) using engineering tool.

The communication may not work properly if the settings are made using the GOT.

Generic register 1	Description	Set value
D37F	Mode setting	3: Host communication connection mode
D37E	Transmission speed*1	0: 9600bps 1: 19200bps 2: 38400bps
-	Data bit	8bits (fixed)
-	Parity bit	None (fixed)
-	Stop bit	2bits (fixed)

Adjust the settings with GOT settings. For the transmission speed setting on the GOT side, refer to the following.

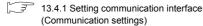

13.5.3 Connecting to TC6 series

The setting of transmission speed is changeable.


Set the following Special AUX Relay(A) using engineering tool

The communication may not work properly if the settings are made using the GOT.

Transmission	Special AUX Relay			
speed*1	A158	A159	A15A	
9600bps	OFF	OFF	OFF	
19200bps	ON	OFF	OFF	
38400bps	-	ON	OFF	
57600bps	-	OFF	ON	
115200bps	-	ON	ON	

^{*1} The transmission speed setting must be consistent with that of the GOT side.

For the transmission speed setting on the GOT side, refer to the following.

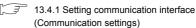

13.5.4 Connecting to TS2000, TS2100

No communication settings.

Communication is available using the default value of the robot controller.

13.6 Device Range that Can Be Set


The device ranges of controller that can be used for GOT are as follows.

Note that the device ranges in the following tables are the maximum values that can be set in GT Designer3.

The device specifications of controllers may differ depending on the models, even though belonging to the same series. Please make the setting according to the specifications of the controller actually used.

When a non-existent device or a device number outside the range is set, other objects with correct device settings may not be monitored.


Setting item

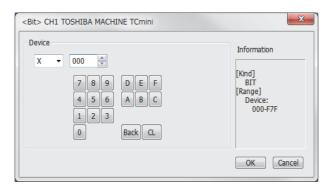


Item	Description		
Device	Set the device name, device number, and bit number. The bit number can be set only when specifying the bit of word device.		
Information	Displays the device type and setting range which are selected in [Device].		



- (1) Device settings for TOSHIBA MACHINE PLC
 - (a) When setting relay address or word register address as bit device
 Set the device No. with the rack No. (Hex), module position (Octal), and terminal No. (Hex), in that order.

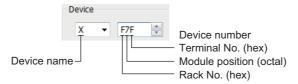

(b) When setting a relay address as a word device Set the device No. with the rack No. (Hex) and module position (Octal), in that order. For the device name setting, enter "w" before the bit device name.

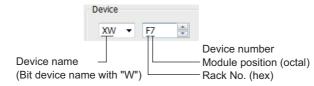

13.6.1 TOSHIBA MACHINE PLC (TOSHIBA MACHINE TCmini)

	Device name		Setting ra	ange	Device No. representation
	Input relay 1 (X)	X000	to	XF7F	·
	Input relay 2 (I)	1000	to	IF7F	
	Output relay 1 (Y)	Y000	to	YF7F	
	Output relay 1 (O)	O000	to	OF7F	
	Internal relay (R)	R000	to	R77F	
	Extended internal relay 1 (GR)	GR000	to	GRF7F	
ė	Extended internal relay 2 (H)	H000	to	HF7F	
Bit device	Extended internal relay 3 (J)	J000	to	JF7F	Hexadecimal + Octal
Bit c	Extended internal relay 4 (K)	K000	to	KF7F	+ Hexadecimal
	Timer (Contact) (T)	T000	to	T77F	
	Counter (Contact) (C)	C000	to	C77F	
	Shift relay (S)	S000	to	S07F	
	Latch relay (L)	L000	to	L07F	
	Edge relay (E)	E000	to	E77F	
	Special auxiliary relay (A)	A000	to	A16F	
	Input register 1 (XW)	XW00	to	XWF7	
	Input register 2 (IW)	IW00	to	IWF7	
	Output register 1 (YW)	YW00	to	YWF7	
	Output register 2 (OW)	OW00	to	OWF7	
	Internal register (RW)	RW00	to	RW77	
	Extended internal register 1 (GW)	GW00	to	GWF7	
	Extended internal register 2 (HW)	HW00	to	HWF7	
	Extended internal register 3 (JW)	JW00	to	JWF7	Hexadecimal + Octal
	Extended internal register 4 (KW)	KW00	to	KWF7	
Φ	Timer (Contact) register (TW)	TW00	to	TW77	
Word device	Counter (Contact) register (CW)	CW00	to	CW77	
гd	Shift register (SW)	SW00	to	SW07	
8 N	Latch register (LW)	LW00	to	LW07	
	Edge register (EW)	EW00	to	EW77	
	Special auxiliary register (AW)	AW00	to	AW16	
	Generic register 1 (D)	D000	to	DF7F	
	Generic register 2 (B)	B000	to	BF7F	
	Generic register 3 (U)	U000	to	UF7F	Hexadecimal + Octal
	Generic register 4 (M)	M000	to	MF7F	+ Hexadecimal
	Generic register 5 (Q)	Q000	to	QF7F	
	Timer/Counter current value (P)	P000	to	P77F	
	Timer/Counter set value (V)	V000	to	V77F+	

CONNECTION TO PANASONIC **SERVO AMPLIFIER**

14.1	Connectable Model List	. 14 - 2
14.2	System Configuration	. 14 - 3
14.3	Connection Diagram	. 14 - 5
14.4	GOT Side Settings	14 - 10
14.5	Servo Amplifier Side Setting	14 - 12
14.6	Device Range that Can Be Set	14 - 13
14 7	Precautions	14 - 15

14. CONNECTION TO PANASONIC SERVO AMPLIFIER


14.1 Connectable Model List

The following table shows the connectable models.

Model name	Clock	Communication Type	Connectable GOT	Refer to
MINAS A4	×			
MINAS A4F	×	RS-232	ет ет ет 27 25 23	14.2.1
MINAS A4L		RS-485	27 25 23	
MINAS A5	×			14.2.2

14.2 System Configuration


14.2.1 Connecting to MINAS A4, MINAS A4F, MINAS A4L series

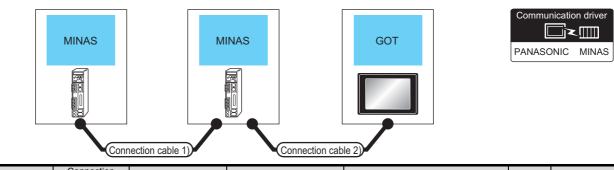

Servo amplifier		Connection cable 1)	Servo an	nplifier	Connection cable 2)		GOT		Max.	Number of					
Model name	Com- muni- cation Type	Cable model *1	Model name	Com- muni- cation Type	Cable model Connection dia- gram number	Max. dis- tance	Option device	Model	total connectable distance equipment						
	DVOP1970(0.2m) MINAS A4 RS-485 DVOP1971(0.5m) MINAS A4F DVOP1972(1m) MINAS A4F RS-23		-		DVOP1960*1 or	2m	- (Built into GOT)	27 25 GT 23		16 servo					
		User) RS-232 connection diagram 1)		GT15-RS2-9P	27 25		1 GOT								
MINAS A4 MINAS A4F	DVOP1970(0.2m) MINAS A4 RS-485 DVOP1971(0.5m) MINAS A4F MINAS A4L RS-485 DVOP1972(1m) MINAS A4L			NAS A4F RS-485	User (User RS-485 connection diagram 2)	1m	GT15-RS4-TE	^{ст} 27 25							
MINAS A4L		RS-485 .	RS-485 .		RS-485	RS-485 .	RS-485	RS-485	RS-485	(User) RS-422 connection diagram 3)	1m	FA-LTBGT2R4CBL05 (0.5m) FA-LTBGT2R4CBL10 (1m) FA-LTBGT2R4CBL20 (2m)	27 25 GT 23	16m	15 servo amplifiers for
							Usen RS-422 con-	User) RS-422 con-	User RS-422 con-	1m	- (Built into GOT)	ет ет 27 25 ет 23	10	1 GOT	
		nection diagram 4)		GT15-RS4-9S	ет ет 27 25										

The link unit is a product manufactured by PANASONIC Corporation. For details of this product, contact PANASONIC Corporation.

14.2.2 Connecting to MINAS A5 series

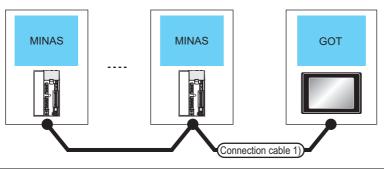



	Servo amplifier	Connection cable	1)	GOT			Number of
Model name	Communication Type	Cable model Connection diagram number	Max. distance	Option device	Model	Max. total distance	connectable equipment
	Between MINAS and GOT:RS-232 Between MINAS and MINAS:RS-485	(User) RS-232/485 connection diagram 1)	*2	- (Built into GOT)	ет ет 27 25 ет 23	33m	32 servo amplifiers for 1 GOT
				GT15-RS2-9P	ет ет 27 25	33111	
MINAS A5	RS-485	(User) RS-485 connection diagram 6)	*3	GT15-RS4-TE	ет ет 27 25	32m	31 servo amplifiers for 1 GOT
WIII VICE / G		User RS485 connection diagram 7)	*3	FA-LTBGT2R4CBL05 (0.5m) FA-LTBGT2R4CBL10 (1m) FA-LTBGT2R4CBL20 (2m)	27 25 GT 23		
		User RS-485 connection	1 *3	- (Built into GOT)	27 25 GT 23		
		diagram 8)		GT15-RS4-9S	ст ст 25		

*1 Product manufactured by Panasonic Corporation. For details of this product, contact Panasonic Corporation.

The following shows the maximum distance.

Between MINAS and MINAS

Between MINAS and GOT : 2m
 Between MINAS and MINAS : 1m
 The following shows the maximum distance.
 Between MINAS and GOT : 1m

: 1m


14.3 Connection Diagram

The following diagram shows the connection between the GOT and the Servo amplifier.

14.3.1 RS-232 cable

Connection diagram

RS-232 connection diagram 1)

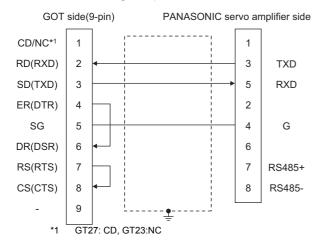

Precautions when preparing a cable


- (1) Cable length

 The length of the RS-232 cable must be 2m or less.
- (2) GOT side connectorFor the GOT side connector, refer to the following.1.4.1 GOT connector specifications
- (3) PANASONIC servo amplifier side connector
 Use the connector compatible with the PANASONIC
 servo amplifier.
 For details, refer to the user's manual of the
 PANASONIC servo amplifier.


14.3.2 RS-485 cable

■ Connection diagram


RS-485 connection diagram 1)

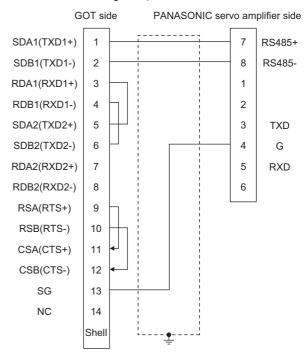


RS-485 connection diagram 2)

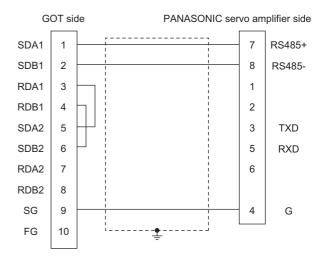


RS-422 connection diagram 3)

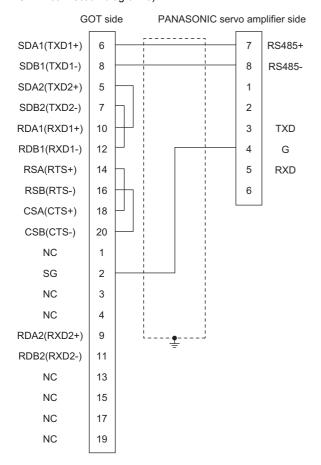


RS-422 connection diagram 4)

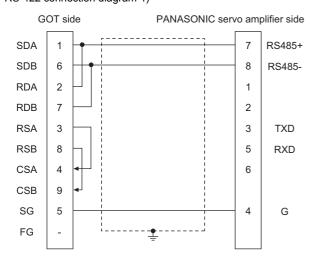


RS-485 connection diagram 5) (For GT16)

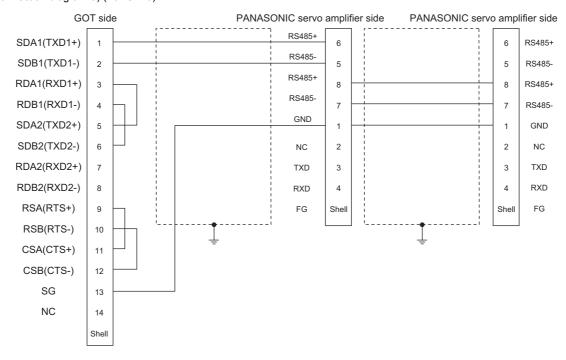


RS-485 connection diagram 6)

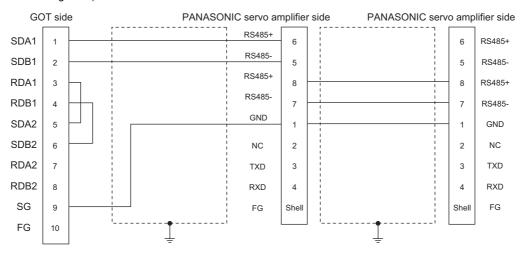

RS-485 connection diagram 7) (For GT16)

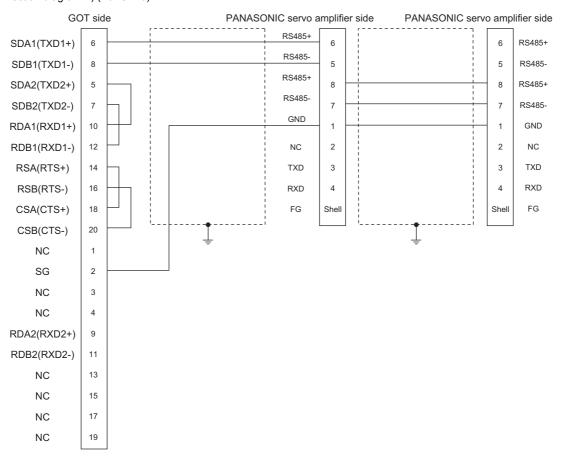

RS-485 connection diagram 8)

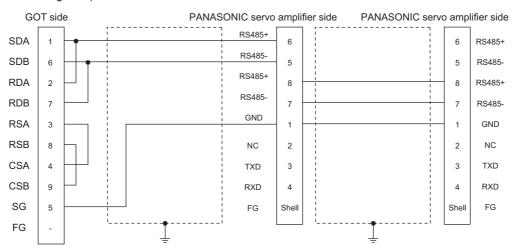

Precautions when preparing a cable

- (1) Cable length
 The length of the RS-485 cable must be 1m or less.
- (2) GOT side connectorFor the GOT side connector, refer to the following.1.4.1 GOT connector specifications
- (3) PANASONIC servo amplifier side connector Use the connector compatible with the PANASONIC servo amplifier.

For details, refer to the user's manual of the PANASONIC servo amplifier.

Connecting terminating resistors

(1) GOT side

Set the terminating resistor setting switch of the GOT main unit to "Disable".


For details of terminating resistor settings, refer to the following.

1.4.3 Terminating resistors of GOT

14.3.3 RS-232/RS-485 cable

Connection diagram

RS-232/485 connection diagram 1)

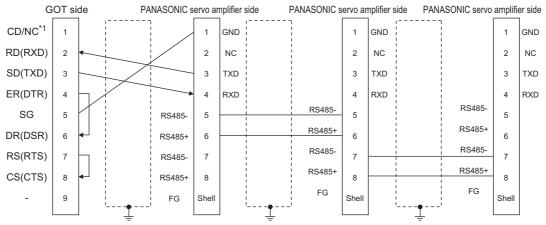

*1 GT27:CD, GT23:NC

Precautions when preparing a cable

- (1) Cable length
 - The length of the cable between GOT and MINAS must be 2m or less.
 - The length of the cable between MINAS and MINAS must be 1m or less.
- (2) GOT side connector

For the GOT side connector, refer to the following.

1.4.1 GOT connector specifications


(3) PANASONIC servo amplifier side connector Use the connector compatible with the PANASONIC servo amplifier.

For details, refer to the user's manual of the PANASONIC servo amplifier.

14.4 GOT Side Settings

14.4.1 Setting communication interface (Communication settings)

Set the channel of the equipment to be connected to the GOT.

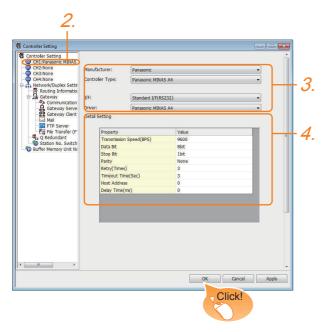

- Select [Common] → [Controller Setting] from the menu.
- 2. The Controller Setting window is displayed. Select the channel to be used from the list menu.
- Set the following items.
 - Manufacturer: PANASONIC
 - Controller Type: Set the option according to the Controller Type to be connected.
 - PANASONIC MINAS-A4 series
 - PANASONIC MINAS-A5 series
 - I/F: Interface to be used
 - · Driver: Depends on the model to be used.
 - PANASONIC MINAS-A4
 - PANASONIC MINAS-A5
- The detailed setting is displayed after Manufacturer, Controller Type, I/F, and Driver are set. Make the settings according to the usage environment.

14.4.2 Communication detail settings

Click the [OK] button when settings are completed.



The settings of connecting equipment can be confirmed in [I/F Communication Setting]. For details, refer to the following.

1.1.2 I/F communication setting

14.4.2 Communication detail settings

Make the settings according to the usage environment.

Property	Value
Transmission Speed(BPS)	9600
Data Bit	8 bit
Stop Bit	1 bit
Parity	None
Retry(Times)	3
Timeout Time(Sec)	3
Host Address	0
Delay Time(ms)	0

Item	Description	Range	
	Set this item when change the	9600bps,	
Transmission	transmission speed used for	19200bps,	
Speed	communication with the connected	38400bps,	
Speed	equipment.	57600bps,	
	(Default: 9600bps)	115200bps	
	Set this item when change the data		
Data Bit	length used for communication with the	7bit/8bit	
Data Dit	connected equipment.	7 DIVODIC	
	(Default: 8bits)		
•	Specify the stop bit length for		
Stop Bit	communications.	1bit/2bit	
	(Default: 1bit)		
	Specify whether or not to perform a parity	None	
Parity	check, and how it is performed during	Even	
1 unity	communication.	Odd	
	(Default: None)	Ouu	
	Set the number of retries to be performed		
Retry	when a communication error occurs.	0 to 5times	
	(Default:3times)		
Timeout	Set the time period for a communication		
Time*1	to time out.	1 to 30sec	
	(Default: 3sec)		
	Specify the station No. of the servo		
Host Address	amplifier to connect the GOT.	0 to 31	
	(Default: 0)		
	Set this item to adjust the transmission		
Delay Time	timing of the communication request from	0 to 300ms	
_ 5.0,	the GOT.	3 10 000.110	
	(Default: 0ms)		



- (1) Communication interface setting by the Utility The communication interface setting can be changed on the Utility's [Communication Settings] after writing [Communication Settings] of project
 - For details on the Utility, refer to the following manual.
- GOT2000 Series User's Manual (Utility)
- (2) Precedence in communication settings When settings are made by GT Designer3 or the Utility, the latest setting is effective.

14.5 Servo Amplifier Side Setting



PANASONIC Servo Amplifier

For details of the PANASONIC Servo Amplifier, refer to the following manual.

PANASONIC Servo Amplifier user's Manual

14.5.1 Connecting to MINAS A4/A4F/

MINAS A4/A4F/A4L communication settings Set them from the main unit front panel of MINAS A4/ A4F/A4L or using the setup support software.

Pr No.	Set value
Address of axis (Parameter No.00)	0 to 15
Baud rate setup of RS232*1	2:9600bps 3:19200bps
(Parameter No.0C)	4:38400bps 5:57600bps
Baud rate setup of RS485*1	2:9600bps 3:19200bps
(Parameter No.0D)	4:38400bps 5:57600bps

^{*1} Only transmission speeds available on the GOT side are shown. Adjust the settings with GOT settings.



Axis name setting

- The axis name is determined according to the rotary switch ID set value when the power supply to the servo amplifier is turned on. This value will be the station number (axis number) during communication.
- The axis name setting can be changed only with the rotary switch ID.

14.5.2 Connecting to MINAS A5

■ MINAS A5 communication settings Set them from the main unit front panel of MINAS A5 or using the setup support software.

Pr No.	Set value
Address of axis (Parameter No.00)	0 to 31
Baud rate setup of RS232*1 (Parameter No.5.29)	2:9600bps 3:19200bps 4:38400bps 5:57600bps
Baud rate setup of RS485 ^{*1} (Parameter No.5.30)	2:9600bps 3:19200bps 4:38400bps 5:57600bps

^{*1} Only transmission speeds available on the GOT side are shown. Adjust the settings with GOT settings.


14.5.3 Station number setting

Set each station number so that no station number overlaps.

The station number can be set without regard to the cable connection order. There is no problem even if station numbers are not consecutive.

- When connecting the GOT and servo amplifier with RS-232 Set the station number (axis number) of the servo amplifier connected to the GOT to 0. Set the station numbers (axis numbers) of other servo amplifiers connected to the GOT to other than 0.
- When connecting the GOT and servo amplifier with RS-485 The GOT will be the station number (axis number) 0. Set the station numbers (axis numbers) of other connected servo amplifiers to other than 0.

Example of RS-232 connection between GOT-servo amplifier

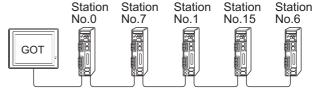

Examples of station number setting

(1) Direct specification

When setting the device, specify the station number of the servo amplifier of which data is to be changed.

Model name	Specification range
MINAS A4, MINAS A4F, MINAS A4L	0 to 15
MINAS A5	0 to 31

(2) Indirect specification

When setting the device, indirectly specify the station number of the inverter of which data is to be changed using the 16-bit GOT internal data register (GD10 to GD25).

When specifying the station No. from 100 to 115 on drawing software, the value of GD10 to GD25 compatible to the station No. specification will be the station No. of the servo amplifier.

Specification Station No.	Compatible device	Setting range
100	GD10	
101	GD11	
102	GD12	
103	GD13	
104	GD14	
105	GD15	• MINAS A4, MINAS A4F, MINAS A4L
106	GD16	0 to 15
107	GD17	• MINAS A5 0 to 31
108	GD18	For the setting other than the above, a
109	GD19	communication
110	GD20	timeout error will occur.
111	GD21	
112	GD22	
113	GD23	
114	GD24	
115	GD25	

14.6 Device Range that Can Be Set

The device ranges of controller that can be used for GOT are as follows.

Note that the device ranges in the following tables are the maximum values that can be set in GT Designer3.

The device specifications of controllers may differ depending on the models, even though belonging to the same series.

Please make the setting according to the specifications of the controller actually used.

When a non-existent device or a device number outside the range is set, other objects with correct device settings may not be monitored.

■ Setting item



Item		Description		
Device	Set the device name, device number, and bit number. The bit number can be set only when specifying the bit of word device.			
Information	' '	Displays the device type and setting range which are selected in [Device].		
	Set the monitor target of the set device.			
Network	Station No.	Set this item when monitoring the Servo amplifier of the specified station No.		

14.6.1 PANASONIC servo amplifier (PANASONIC MINAS-A4 Series)

	Device name ^{*1}	Setting range	Device No. representation	
	Status (STS)*2	STS0 to STS7		
	Input signal (INP)*2	INP0 to INP31		
	Output signal (OTP)*2	OTP0 to OTP47		
	Absolute encoder	AEST0 to AEST15		
æ	(Status)(AEST)*2	AESTU (0 AEST 15		
Bit device	Writing of parameter to EEPROM (EPRW)*3	EPRW0	Decimal	
ш	Clear of user alarm history (in EEPROM as well) (ALHC)*3	ALHC0		
	Alarm clear (ALMC)*3	ALMC0		
	Absolute clear (ABSC)*3	ABSC0		
	Status (Control modes) (STCM)*2	STCM0		
	Present speed (SPD)*2	SPD0		
	Present torque output (TRQ)*2	TRQ0	Decimal	
	Absolute encoder (Encoder ID)(AEID)*2	AEID0	Decimal	
e	Absolute encoder (Multi-turn data)(AEMD)*2	AEMD0		
Word device	Parameter (PRM)	PRM0000 to PRM007F	Hexa- decimal	
Š	Present alarm data (ALM)*2	ALM0	Decimal	
	user alarm history (ALHI)*2	ALHI1 to ALHI14	Decimal	
	User parameter (MIN. value) (PRMN)*2	PRMN0000 to PRMN007F		
	User parameter (MAX. value) (PRMX)*2	PRMX0000 to PRMX007F	Hexa- decimal	
	User parameter (Property)(PRPR)*2	PRPR0000 to PRPR007F		
e e	Feedback pulse counter (FBPC)*2	FBPC0		
rd devic	Present deviation counter (DVC)*2	DVC0		
Double word device	Absolute encoder (Single turn data)(AESD)*2	AESD0	Decimal	
	External scale deviation and sum of pulses (ESA)*2	ESA0 to ESA1		

- 1 The GOT cannot read or write data from/to consecutive devices.
- *2 Only reading is possible.
- *3 Only writing is possible.

14.6.2 PANASONIC servo amplifier (PANASONIC MINAS-A5 Series)

	Device name ^{*1}	Setting range	Device No. represen- tation
	Status (STS)*2	STS0 to STS7	
	Input signal (INP)*2	INP0 to INP31	
	Output signal (OTP)*2	OTP0 to OTP47	
ø	Absolute encoder (Status)(AEST)*2	AEST0 to AEST15	
Bit device	Writing of parameter to EEPROM (EPRW)*3	EPRW0	Decimal
_	Clear of user alarm history (in EEPROM as well) (ALHC)*3	ALHC0	
	Alarm clear (ALMC)*3	ALMC0	
	Absolute clear (ABSC)*3	ABSC0	
	Status (Control modes) (STCM)*2	STCM0	
	Present speed (SPD)*2	SPD0	
	Present torque output (TRQ)*2	TRQ0	
	Absolute encoder (Encoder ID)(AEID)*2	AEID0	
	Absolute encoder (Multi-turn data)(AEMD)*2	AEMD0	
	Parameter (Class 0)(PRM0)	PRM00 to PRM017	
	Parameter (Class 1)(PRM1)	PRM10 to PRM127	
	Parameter (Class 2)(PRM2)	PRM20 to PRM223	
	Parameter (Class 3)(PRM3)	PRM30 to PRM329	
	Parameter (Class 4)(PRM4)	PRM40 to PRM442	
	Parameter (Class 5)(PRM5)	PRM50 to PRM535	
	Parameter (Class 6)(PRM6)	PRM60 to PRM639	
4	Present alarm data (ALM)*2	ALM0	
Word device	Present alarm data (Sub) (ALMS)*2	ALMS0	Decimal
Wor	user alarm history (ALHI)*2	ALHI1 to ALHI14	
	user alarm history (Sub)(ALHI)*2	ALHS1 to ALHS14	
	User parameter (Class 0, MIN. value)(PRMN0)*2	PRMN00 to PRMN017	
	User parameter (Class 1, MIN. value)(PRMN1)*2	PRMN10 to PRMN127	
	User parameter (Class 2, MIN. value)(PRMN2)*2	PRMN20 to PRMN223	
	User parameter (Class 3, MIN. value)(PRMN3)*2	PRMN30 to PRMN329	
	User parameter (Class 4, MIN. value)(PRMN4)*2	PRMN40 to PRMN442	
	User parameter (Class 5, MIN. value)(PRMN5)*2	PRMN50 to PRMN535	
	User parameter (Class 6, MIN. value)(PRMN6)*2	PRMN60 to PRMN639	

	Device name ^{*1}	Setting range	Device No. represen- tation
	User parameter (Class 0, MAX. value)(PRMX0)*2	PRMX00 to PRMX017	-
	User parameter (Class 1, MAX. value)(PRMX1)*2	PRMX10 to PRMX127	
	User parameter (Class 2, MAX. value)(PRMX2)*2	PRMX20 to PRMX223	
	User parameter (Class 3, MAX. value)(PRMX3)*2	PRMX30 to PRMX329	
	User parameter (Class 4, MAX. value)(PRMX4)*2	PRMX40 to PRMX442	
	User parameter (Class 5, MAX. value)(PRMX5)*2	PRMX50 to PRMX535	
	User parameter (Class 6, MAX. value)(PRMX6)*2	PRMX60 to PRMX639	
	User parameter (Class 0, Property)(PRPR0)*3	PRPR00 to PRPR017	
evice	User parameter (Class 1, Property)(PRPR1)*3	PRPR10 to PRPR127	
Word device	User parameter (Class 2, Property)(PRPR2)*3	PRPR20 to PRPR223	Decimal
	User parameter (Class 3, Property)(PRPR3)*3	PRPR30 to PRPR329	
	User parameter (Class 4, Property)(PRPR4)*3	PRPR40 to PRPR442	
	User parameter (Class 5, Property)(PRPR5)*3	PRPR50 to PRPR535	
	User parameter (Class 6, Property)(PRPR6)*3	PRPR60 to PRPR639	
	Feedback pulse counter (FBPC)*2	FBPC0	
	Present deviation counter (DVC)*2	DVC0	
	Absolute encoder (Single turn data)(AESD)*2	AESD0	
	External scale deviation and sum of pulses (ESA)*2	ESA0 to ESA1	

The GOT cannot read or write data from/to consecutive devices.
Only reading is possible.
Only writing is possible.

14.7 Precautions

Station number setting in the servo system

Configure the servo system so that there is a servo amplifier with a station number set with a host address. For details of host address setting, refer to the following manual.

14.4.2 Communication detail settings

■ Monitor speed

When monitoring multiple station devices placed on the same GOT screen, the monitor speed is slow. Even when monitoring a single station, the monitor speed is slow if the device points is large.

Mixing of MINAS A4 series and MINAS A5 series

MINAS A4 series and MINAS A5 series cannot be mixed. The multiple MINAS A4 series can be used together.



CONNECTION TO PANASONIC INDUSTRIAL **DEVICES SUNX PLC**

15.1 Connectable Model List	. 15 - 2
15.2 System Configuration	. 15 - 3
15.3 Connection Diagram	15 - 21
15.4 GOT Side Settings	15 - 26
15.5 PLC Side Setting	15 - 27
15.6 Device Range that Can Be Set	15 - 28

15. CONNECTION TO PANASONIC INDUSTRIAL DEVICES SUNX PLC

15.1 Connectable Model List

The following table shows the connectable models.


Model name	Clock	Communication Type	Connectable GOT	Refer to
FP0-C16CT	×			
FP0-C32CT	^	RS-232	27 25 23 21 GS	15.2.1
FP0R	0			
FP1-C24C	- 0	RS-232	ет ет ет ет ет ет ет GS	<u>₹</u> 15.2.2
FP1-C40C		110-202	27 25 23 21 ^{GS}	15.2.2 کی
FP2	O*1	RS-232	ет ет ет ет 27 ет GS	<u>₹</u> 15.2.3
FP2SH	0	NO-232	27 25 23 21 GS	15.2.3 کی
FP3	O*2	RS-232	ет ет ет ет 27 ет GS	<u>₹</u> 15.2.4
FP5	0	RS-232	27 25 23 21 ^{GS}	15.2.4 کی
FP10(S)	0	RS-232	ет е	<u>₹</u> 15.2.5
FP10SH	0	RS-232	GT GT GT GT 27 GS	15.2.6
FP-M(C20TC)	0	RS-232	GT GT GT CC	
FP-M(C32TC)	0	RS-232	27 25 CT	15.2.7
FP-Σ	0	RS-232	ет ет ет ет ет ет ет 27 25 23 21 GS	15.2.8
FP-X	0	RS-232 RS-422	GT GT GT GT 27 GS	15.2.9

^{*1} Any of the extension memory unit FP2-EM1, FP2-EM2 or FP2-EM3 is required.

^{*2} The clock function is available for the AFP3210C-F, AFP3211C-F, AFP3212C-F and AFP3220C-F.

15.2 System Configuration

Connecting to FP0-C16CT, FP0-C32CT, or FP0R 15.2.1

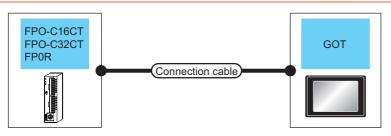




PLC Communication		Connection cable	M	GC	OT	Number of	
Model name	Communication Type	Cable model Connection diagram number	Max. distance	Option device	Model	connectable equipment	
				- (Built into GOT)	27 25 GT 27 23 27 GS		
FP0-C16CT FP0-C32CT	RS-232	AFC8503(3m)* ¹	3m	GT15-RS2-9P	ет ет 27 25		
FP0R (Tool port)				GT10-C02H- 6PT9P* ²	GT ₀ 23P 21 04P R4 R2		
		AFC8503(3m)*1 + User (User) (RS-232 connection diagram 9)	3.5m	- (Built into GOT)	GT ₀ -4R 21 GT _{0-3P} 21 G4P R2	1 GOT for 1 PLC	
					- (Built into GOT)	στ 27 25 στ 23 ^{στ} / ₂ 2 ^{στ} / ₂ στ	1 99 161 11 29
FP0-C16CT FP0-C32CT		GT09-C30R20904-3C(3m) or User RS-232 connection diagram 4)	15m	GT15-RS2-9P	ет ет 27 25		
FP0R (RS232C port)				GT10-C02H- 6PT9P ^{*2}	GToase GTOase 2Toase Rodase Rd		
		User RS-232 connection diagram 12)	15m	- (Built into GOT)	GT _{04R} GT _{03P} 21 ^{04P} R2		

Product manufactured by Panasonic Industrial Devices SUNX Co., Ltd. For details of this product, contact Panasonic Industrial Devices SUNX Co., Ltd.

When a GT10-C02H-6PT9P unit of the sub version A or B is used, do not ground the case of the D-sub (9-pin) connector.

^{*2}

15.2.2 Connecting to FP1-C24C or FP1-C40C

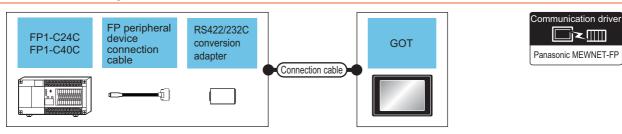


PLC	PLC		Connection cable RS422/232 conversion		Max.	GOT		Number of connectable			
Model name	Commu nication Type	Cable model Connection diagram number	adapter*1	Cable model Connection diagram number	distance	Option device	Model	equipment			
				GT09-C30R20901-25P(3m) or User RS-232 connection diagram 1)		- (Built into GOT)	ет ет 25 ет 23 ет 23 ет 23				
FP1-C24C FP1-C40C (Tool port)	RS-232	AFP15205	AFP8550		15.5m	GT15-RS2-9P	ет ет 27 25				
	RS-232	(0.	(0.5m)	(0.5m)			GT10-C02H- 6PT9P ^{*2}	GT,03P 2104P R4 R2			
				(User) RS-232 connection diagram 8)	15.5m	- (Built into GOT)	GT 04R GT 03P 2104P R2 R2	1 GOT for 1			
		RS-232					- (Built into GOT)	27 25 27 25 61 21 21 21 25 GS	PLC		
FP1-C24C FP1-C40C			RS-232 -				GT09-C30R20903-9P(3m) or (User)RS-232 connection diagram 3)	15m	GT15-RS2-9P	ет ет 27 25	
(RS232C port)				_				GT10-C02H- 6PT9P* ²	GT ₀ 32P 2104P 2104P R4 R2		
				(User) RS-232 connection diagram 13)	15m	- (Built into GOT)	GT 04R GT 03P 21 04R R2 04P				

Product manufactured by Panasonic Industrial Devices SUNX Co., Ltd. For details of this product, contact Panasonic Industrial Devices SUNX Co., Ltd.

When a GT10-C02H-6PT9P unit of the sub version A or B is used, do not ground the case of the D-sub (9-pin) connector.

^{*2}

■ When connecting to tool port or RS232C port

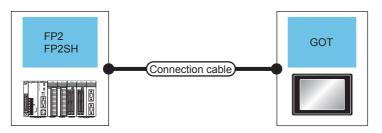




Р	PLC	Connection cable	Max.	G	ОТ	Number of connectable equipment		
Model name	Communication Type	Cable model Connection diagram number	distance	Option device	Model			
				- (Built into GOT)	GS GT GT 25 GT 27 GT 27 GT			
FP2 FP2SH	RS-232	AFC8503(3m)*1	3m	GT15-RS2-9P	er er 27 25			
(Tool port)	NO-202			GT10-C02H- 6PT9P*2	р*2			
_		AFC8503(3m)*1 + User RS-232 connection diagram 9)		3.5m	- (Built into GOT)	GT oar 21 Oasp 21 Oasp R2 R2		
				- (Built into GOT)	GT GT GT 25 GT 23 GT GT ST	1 GOT for 1 PLC		
		AFB85853(3m)*1 GT09-C30R20902-9P(3m) or (USEP) RS-232 connection diagram 2)	15m	GT15-RS2-9P	ет ет 27 25			
FP2 FP2SH (RS232C port)	RS-232			GT10-C02H- 6PT9P ^{*2}	GI ₁ 031 GI ₁ 031 2 Hosts 2 Hosts Re			
(NOZOZO POLI)		AFB85853(3m)*1 GT09-C30R20902-9P(3m) or (User) RS-232 connection diagram 2) + (User) RS-232 connection diagram 11)	15m	- (Built into GOT)	GT out GT out 21 2104P R2			
		(User) RS-232 connection diagram 10)	15m	- (Built into GOT)	97 олк <mark>97 гозр</mark> 21 олк 22 олг			

Product manufactured by Panasonic Industrial Devices SUNX Co., Ltd. For details of this product, contact Panasonic Industrial Devices SUNX Co., Ltd.

When a GT10-C02H-6PT9P unit of the sub version A or B is used, do not ground the case of the D-sub (9-pin) connector.

■ When connecting to computer communication unit

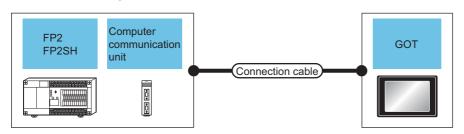




PLC	0		Connection cable		GO	Т	Number of
Model name	Communi cation Type	Computer communication unit*1	Cable model Connection diagram number	Max. distance	Option device	Model	connectable equipment
					- (Built into GOT)	GT 27 25 27 27 25 27 27 27 27 27 27 27 27 27 27 27 27 27	
FP2 FP2SH	RS-232	RS-232 AFP2462	AFB85853(3m)*1 GT09-C30R20902-9P(3m) or (User) (IRS-232 connection diagram 2)	15m	GT15-RS2-9P	1 GOT for 1 computer	
			AI F2402			GT10-C02H- 6PT9P*2	GT case 20 are 20 are R4 R2
			User RS-232 connection diagram	15m	- (Built into GOT)	GT _{OHP} GT _{OHP} R2	

¹ Product manufactured by Panasonic Industrial Devices SUNX Co., Ltd. For details of this product, contact Panasonic Industrial Devices SUNX Co., Ltd.

^{*2} When a GT10-C02H-6PT9P unit of the sub version A or B is used, do not ground the case of the D-sub (9-pin) connector.

■ When connecting to tool port

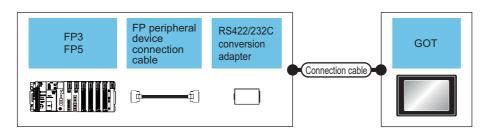




	Ρ	PLC	FP peripheral device connection cable *1	RS422/232C conversion	Connection cable	Max.	GO	Т	Number of connectable		
	odel ame	Communi cation Type	Cable model Connection diagram number	adapter *1	Cable model Connection diagram number	distance	Option device	Model	equipment		
							- (Built into GOT)	GS GT GT 25 GT 23 GT			
F	FP3	RS-232	AFP5520 AFP05	AFP8550	GT09-C30R20901-25P(3m) or User RS-232 connection diagram 1)	or 15.5m	GT15-RS2-9P	er er 27 25	1 GOT for 1 RS422/232		
FP5		RS-232	RS-232	K5-232	(0.5m)	AFF6000			GT10-C02H- 6PT9P ^{*2}	GT 03P GT 03P 204P 204P R4 R2	conversion adapter
					(User RS-232 connection diagram 8)	15.5m	- (Built into GOT)	GJ oar GJ oasp 21 21 oasp R2			

^{*1} Product manufactured by Panasonic Industrial Devices SUNX Co., Ltd. For details of this product, contact Panasonic Industrial Devices SUNX Co., Ltd.

^{*2} When a GT10-C02H-6PT9P unit of the sub version A or B is used, do not ground the case of the D-sub (9-pin) connector.

■ When connecting to computer communication unit

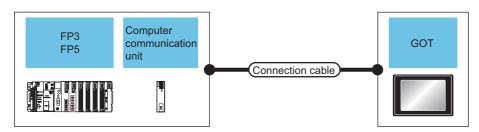




F	PLC	Computer	Connection cable			GOT			
Model name	Communi cation Type	communication unit*1	Cable model Connection diagram number	Max. distance	Option device	Model	Number of connectable equipment		
					- (Built into GOT)	27 25 GT 27 23 27 65 GS			
FP3	RS-232	AFP3462	AFB85853(3m)*1 GT09-C30R20902-9P(3m) or (User) RS-232 connection diagram 2)		GT15-RS2-9P	ет ет 27 25			
FP3		AIT 0402	7410102			GT10-C02H- 6PT9P ^{*2}	GTosp GTosp 2 tosp Z tosp Rd R2		
			User RS-232 connection diagram 10)	15m	- (Built into GOT)	СТ _О ФИ СТ _О СВР 21 мн 21 мн	1 GOT for 1 computer		
							- (Built into GOT)	27 25 GT 27 25 GT 27 20 21 20 21 20 21 20 21 21 21 21 21 21 21 21 21 21 21 21 21	communication unit
FP5	RS-232				AFB5853(3m)*1 GT09-C30R20902-9P(3m) or USer) RS-232 connection diagram 2)	15m	GT15-RS2-9P	ет ет 27 25	
1173	110 202		5-232 AFP3402			GT10-C02H- 6PT9P ^{*2}	GTosp GTosp 2 tosp 2 tosp Rd R2		
			User RS-232 connection diagram	15m	- (Built into GOT)	^{СТ} ран СТран 2104г R2			

¹ Product manufactured by Panasonic Industrial Devices SUNX Co., Ltd. For details of this product, contact Panasonic Industrial Devices SUNX Co., Ltd.

^{*2} When a GT10-C02H-6PT9P unit of the sub version A or B is used, do not ground the case of the D-sub (9-pin) connector.

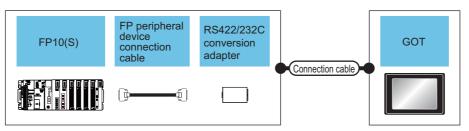




Pl		FP peripheral device connection cable ^{*1}	RS422/232 conversion	Connection cable	Max.	GG	ЭΤ	Number of connectable
Model name	Communi cation Type	Cable model Connection diagram number	adapter ^{*1}	Cable model Connection diagram number		Option device	Model	equipment
						- (Built into GOT)	GT 25 GT 25 GS 210000	
FP10(S)	RS-232	2 AFP5520(0.5m) AF	AFP8550	GT09-C30R20901-25P or User (yogen) RS-232 connection diagram 1)	15.5m	GT15-RS2-9P	ет ет 27 25	1 GOT for 1 RS422/232
						GT10-C02H- 6PT9P ^{*2}	GT _{03P} GT _{03P} 2104P R4 R2 R2	conversion adapter
				User RS-232 connection diagram 8)	15.5m	- (Built into GOT)	GT _{04R} GT _{03P} 21 ^{04P} R2	

^{*1} Product manufactured by Panasonic Industrial Devices SUNX Co., Ltd. For details of this product, contact Panasonic Industrial Devices SUNX Co., Ltd.

^{*2} When a GT10-C02H-6PT9P unit of the sub version A or B is used, do not ground the case of the D-sub (9-pin) connector.

■ When connecting to RS232C port

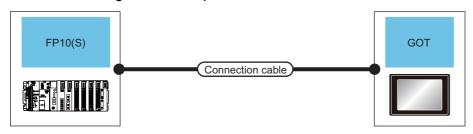




PLC		Connection cable	Max.	GOT		Number of
Model name	Communication Type	Cable model Connection diagram number	distance	Option device	Model	connectable equipment
FP10(S)	RS-232			- (Built into GOT)	27 25 GT 27 25 GT 27 67 23 67 68	
		AFB85853(3m)*1 GT09-C30R20902-9P(3m) or User)RS-232 connection diagram 2)	15m	GT15-RS2-9P	ет ет 27 25	
				GT10-C02H- 6PT9P ^{*2}	GT ₀ 03P 21 04P R4 R2	1 GOT for 1 PLC
		AFB85853(3m)*1 GT09-C30R20902-9P(3m) or (User) RS-232 connection diagram 2) + (User) RS-232 connection diagram 11)	15m	- (Built into GOT)	GT pair GT pair ZT ZT ZT ZT ZT ZT ZT Z	
		(User RS-232 connection diagram 10)	15m	- (Built into GOT)	^{GT} очк <mark>GT</mark> 032 21 ⁰⁴⁸ R2 ⁰⁴⁹	

^{*1} Product manufactured by Panasonic Industrial Devices SUNX Co., Ltd. For details of this product, contact Panasonic Industrial Devices SUNX Co., Ltd.

^{*2} When a GT10-C02H-6PT9P unit of the sub version A or B is used, do not ground the case of the D-sub (9-pin) connector.

■ When connecting to computer communication unit

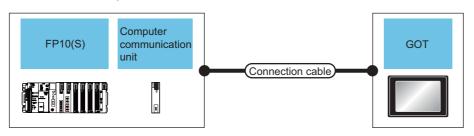




Pl	LC	Computer	Connection cable		GC	T		
Model name	Communi cation Type	communication unit ^{*1}	Cable model Connection diagram number	Max. distance	Option device	Model	Number of connectable equipment	
					- (Built into GOT)	GT 25 27 25 GT 27050 GS		
FP10(S)	RS-232	AFP3462	AFB85853(3m)*1 GT09-C30R20902-9P(3m) or User RS-232 connection diagram 2)	15m	GT15-RS2-9P	ет ет 27 25	1 GOT for 1 computer	
11 10(3)	10-232	ATT 0402			GT10-C02H- 6PT9P*2	GT _{03P} GT _{03P} 2104P Z104P R4 R2 R2	communication unit	
			(User) RS-232 connection diagram 10)	15m	- (Built into GOT)	GT 03P 2104P 2104P R2		

^{*1} Product manufactured by Panasonic Industrial Devices SUNX Co., Ltd. For details of this product, contact Panasonic Industrial Devices SUNX Co., Ltd.

^{*2} When a GT10-C02H-6PT9P unit of the sub version A or B is used, do not ground the case of the D-sub (9-pin) connector.

15.2.6 Connecting to FP10SH

■ When connecting to tool port or RS232C port

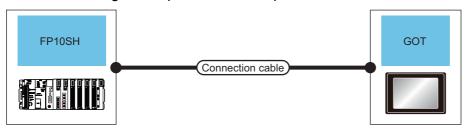




PLC		Connection cable	Max. distance	GOT	-	Number of connectable
Model name	Communication Type	Cable model Connection diagram number		Option device	Model	equipment
				- (Built into GOT)	GT 25 GT 25 GT 23 GS	
		AFB85853(3m)*1 GT09-C30R20902-9P(3m) or (User) RS-232 connection diagram 2)	15m	GT15-RS2-9P	ет ет 27 25	
FP10SH	RS-232			GT10-C02H- 6PT9P ^{*2}	GT _{03P} GT _{03P} 2104P R4 P R2	1 GOT for 1 PLC
		AFB85853(3m)*1 GT09-C30R20902-9P(3m) or (User) RS-232 connection diagram 2) + (User) RS-232 connection diagram 11)	15m	- (Built into GOT)	GT our GT oap 21 2 Joan R2	
		(User) RS-232 connection diagram 10)	15m	- (Built into GOT)	GT_04R GT_03P 21 ^{04R} 27 _{04P} R2	

^{*1} Product manufactured by Panasonic Industrial Devices SUNX Co., Ltd. For details of this product, contact Panasonic Industrial Devices SUNX Co., Ltd.

^{*2} When a GT10-C02H-6PT9P unit of the sub version A or B is used, do not ground the case of the D-sub (9-pin) connector.

■ When connecting to computer communication unit

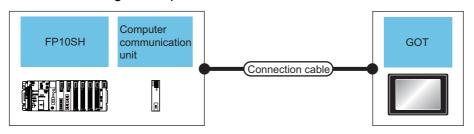




Pl	_C		Connection cable		GO1	ī		
Model name	Communi cation Type	Computer communication unit*1	Cable model Connection diagram number	Max. distance	Option device	Model	Number of connectable equipment	
					- (Built into GOT)	GT 27 25 21 21 21 21 21 21 21 21 21 21 21 21 21		
FP10SH	RS-232	AFP3462	AFB85853(3m)*1 GT09-C30R20902-9P(3m) or User RS-232 connection diagram 2)	15m	GT15-RS2-9P	er er 25	1 GOT for 1 computer	
11 10011	10-232	A11 0402	v		GT10-C02H- 6PT9P ^{*2}	GT _{03P} GT _{03P} 2104P 2104P R4 R2	communication unit	
			User RS-232 connection diagram 10)	15m	- (Built into GOT)	GT _{04R} GT _{03F} 21 ^{04P} R2		

^{*1} Product manufactured by Panasonic Industrial Devices SUNX Co., Ltd. For details of this product, contact Panasonic Industrial Devices SUNX Co., Ltd.

^{*2} When a GT10-C02H-6PT9P unit of the sub version A or B is used, do not ground the case of the D-sub (9-pin) connector.

15.2.7 Connecting to FP-M(C20TC) or FP-M(C32TC)

■ When connecting to tool port or RS232C port

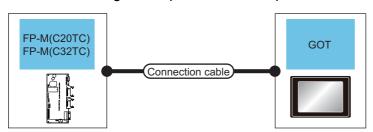



PLO	0	Connection cable	Max.	GG	ОТ	Number of
Model name	Communication Type	Cable model Connection diagram number	distance	Option device	Model	connectable equipment
				- (Built into GOT)	ет 27 25 ет 23 ^{ет}	
		AFC8503(3m)* ¹	3m	GT15-RS2-9P	ет ет 27 25	
FP-M(C20TC), FP-M(C32TC) (Tool port)	RS-232			GT10-C02H- 6PT9P ^{*2}	GT,03P 21 04P R4 R2	1 GOT for 1 PLC
		AFC8503(3m)*1 + User RS-232 connection diagram 9)	3.5m	- (Built into GOT)	GT,04R GT,03P 2104P R2	
		(User) RS-232 connection diagram 10)	15m	- (Built into GOT)	2104K GT ₀ 03P 2104P R2	


PL	С	Connection cable	Max.	Go	OT	Number of	
Model name	Communication Type	Cable model Connection diagram number	distance	Option device	Model	connectable equipment	
				- (Built into GOT)	27 25 27 27 27 27 27 27 27 27 27 27 27 27 27		
		AFB85853(3m)*1 GT09-C30R20902-9P(3m) or (User) RS-232 connection diagram 2)	15m	GT15-RS2-9P	ет ет 27 25		
FP-M(C20TC), FP-M(C32TC) (RS232C port)	RS-232			GT10-C02H- 6PT9P ^{*2}	GT,03P 210aP 2104P R4 R2	1 GOT for 1 PLC	
(1.02020 polit)		AFB85853(3m)*1 GT09-C30R20902-9P(3m) or User RS-232 connection diagram 2) + User RS-232 connection diagram 11)	15m	- (Built into GOT)	GT oan 21 GT oan 21 GT oan 21 GT oan		
		(User) RS-232 connection diagram	15m	- (Built into GOT)	GT OAR GT COSP.		

^{*1} Product manufactured by Panasonic Industrial Devices SUNX Co., Ltd. For details of this product, contact Panasonic Industrial Devices SUNX Co., Ltd.

^{*2} When a GT10-C02H-6PT9P unit of the sub version A or B is used, do not ground the case of the D-sub (9-pin) connector.

15.2.8 Connecting to $FP \Sigma$

■ When connecting to tool port

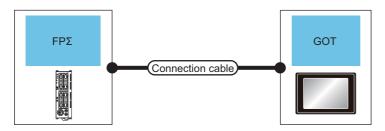




	PLC	Connection cable		GC	DΤ	Number of
Model name	Communication Type	Cable model Connection diagram number	Max. distance	Option device	Model	connectable equipment
				- (Built into GOT)	27 25 GT 27 23 27 GS	
FPΣ	RS-232	AFC8503(3m)*1	3m	GT15-RS2-9P	ет ет 27 25	1 GOT for 1 PLC
FP <u>S</u>	K3-232			GT10-C02H- 6PT9P ^{*2}	GT 03P GT 03P 210 P 2 04P R4 R2	T GOT IOI T FEG
		AFC8503(3m)*1 + (User)RS-232 connection diagram 9)	3.5m	- (Built into GOT)	GT OFF 21 21 21 ST R2 ST R2	

Product manufactured by Panasonic Industrial Devices SUNX Co., Ltd. For details of this product, contact Panasonic Industrial Devices SUNX Co., Ltd.

^{*2} When a GT10-C02H-6PT9P unit of the sub version A or B is used, do not ground the case of the D-sub (9-pin) connector.

■ When connecting to COM port

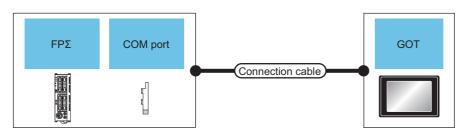




	PLC		Connection cable	Max.	GOT		Number of connectable	
Model name	COM port*1	Communic ation Type	Cable model Connection diagram number	distance	Option device	Model	equipment	
					- (Built into GOT)	GT 27 25 GT 23 27 PS GS		
	AFPG801	RS-232	(User) RS-232 connection diagram 5) (User) RS-232 connection diagram 14)	_	15m	GT15-RS2-9P	er er 27 25	
	74.7 555.7	110 202			GT10-C02H- 6PT9P* ²	GT _{03P} GT _{03P} 210aP 2104P R4 R2		
FPΣ				15m	- (Built into GOT)	GT OAR 21 OAP 21 OAP R2	1 GOT for 1 PLC	
11 2					- (Built into GOT)	GT 25 GT 23 GT 957	1 301.6 11 25	
	AFPG802	RS-232	User) RS-232 connection diagram 6)	15m	GT15-RS2-9P	ет ет 27 25		
					GT10-C02H- 6PT9P ^{*2}	GT ₀ 03P 2104P 2104P R4 R2 R2		
			User RS-232 connection diagram 15)	15m	- (Built into GOT)	GT_04R GT_03P 21 ^{04R} 27 ^{04P} R2		

^{*1} Product manufactured by Panasonic Industrial Devices SUNX Co., Ltd. For details of this product, contact Panasonic Industrial Devices SUNX Co., Ltd.

^{*2} When a GT10-C02H-6PT9P unit of the sub version A or B is used, do not ground the case of the D-sub (9-pin) connector.

15.2.9 Connecting to FP-X

■ When connecting to tool port

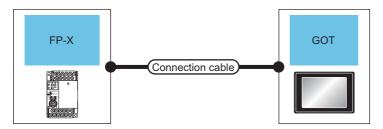




PI	LC	Connection cable	Max.	G	Т	Number of
Model name	Communication Type	Cable model Connection diagram number	distance	Option device	Model	connectable equipment
				- (Built into GOT)	27 25 GT 25 GT 27 25 GS GT 27 950	
FP-X	RS-232	AFC8503(3m)*1	3m	GT15-RS2-9P	ет ет 27 25	1 GOT for 1 PLC
FF-X	K5-232			GT10-C02H- 6PT9P* ²	GT (35P) GT (35P) 2 f (35P) R4 R2 F R4 P	T GOT TOT T PLC
		AFC8503(3m)*1 + User RS-232 connection diagram 9)	3.5m	- (Built into GOT)	GT 04R GT 03F 2104R 2104P R2	

Product manufactured by Panasonic Industrial Devices SUNX Co., Ltd. For details of this product, contact Panasonic Industrial Devices SUNX Co., Ltd.

^{*2} When a GT10-C02H-6PT9P unit of the sub version A or B is used, do not ground the case of the D-sub (9-pin) connector.

■ When connecting to communication cassette

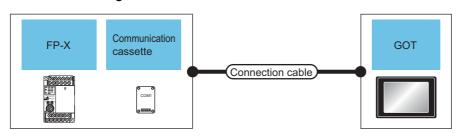



	PLC		Connection cable		GOT		Number of	
Model name	Commun ication Type	Communication cassette*1	Cable model Connection diagram number	Max. distance	Option device	Model	connectable equipment	
					- (Built into GOT)	GT 25 GT 25 GT 23 GT 950		
		AFPX-COM1	(User)RS-232 connection diagram 5)	15m	GT15-RS2-9P	ет ет 27 25		
		(RS232C one channel type)	(User) RS-232 connection diagram 14)			GT10-C02H-6PT9P ^{*3}	GT _{03P} GT _{03P} 2104P 2104P R4 R2	
FP-X	RS-232			15m	- (Built into GOT)	GT _{OAIR} GT _{O3IP} 2104P R2	1 GOT for 1	
	110 202				- (Built into GOT)	GT 25 GT 25 GT 23 GT 950	PLC	
		AFPX-COM2 ^{*2}	(User)RS-232 connection diagram 6)	15m	GT15-RS2-9P	ет ет 27 25		
		(RS232C two channel type)			GT10-C02H-6PT9P ^{*3}	GT _{033P} 2104P 2104P R4 R2		
			User)RS-232 connection diagram 15)	15m	- (Built into GOT)	GT 03P 2104R 2104P R2 04P		

	PLC		Connection cable		GOT		Nl f		
Model name	Commun ication Type	Communication cassette*1	Cable model Connection diagram number	Max. distance	Option device	Model	Number of connectable equipment		
					- (Built into GOT)	GT 25 27 25 27 27 27 27 27 27 27 27 27 27 27 27 27			
	RS-422 AFPX-COM3 (RS485/RS422 one channel type)	(User) RS-422 connection diagram 1)	1200m	GT15-RS4-9S	ет ет 27 25				
	110-422	(RS485/RS422 one channel type)			GT10-C02H-9SC	GT _{04R} GT _{03P} 21 ^{04P} R4			
FP-X			(User) RS-422 connection diagram 2)	1200m	- (Built into GOT)	GT _{0-4R} GT _{0-3P} 2104P E1/1R4 GT _{0-3P} 220-4P R4-4P	1 GOT for 1		
11-7					- (Built into GOT)	GT 25 GT 25 GS 27	PLC		
	RS-232	AFPX-COM4* ² (RS485 one channel and	User RS-232 connection diagram 7)		_	15m	GT15-RS2-9P	ет ет 27 25	
	110 232	RS232C one channel mixed type)			GT10-C02H-6PT9P ^{*3}	GT _{03P} GT _{03P} 2104P R4 R2 R2			
			User RS-232 connection diagram 16)	15m	- (Built into GOT)	СТ олк СТ озр 21 олк СТ озр 21 олг			

^{*1} Product manufactured by Panasonic Industrial Devices SUNX Co., Ltd. For details of this product, contact Panasonic Industrial Devices SUNX Co., Ltd.

^{*2} To connect C30 and C60, USB port may set at the COM2 port on AFPX-COM2 and AFPX-COM4. In this case, set the COM2 port to RS232C.

^{*3} When a GT10-C02H-6PT9P unit of the sub version A or B is used, do not ground the case of the D-sub (9-pin) connector.


15.3 Connection Diagram

The following diagram shows the connection between the GOT and the PLC.


15.3.1 RS-232 cable

■ Connection diagram


(1) RS-232 connection diagram 1)

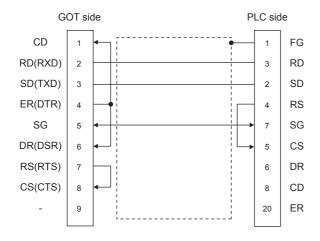


(2) RS-232 connection diagram 2)

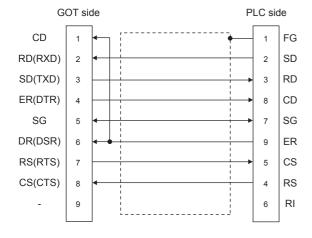


(3) RS-232 connection diagram 3)

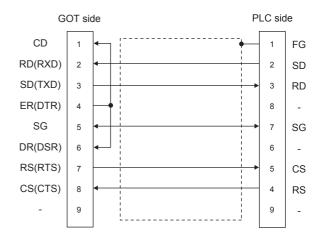


(4) RS-232 connection diagram 4)

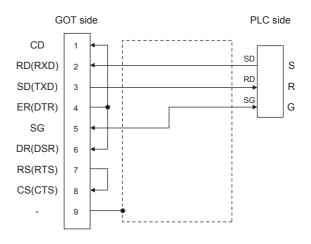


(5) RS-232 connection diagram 5)

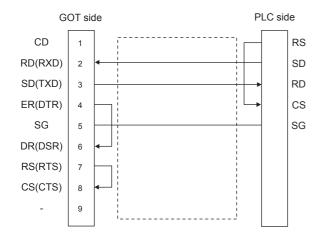


(6) RS-232 connection diagram 6)

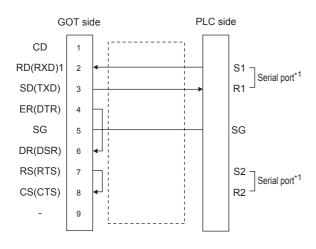


(7) RS-232 connection diagram 7)

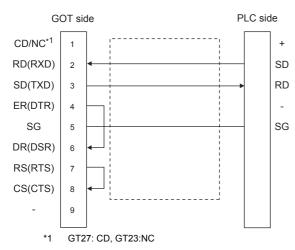


(8) RS-232 connection diagram 8)

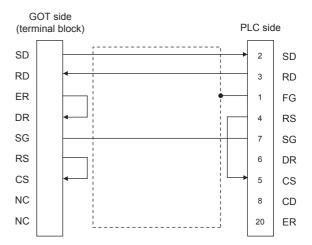

(9) RS-232 connection diagram 9)

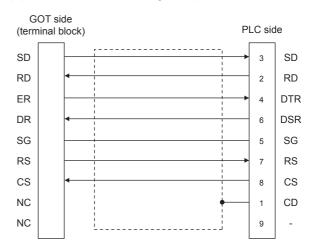


(10)RS-232 connection diagram 10)

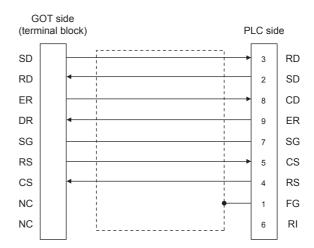


15


(11)RS-232 connection diagram 11)

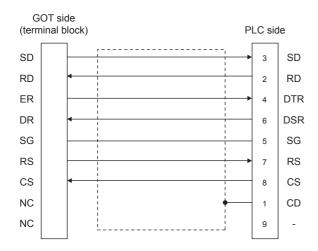


(12)RS-232 connection diagram 12)

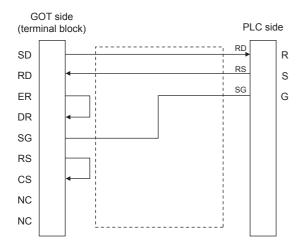


(13)RS-232 connection diagram 13)

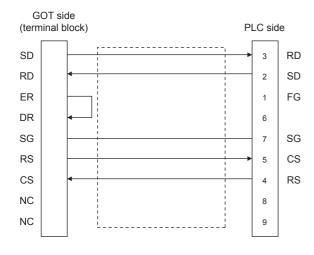


(14)RS-232 connection diagram 14)

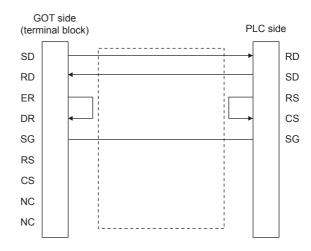

(15)RS-232 connection diagram 15)

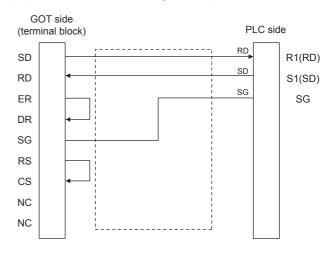

(16)RS-232 connection diagram 16)

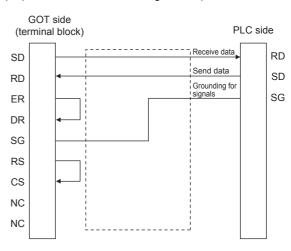

■ Precautions when preparing a cable

(1) Cable length

The length of the RS-232 cable must be 15m or less. The length of the cable must be 3m or less with a transmission speed of 38400bps.

(2) GOT side connector

For the GOT side connector, refer to the following.

1.4.1 GOT connector specifications

(3) Connector for Panasonic Industrial Devices SUNX PLC


Use the connector applicable to the Panasonic Industrial Devices SUNX PLC.

For details, refer to the Panasonic Industrial Devices SUNX PLC user's manual.


15.3.2 RS-422 cable

Connection diagram

(1) RS-422 connection diagram 1)

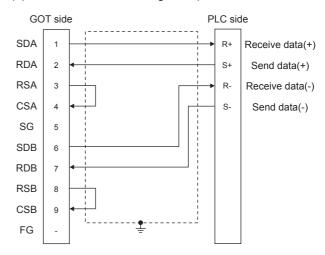

(2) RS-422 connection diagram 2)

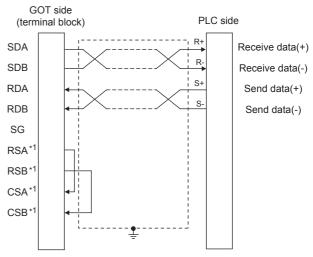

*1 The signals RSA, RSB, CSA, and CSB are not provided for

Return connection is not required.

Precautions when preparing a cable

(1) Cable length

The length of the RS-422 cable must be 1200m or less.

(2) GOT side connector

For the GOT side connector, refer to the following.

1.4.1 GOT connector specifications

(3) Connector for Panasonic Industrial Devices SUNX PLC

Use the connector applicable to the Panasonic Industrial Devices SUNX PLC.

For details, refer to the Panasonic Industrial Devices SUNX PLC user's manual.

■ Connecting terminating resistors


- (1) GOT side
 - (a) For GT27, GT25, GT23
 Set the terminating resistor setting switch of the GOT main unit to "Disable".
 - (b) For GT21 Set the terminating resistor selector to "330 Ω ". For details of terminating resistor settings, refer to the following.

1.4.3 Terminating resistors of GOT

15.4 GOT Side Settings

15.4.1 Setting communication interface (Communication settings)

Set the channel of the equipment to be connected to the GOT.

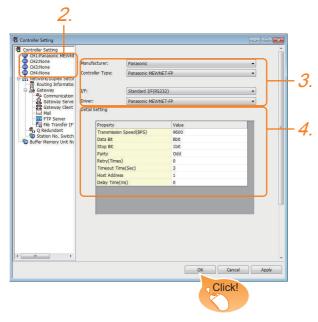

- Select [Common] → [Controller Setting] from the menu.
- 2. The Controller Setting window is displayed. Select the channel to be used from the list menu.
- Set the following items.
 - · Manufacturer: Panasonic
 - Controller Type: Panasonic MEWNET-FP
 - · I/F: Interface to be used
 - · Driver: Panasonic MEWNET-FP
- The detailed setting is displayed after Manufacturer, Controller Type, I/F, and Driver are set. Make the settings according to the usage environment.

15.4.2 Communication detail settings

Click the [OK] button when settings are completed.



The settings of connecting equipment can be confirmed in [I/F Communication Setting]. For details, refer to the following.

1.1.2 I/F communication setting

15.4.2 Communication detail settings

Make the settings according to the usage environment.

Property	Value
Transmission Speed(BPS)	9600
Data Bit	8 bit
Stop Bit	1 bit
Parity	Odd
Retry(Times)	0
Timeout Time(Sec)	3
Host Address	1
Delay Time(ms)	0

	Item	Description	Range
	Transmission Speed	Set this item when change the transmission speed used for communication with the connected equipment. (Default: 9600bps)	4800bps, 9600bps, 19200bps, 38400bps, 57600bps, 115200bps
•	Data Bit	Set this item when change the data length used for communication with the connected equipment. (Default: 8bits)	7bits/8bits
-	Retry	Set the number of retries to be performed when a communication timeout occurs. When receiving no response after retries, the communication times out. (Default: 0time)	0 to 5times
-	Timeout Time	Set the time period for a communication to time out. (Default: 3sec)	1 to 30sec
-	Host Address	Specify the host address (station No. of the PLC to which the GOT is connected) in the network of the GOT. (Default: 1)	1 to 31
-	Delay Time	Set this item to adjust the transmission timing of the communication request from the GOT. (Default: 0ms)	0 to 300 (ms)



(1) Communication interface setting by the Utility The communication interface setting can be changed on the Utility's [Communication Settings] after writing [Communication Settings] of project data.

For details on the Utility, refer to the following manual.

GOT2000 Series User's Manual (Utility)

(2) Precedence in communication settings When settings are made by GT Designer3 or the Utility, the latest setting is effective.

15.5 PLC Side Setting



Panasonic Industrial Devices SUNX PLC

For details of the Panasonic Industrial Devices SUNX PLC, refer to the following manual.

Panasonic Industrial Devices SUNX PLC user's Manual

■ Connecting to the tool port of the PLC CPU

Item	Set value		
Transmission speed*1	4800bps, 9600bps, 19200bps, 38400bps, 57600bps, 115200bps		
Data bit	7bit, 8bit		
Stop bit	1bit		
Parity bit	Odd		
Modem connection	No		
Module No.	1		

*1 Indicates only the transmission speeds that can be set on the GOT side.

Set the same transmission speed of the GOT.

For the transmission speed setting on the GOT side, refer to the following.

15.4.1 Setting communication interface (Communication settings)

The setting range varies with the connected PLC.

Connecting to the RS232C and COM port of the PLC CPU

Item	Set value		
Transmission speed*1	4800bps, 9600bps, 19200bps, 38400bps, 57600bps, 115200bps		
Data bit	7bit, 8bit		
Stop bit	1bit		
Parity bit	Odd		
Modem connection	No		
Serial port action selection*2	1 (Computer link)		
Module No.	1		

1 Indicates only the transmission speeds that can be set on the GOT side.

Set the same transmission speed of the GOT. For the transmission speed setting on the GOT side, refer to the following.

15.4.1 Setting communication interface (Communication settings)

The setting range varies with the connected PLC. *2 Set when connecting to FP0, FP1, FP2 or FP-M.

Connecting to the computer communication unit

Item	Set value
Transmission speed*1	4800bps, 9600bps, 19200bps
Data bit	7bit, 8bit
Stop bit	1bit
Parity bit	Odd
Parity check	Yes
Control signal	Invalidate CS, CD

*1 Indicates only the transmission speeds that can be set on the GOT side

Set the same transmission speed of the GOT.

For the transmission speed setting on the GOT side, refer to the following.

15.4.1 Setting communication interface (Communication settings)

The setting range varies with the connected PLC.

■ Connecting to the communication cassette

(1) Communication settings

Set the commnumication settings for the COM 1 port and COM2 port to connect GOT.

Item	Set value		
Communication mode	Computer link		
Transmission speed*1	4800bps, 9600bps, 19200bps, 38400bps, 57600bps, 115200bps		
Modem connection	No		
Data bit	7bit, 8bit		
Parity check	Odd		
Stop bit	1bit		
Unit No.	1		
Port selection*2	Communication cassette		

*1 Indicates only the transmission speeds that can be set on the GOT side.

Set the same transmission speed of the GOT.

For the transmission speed setting on the GOT side, refer to the following.


15.4.1 Setting communication interface (Communication settings)

*2 Set the COM2 port only.

(2) Switch setting on the Communication cassette (AFPX-COM3)

Set the switch on the back.

Switch No.	Setting	Setting details	
1	OFF		1
2	OFF	RS422	2
3	OFF		3
4	OFF	Terminating resistor OFF	4

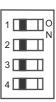

15.6 Device Range that Can Be Set


The device ranges of controller that can be used for GOT are as follows.

Note that the device ranges in the following tables are the maximum values that can be set in GT Designer3.

The device specifications of controllers may differ depending on the models, even though belonging to the same series. Please make the setting according to the specifications of the controller actually used.

When a non-existent device or a device number outside the range is set, other objects with correct device settings may not be monitored.

Setting item

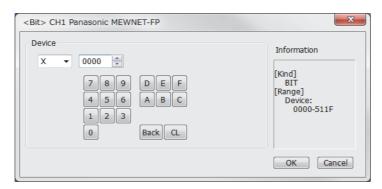

Item	Description	
Device	Set the device name, device number, and bit number. The bit number can be set only when specifying the bit of word device.	
Information	Displays the device type and setting range which are selected in [Device].	




Device settings of PANASONIC PLC

(1) When setting a contact as a bit device Set the device using the format of word address (DEC) + bit address (HEX).



(2) When setting a contact as a word device Set the device number.

Enter "W" before the device name, not including the bit address.

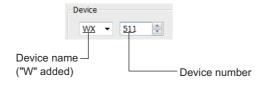

15.6.1 Panasonic Industrial Devices SUNX PLC (Panasonic MEWNET-FP)*1

	Device name		Setting ra	nge	Device No. representation	
	Input relay (X)*2*3	X0000	to	X511F		
	Output relay (Y)*3	Y0000	to	Y511F		
	Internal relay (R)	R0000	to	R886F	Decimal + Hexadecimal	
Φ	Special relay (R)*2	R9000	to	R911F	i ioxaacoiiiiai	
Bit device	Link relay (L)*5	L0000	to	L639F		
Bito	Timer contact (T)*2*4	ТО	to	T3071	Daniman	
	Counter contact (C)*2*4	C0	to	C3071	Decimal	
	Word device bit	Specified bit of the following word devices (except input relay, output relay, internal relay, special relay and link relay)		-		
	Input relay (WX)*2	WX000	to	WX511		
	Output relay (WY)	WY000	to	WY511		
	Internal relay (WR)	WR000	to	WR886		
	Special relay (WR)*2	WR900	to	WR911		
	Link relay (WL)	WL000	to	WL639		
<u>e</u>	Timer/Counter (Elapsed value) (EV) *4	EV0	to	EV3071	Decimal	
Word device	Timer/Counter (Set value) (SV)*4	SV0	to	SV3071	Decimal	
/ord	Data register (DT)	DT0	to	DT10239		
>	Special data register (DT)	DT0 DT90000	to to	DT32764 DT90511		
	Link register (LD)*5	LD0	to	LD8447		
	File register (FL)*5*6	FL0	to	FL32764		
	Bit device word	Converting bit devices into word (Except Timer contact and Counter contact)			-	

The above device range is for the case where FP10SH is used.
For FP0, FP1, FP2, FP3, FP5, FP-10(S), or FP-M, device ranges are different in individual CPUs.

^{*2} Writing to device is not allowed.

^{*3} Only those devices that have been assigned to I/O contacts by peripheral software can be used.

^{*4} The device points of the timer and counter differs depending on the head numbers of the counter set by the value of the system register (No. 5).

^{*5} This device does not exist in FP0, FP1, and FP-M.

^{*6} When FP2SH is used, one bank of "32765 \times 3 banks" can be monitored.



REVISIONS

* The manual number is given on the bottom left of the back cover.

Print Date	* Manual Number	Revision
Sep., 2013	SH(NA)-081198ENG-A	Compatible with GT Works3 Version1.100E
Nov., 2013	SH(NA)-081198ENG-B	Compatible with GT Works3 Version1.104J • Changing the icons of the supported models
Jan., 2014	SH(NA)-081198ENG-C	Compatible with GT Works3 Version1.108N • The AZBIL (formerly Yamatake Corporation) temperature controller (AHC2001) is supported.
Apr., 2014	SH(NA)-081198ENG-D	Compatible with GT Works3 Version1.111R • GT25 and GS are added. • The enlargement of the communication setting range of the TOSHIBA PLC is supported.
Oct., 2014	SH(NA)-081198ENG-E	Compatible with GT Works3 Version1.122C • GT21 is added. • IP Filter setting is supported.
Jan., 2015	SH(NA)-081198ENG-F	Compatible with GT Works3 Version1.126G • GT21 corresponding to IAI robot controller connection.
Apr., 2015	SH(NA)-081198ENG-G	Compatible with GT Works3 Version1.130L • GT27 is added (GT2705-VTBD). • GT21 is added (GT2104-RTBD, GT2103-PMBDS2, GT2103-PMBLS).
Jun., 2015	SH(NA)-081198ENG-H	Compatible with GT Works3 Version1.134Q • TOSHIBA Unified Controller nv
Oct., 2015	SH(NA)-081198ENG-I	Compatible with GT Works3 Version1.144A • GT21 is added (GT2104-PMBD, GT2104-PMBDS). • GT21 corresponding to KEYENCE PLC (Ethernet connection).
Dec., 2015	SH(NA)-081198ENG-J	Compatible with GT Works3 Version1.150G • Station blocking function compatible Ethernet connection • Station monitoring function of the following connection CC-Link IE controller network connection CC-Link IE Field Network connection • GT21 corresponding to connection to OMRON temperature controller
May, 2016	SH(NA)-081198ENG-K	Compatible with GT Works3 Version1.155M • GT21 is added (GT2105-QTBDS, GT2105-QMBDS, GT2104-PMBDS2, GT2104-PMBLS). • Some corrections

This manual confers no industrial property rights or any rights of any other kind, nor does it confer any patent licenses.

Mitsubishi Electric Corporation cannot be held responsible for any problems involving industrial property rights which may occur as a result of using the contents noted in this manual.



WARRANTY

Please check the following product warranty details before using this product.

■1. Gratis Warranty Term and Gratis Warranty Range

If any faults or defects (hereinafter "Failure") found to be the responsibility of Mitsubishi occurs during use of the product within the gratis warranty term, the product shall be repaired at no cost via the sales representative or Mitsubishi Service Company. However, if repairs are required onsite at domestic or overseas location, expenses to send an engineer will be solely at the customer's discretion.

Mitsubishi shall not be held responsible for any re-commissioning, maintenance, or testing on-site that involves replacement of the failed module.

(1) Gratis Warranty Term

The gratis warranty term of the product shall be for thirty-six (36) months after the date of purchase or delivery to a designated place.

Note that after manufacture and shipment from Mitsubishi, the maximum distribution period shall be six (6) months, and the longest gratis warranty term after manufacturing shall be forty-two (42) months.

The gratis warranty term of repair parts shall not exceed the gratis warranty term before repairs.

(2) Gratis Warranty Range

(a) The customer shall be responsible for the primary failure diagnosis unless otherwise specified.

If requested by the customer, Mitsubishi Electric Corporation or its representative firm may carry out the primary failure diagnosis at the customer's expense.

The primary failure diagnosis will, however, be free of charge should the cause of failure be attributable to Mitsubishi Electric Corporation.

- (b) The range shall be limited to normal use within the usage state, usage methods, and usage environment, etc., which follow the conditions and precautions, etc., given in the instruction manual, user's manual and caution labels on the product.
- (c) Even within the gratis warranty term, repairs shall be charged in the following cases.
 - Failure occurring from inappropriate storage or handling, carelessness or negligence by the user. Failure caused by the user's hardware or software design.
 - Failure caused by unapproved modifications, etc., to the product by the user.
 - When the Mitsubishi product is assembled into a user's device, Failure that could have been avoided if functions or structures, judged as necessary in the legal safety measures the user's device is subject to or as necessary by industry standards, had been provided.
 - Failure that could have been avoided if consumable parts designated in the instruction manual had been correctly serviced or replaced.
 - Replacing consumable parts such as a battery, backlight, and fuse.
 - Failure caused by external irresistible forces such as fires or abnormal voltages, and Failure caused by force majeure such as earthquakes, lightning, wind and water damage.
 - Failure caused by reasons that could not be predicted by scientific technology standards at the time of shipment from Mitsubishi.
 - Any other failure found not to be the responsibility of Mitsubishi or that admitted not to be so by the user.

■2. Onerous repair term after discontinuation of production

- (1) Mitsubishi shall accept onerous product repairs for seven (7) years after production of the product is discontinued. Discontinuation of production shall be notified with Mitsubishi Technical Bulletins, etc.
- (2) Mitsubishi shall not accept a request for product supply (including spare parts) after production is discontinued.

■3. Overseas service

Overseas, repairs shall be accepted by Mitsubishi's local overseas FA Center. Note that the repair conditions at each FA Center may differ.

■4. Exclusion of loss in opportunity and secondary loss from warranty liability

Regardless of the gratis warranty term, Mitsubishi shall not be liable for compensation to:

- (1) Damages caused by any cause found not to be the responsibility of Mitsubishi.
- (2) Loss in opportunity, lost profits incurred to the user by Failures of Mitsubishi products.
- (3) Special damages and secondary damages whether foreseeable or not, compensation for accidents, and compensation for damages to products other than Mitsubishi products.
- (4) Replacement by the user, maintenance of on-site equipment, start-up test run and other tasks.

companies or Public service shall be excluded from the graphic operation terminal applications.

■5. Changes in product specifications

The specifications given in the catalogs, manuals, or technical documents are subject to change without prior notice.

■6. Product application

- (1) In using the Mitsubishi graphic operation terminal, the usage conditions shall be that the application will not lead to a major accident even if any problem or fault should occur in the graphic operation terminal device, and that backup and fail-safe functions are systematically provided outside of the device for any problem or fault
- systematically provided outside of the device for any problem or fault.

 (2) The Mitsubishi graphic operation terminal has been designed and manufactured for applications in general industries, etc. Thus, applications in which the public could be affected such as in nuclear power plants and other power plants operated by respective power companies, and applications in which a special quality assurance system is required, such as for Railway

In addition, applications in which human life or property could be greatly affected, such as in aircraft, medical, railway applications, incineration and fuel devices, manned transportation equipment, recreation and amusement devices, safety devices, shall also be excluded from the graphic operation terminal.

Even for the above applications, however, Mitsubishi Electric Corporation may consider the possibility of an application, provided that the customer notifies Mitsubishi Electric Corporation of the intention, the application is clearly defined and any special quality is not required, after the user consults the local Mitsubishi representative.

MELDAS, MELSEC, iQ Platform, MELSOFT, GOT, CC-Link, CC-Link/LT, and CC-Link IE are trademarks or registered trademarks of Mitsubishi Electric Corporation in Japan and other countries.

Microsoft, Windows, Windows Vista, Windows NT, Windows Server, SQL Server, Visual C++, Visual C#, Visual Basic, Excel, and Access are trademarks or registered trademarks of Microsoft Corporation in the United States and other countries.

Ethernet is a registered trademark of Xerox Corporation in the United States.

MODBUS is a trademark of Schneider Electric SA.

DeviceNet is a trademark of ODVA (Open DeviceNet Vendor Association, Inc.).

VNC is a registered trademark of RealVNC Ltd. in the United States and other countries.

Unicode is a trademark or registered trademark of Unicode, Inc. in the United States and other countries.

PictBridge is a registered trademark of Canon Inc.

Adobe and Adobe Reader are registered trademarks of Adobe Systems Incorporated.

Oracle and JavaScript are registered trademarks of Oracle Corporation and/or its affiliates in the United States and other countries.

QR Code is a trademark or registered trademark of DENSO WAVE INCORPORATED in Japan, the United States, and/or other countries.

Anybus is a registered trademark of HMS Industrial Networks AB.

Android and Google Chrome are trademarks or registered trademarks of Google Inc.

IOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.

Safari and iPhone are trademarks of Apple Inc. registered in the United States and other countries. The iPhone trademark is used under license from AIPHONE CO., LTD.

Intel and Intel Core are trademarks or registered trademarks of Intel Corporation in the United States and other countries.

Other company and product names herein are trademarks or registered trademarks of their respective owners.

GOT2000 Series Connection Manual (Non-Mitsubishi Products 1)

For GT Works3 Version1

MODEL	GOT2000-CON2-SW1-E
MODEL CODE	
SH(NA)-081198ENG-K(1605)MEE	

When exported from Japan, this manual does not require application to the Ministry of Economy, Trade and Industry for service transaction permission.

MITSUBISHI ELECTRIC CORPORATION